



# Model number


### VAA-4EA-KF2-ZE/E2


Cabinet module 4 inputs (PNP) and 4 electronic outputs

### **Features**


- Housing with removable, coded terminals
- AS-Interface connection via Power Rail
- · Communication monitoring, turn-off
- Outputs loadable up to 8 A (per module)
- Inputs for 2- and 3-wire sensors
- Addressing jack
- Power supply of outputs from the external auxiliary voltage
- Power supply of inputs from the module
- Function display for bus, ext. auxiliary voltage, inputs and outputs

## **Dimensions**

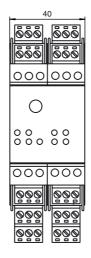

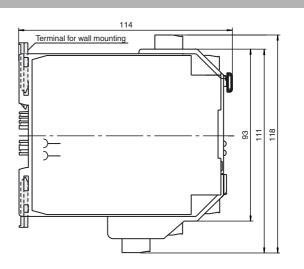

# **Electrical connection**

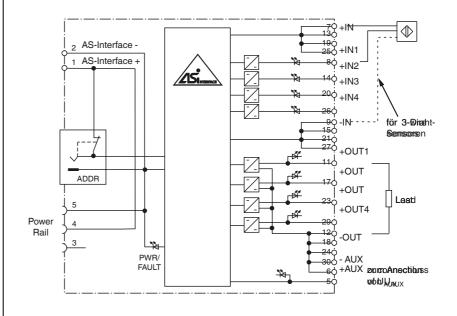

# **Indicating / Operating means**

1 7	2 8	3 9	4 10	5 11	6 12	
ADDR						
IN1	I IN2		OUT1	OUT2		
IN3 IN4 PWR/ FAULT		OUT3 OUT4 AUX				
13 19 25	14 20 26	15 21 27	16 22 28	17 23 28	18 24 29	

Technical data			
General specifications			
Slave type	Standard slave		
AS-Interface specification	V2.0		
Required master specification	≥ V2.0		
UL File Number	E106378		
Indicators/operating means			
LED PWR/FAULT	dual LED green/red green: AS-Interface voltage red: communication error or address green/red flashing: overload sensor s	upply	
LED AUX	ext. auxiliary voltage U <sub>AUX</sub> ; LED gree	n	
LED IN	switching state (input); 4 LED yellow		
LED OUT	Switching state (output); 4 LED yellow	I	
Electrical specifications			
1.5.1	20 30 V DC PELV		
Rated operating voltage U <sub>e</sub>	26.5 31.6 V from AS-Interface		
Rated operating current I <sub>e</sub>	≤ 50 mA (without sensors) / max. 200 mA		
Protection class	III		
Input			
Number/Type	4 inputs for 2- or 3-wire sensors (PNP), DC		
Supply	from AS-Interface		
Voltage	21 31 V DC		
Current loading capacity	≤ 150 mA, short-circuit protected		
Switching point			
0 (unattenuated)	≤ 2 mA		
1 (attenuated)	≥ 4 mA		
Output			
Number/Type	4 electronic outputs, PNP		
Supply	from external auxiliary voltage U <sub>AUX</sub>		
Voltage	≥ (U <sub>AUX</sub> - 0.5 V)		
Current	2 A per output , 8 A per module		
Programming instructions			
Profile	S-7.F		
IO code	7		
ID code	F		
Data bits (function via AS-Interface)	input	output	
D0	IN1	OUT1	
D1	IN2	OUT2	
D2	IN3	OUT3	
D3	IN4	OUT4	
Parameter bits (programmable via AS-i)	function		
P0	communication monitoring P0 = 1 (default settings), monitoring = ON, i.e. if communication fails, the outputs are de-energised P0 = 0, monitoring = OFF, if communication fails, the outputs maintain their condition		
P1	not used		
P2	not used		
P3	not used		
Ambient conditions			
Ambient temperature	-25 70 °C (-13 158 °F)		
Storage temperature	-25 85 °C (-13 185 °F)		
Mechanical specifications			
Degree of protection	IP20		
Connection	removable coded terminals, Power Rail		
Mass	170 g		
Mounting	DIN mounting rail		
Compliance with standards and directives	•		
Directive conformity Standard conformity	observe notices on the certificate of c	onformity.	

## **Function**

The VAA-4EA-KF2-ZE/E2 AS-Interface coupling module is a cabinet module with 4 inputs and 4 electronic outputs. The VAA-4EA-KF2-ZE/E2 is installed by snapping it onto the 35 mm DIN Rail per EN 50022, with the integrated Power Rail.

When an AS-Interface master/gateway is used in the cabinet housing, the AS-Interface signal is automatically transmitted via the Power Rail. The connection of the module to the AS-Interface cable is accomplished by simply snapping it onto the DIN Rail.

The plug-in coded terminals of the inputs and outputs allow "online" maintenance, i. e. while the system is under power. The terminals are coded to prevent incorrect connections.

If a master/gateway other than the one in the cabinet housing is used, the connection to the AS-Interface cable is established via the same terminals. Once the AS-Interface cable has been connected to the terminals, the AS-Interface signal is automatically transferred to the Power Rail.

Power to the module and to the inputs is supplied by the AS-Interface cable and the outputs are powered externally (see connection diagram). A programming jack is available for address configuration.

The outputs are de-energised by means of an integrated watchdog, whenever communication on the AS-Interface cable is interrupted for more than 80 ms. The watchdog can be disabled by the parameter bit P0.

If a short circuit occurs in the sensor supply, the AS-Interface master will indicate an error and the module will disconnect from the AS-Interface

### **Accessories**

### VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

### **VBP-HH1-V3.0**

AS-Interface Handheld

# VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

Universal Power Rail with end caps and cover, 5 conductors, length: 2 m

**PEPPERL+FUCHS** 

Noise immunity **Emitted interference** 

Degree of protection

AS-Interface

Input

EN 61000-6-2:2001

EN 61000-6-4:2001

FN 50295:1999

EN 61131-2

FN 60529