



EMERSON[™]
Industrial Automation



User Guide

Unidrive M400

Model size 1 to 4

Variable Speed AC drive for induction motors

Part Number: 0478-0044-02

Issue: 2



www.controltechniques.com

Original Instructions

For the purposes of compliance with the EU Machinery Directive 2006/42/EC

General information

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation or adjustment of the optional operating parameters of the equipment or from mismatching the variable speed drive with the motor.

The contents of this guide are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous development and improvement, the manufacturer reserves the right to change the specification of the product or its performance, or the contents of the guide, without notice.

All rights reserved. No parts of this guide may be reproduced or transmitted in any form or by any means, electrical or mechanical including photocopying, recording or by an information storage or retrieval system, without permission in writing from the publisher.

Drive firmware version

This product is supplied with the latest firmware version. If this drive is to be connected to an existing system or machine, all drive firmware versions should be verified to confirm the same functionality as drives of the same model already present. This may also apply to drives returned from a Control Techniques Service Centre or Repair Centre. If there is any doubt please contact the supplier of the product.

The firmware version of the drive can be checked by looking at Pr **11.029**.

Environmental statement

Control Techniques is committed to minimising the environmental impacts of its manufacturing operations and of its products throughout their life cycle. To this end, we operate an Environmental Management System (EMS) which is certified to the International Standard ISO 14001. Further information on the EMS, our Environmental Policy and other relevant information is available on request, or can be found at www.greendrives.com.

The electronic variable-speed drives manufactured by Control Techniques have the potential to save energy and (through increased machine/process efficiency) reduce raw material consumption and scrap throughout their long working lifetime. In typical applications, these positive environmental effects far outweigh the negative impacts of product manufacture and end-of-life disposal.

Nevertheless, when the products eventually reach the end of their useful life, they must not be discarded but should instead be recycled by a specialist recycler of electronic equipment. Recyclers will find the products easy to dismantle into their major component parts for efficient recycling. Many parts snap together and can be separated without the use of tools, while other parts are secured with conventional fasteners. Virtually all parts of the product are suitable for recycling.

Product packaging is of good quality and can be re-used. Large products are packed in wooden crates, while smaller products come in strong cardboard cartons which themselves have a high recycled fibre content. If not re-used, these containers can be recycled. Polythene, used on the protective film and bags for wrapping product, can be recycled in the same way. Control Techniques' packaging strategy prefers easily-recyclable materials of low environmental impact, and regular reviews identify opportunities for improvement.

When preparing to recycle or dispose of any product or packaging, please observe local legislation and best practice.

REACH legislation

EC Regulation 1907/2006 on the Registration, Evaluation, Authorisation and restriction of Chemicals (REACH) requires the supplier of an article to inform the recipient if it contains more than a specified proportion of any substance which is considered by the European Chemicals Agency (ECHA) to be a Substance of Very High Concern (SVHC) and is therefore listed by them as a candidate for compulsory authorisation.

For current information on how this requirement applies in relation to specific Control Techniques products, please approach your usual contact in the first instance. Control Techniques position statement can be viewed at: <http://www.controltechniques.com/REACH>

Copyright © July 2013 Control Techniques Ltd

Issue Number: 2

Drive Firmware: 01.02.00.04 onwards

For patent and intellectual property related information please go to: www.ctpatents.info

How to use this guide

This user guide provides complete information for installing and operating the drive from start to finish.

The information is in logical order, taking the reader from receiving the drive through to fine tuning the performance.

NOTE

There are specific safety warnings throughout this guide, located in the relevant sections. In addition, Chapter 1 *Safety information* contains general safety information. It is essential that the warnings are observed and the information considered when working with or designing a system using the drive.

This map of the user guide helps to find the right sections for the task you wish to complete, but for specific information, refer to *Contents* on page 4:

	Quick Start / bench testing	Familiarisation	System design	Programming and commissioning	Troubleshooting
1 Safety information	●	●	●	●	●
2 Product information		●	●		
3 Mechanical installation			●		
4 Electrical installation			●		
5 Getting started		●	●		
6 Basic parameters		●	●	●	
7 Running the motor	●	●	●	●	
8 Optimization			●	●	
9 NV media card operation			●	●	
10 Advanced parameters			●	●	
11 Technical data		●	●	●	
12 Diagnostics					●
13 UL listing information			●	●	

Contents

1	Safety information	7	5	Getting started	59
1.1	Warnings, Cautions and Notes	7	5.1	Understanding the display	59
1.2	Electrical safety - general warning	7	5.2	Keypad operation	60
1.3	System design and safety of personnel	7	5.3	Menu structure	62
1.4	Environmental limits	7	5.4	Advanced menus	63
1.5	Access	7	5.5	Changing the operating mode	64
1.6	Fire protection	7	5.6	Saving parameters	64
1.7	Compliance with regulations	7	5.7	Restoring parameter defaults	64
1.8	Motor	7	5.8	Parameter access level and security	64
1.9	Mechanical brake control	7	5.9	Displaying parameters with non-default values only	65
1.10	Adjusting parameters	7	5.10	Displaying destination parameters only	65
1.11	Electrical installation	8	5.11	Communications	65
1.12	Hazard	8			
2	Product information	9	6	Basic parameters	66
2.1	Model number	9	6.1	Menu 0: Basic parameters	66
2.2	Ratings	10	6.2	Parameter descriptions	70
2.3	Operating modes	13			
2.4	Drive features	14	7	Running the motor	71
2.5	Nameplate description	15	7.1	Quick start connections	71
2.6	Options	15	7.2	Changing the operating mode	71
2.7	Items supplied with the drive	16	7.3	Quick start commissioning / start-up	73
3	Mechanical installation	17	8	Optimization	75
3.1	Safety information	17	8.1	Motor map parameters	75
3.2	Planning the installation	17	8.2	Maximum motor rated current	81
3.3	Terminal cover removal	18	8.3	Current limits	81
3.4	Installing / removing options and keypad	20	8.4	Motor thermal protection	81
3.5	Dimensions and mounting methods	23	8.5	Switching frequency	81
3.6	Enclosure for standard drives	25			
3.7	Enclosure design and drive ambient temperature	27	9	NV Media Card Operation	83
3.8	Heatsink fan operation	27	9.1	Introduction	83
3.9	External EMC filter	28	9.2	SD card support	83
3.10	Electrical terminals	30	9.3	NV Media Card parameters	85
3.11	Routine maintenance	31	9.4	NV Media Card trips	85
4	Electrical installation	32	10	Onboard PLC	86
4.1	Power connections	32	10.1	Onboard PLC and Machine Control Studio	86
4.2	AC supply requirements	35	10.2	Benefits	86
4.3	Ratings	35	10.3	Features	86
4.4	Output circuit and motor protection	38	10.4	Onboard PLC parameters	87
4.5	Braking	41	10.5	Onboard PLC trips	87
4.6	Ground leakage	42			
4.7	EMC (Electromagnetic compatibility)	43			
4.8	Communications connections	50			
4.9	Mounting the AI-485 adaptor	50			
4.10	Control connections	51			
4.11	SAFE TORQUE OFF (STO)	57			

11	Advanced parameters	88
11.1	Menu 1: Frequency reference	98
11.2	Menu 2: Ramps	102
11.3	Menu 3: Frequency control	106
11.4	Menu 4: Torque and current control	111
11.5	Menu 5: Motor control	114
11.6	Menu 6: Sequencer and clock	120
11.7	Menu 7: Analog I/O	123
11.8	Menu 8: Digital I/O	126
11.9	Menu 9: Programmable logic, motorized pot, binary sum and timers	133
11.10	Menu 10: Status and trips	139
11.11	Menu 11: General drive set-up	141
11.12	Menu 12: Threshold detectors, variable selectors and brake control function	143
11.13	Menu 14: User PID controller	148
11.14	Menu 15: Option module set-up	151
11.15	Menu 18: Application menu 1	152
11.16	Menu 20: Application menu 2	154
11.17	Menu 21: Second motor parameters	155
11.18	Menu 22: Additional Menu 0 set-up	157
12	Technical data	159
12.1	Drive technical data	159
12.2	Optional external EMC filters	170
13	Diagnostics	172
13.1	Status modes (Keypad and LED status)	172
13.2	Trip indications	172
13.3	Identifying a trip / trip source	172
13.4	Trips, Sub-trip numbers	174
13.5	Internal / Hardware trips	191
13.6	Alarm indications	191
13.7	Status indications	192
13.8	Displaying the trip history	192
13.9	Behaviour of the drive when tripped	192
14	UL listing information	193

Declaration of Conformity

Control Techniques Ltd
The Gro
Newtown
Powys
UK
SY16 3BE

This declaration applies to Unidrive M variable speed drive products, comprising models numbers as shown below:

Maaa-bbcdddd Valid characters:	
<i>aaa</i>	400
<i>bb</i>	02, 03
<i>c</i>	1, 2 or 4
<i>dddd</i>	00013, 00018, 00023, 00024, 00032, 00033, 00041, 00042, 00056, 00075 00056, 00073, 00094, 00100

The AC variable speed drive products listed above have been designed and manufactured in accordance with the following European harmonized standards:

EN 61800-5-1:2007	Adjustable speed electrical power drive systems - safety requirements - electrical, thermal and energy
EN 61800-3:2004	Adjustable speed electrical power drive systems. EMC product standard including specific test methods
EN 61000-6-2:2005	Electromagnetic compatibility (EMC). Generic standards. Immunity standard for industrial environments
EN 61000-6-4:2007	Electromagnetic compatibility (EMC). Generic standards. Emission standard for industrial environments
EN 61000-3-2:2006	Electromagnetic compatibility (EMC), Limits, Limits for harmonic current emissions (equipment input current <16 A per phase)
EN 61000-3-3:2008	Electromagnetic compatibility (EMC), Limits, Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current <16 A

EN 61000-3-2:2006 Applicable where input current <16 A. No limits apply for professional equipment where input power >1 kW.

These products comply with the Low Voltage Directive 2006/95/EC and the Electromagnetic Compatibility Directive 2004/108/EC.



T. Alexander
Vice President, Technology
Newtown

Date: 29th April 2013

These electronic drive products are intended to be used with appropriate motors, controllers, electrical protection components and other equipment to form complete end products or systems. Compliance with safety and EMC regulations depends upon installing and configuring drives correctly, including using the specified input filters. The drives must be installed only by professional assemblers who are familiar with requirements for safety and EMC. The assembler is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used. Refer to the User Guide. An EMC Data Sheet is also available giving detailed EMC information.

1 Safety information

1.1 Warnings, Cautions and Notes



A Warning contains information which is essential for avoiding a safety hazard.



A Caution contains information which is necessary for avoiding a risk of damage to the product or other equipment.

NOTE

A Note contains information which helps to ensure correct operation of the product.

1.2 Electrical safety - general warning

The voltages used in the drive can cause severe electrical shock and/or burns, and could be lethal. Extreme care is necessary at all times when working with or adjacent to the drive.

Specific warnings are given at the relevant places in this User Guide.

1.3 System design and safety of personnel

The drive is intended as a component for professional incorporation into complete equipment or a system. If installed incorrectly, the drive may present a safety hazard.

The drive uses high voltages and currents, carries a high level of stored electrical energy, and is used to control equipment which can cause injury.

Close attention is required to the electrical installation and the system design to avoid hazards either in normal operation or in the event of equipment malfunction. System design, installation, commissioning/start-up and maintenance must be carried out by personnel who have the necessary training and experience. They must read this safety information and this User Guide carefully.

The STOP and SAFE TORQUE OFF functions of the drive do not isolate dangerous voltages from the output of the drive or from any external option unit. The supply must be disconnected by an approved electrical isolation device before gaining access to the electrical connections.

With the sole exception of the SAFE TORQUE OFF function, none of the drive functions must be used to ensure safety of personnel, i.e. they must not be used for safety-related functions.

Careful consideration must be given to the functions of the drive which might result in a hazard, either through their intended behavior or through incorrect operation due to a fault. In any application where a malfunction of the drive or its control system could lead to or allow damage, loss or injury, a risk analysis must be carried out, and where necessary, further measures taken to reduce the risk - for example, an over-speed protection device in case of failure of the speed control, or a fail-safe mechanical brake in case of loss of motor braking.

The SAFE TORQUE OFF function may be used in a safety-related application. The system designer is responsible for ensuring that the complete system is safe and designed correctly according to the relevant safety standards.

1.4 Environmental limits

Instructions in this User Guide regarding transport, storage, installation and use of the drive must be complied with, including the specified environmental limits. Drives must not be subjected to excessive physical force.

1.5 Access

Drive access must be restricted to authorized personnel only. Safety regulations which apply at the place of use must be complied with.

1.6 Fire protection

The drive enclosure is not classified as a fire enclosure. A separate fire enclosure must be provided. For further information, refer to section 3.2.5 *Fire protection* on page 17.

1.7 Compliance with regulations

The installer is responsible for complying with all relevant regulations, such as national wiring regulations, accident prevention regulations and electromagnetic compatibility (EMC) regulations. Particular attention must be given to the cross-sectional areas of conductors, the selection of fuses or other protection, and protective ground (earth) connections.

This User Guide contains instruction for achieving compliance with specific EMC standards.

Within the European Union, all machinery in which this product is used must comply with the following directives:

- 2006/42/EC Safety of machinery.
- 2004/108/EC: Electromagnetic Compatibility.

1.8 Motor

Ensure the motor is installed in accordance with the manufacturer's recommendations. Ensure the motor shaft is not exposed.

Standard squirrel cage induction motors are designed for single speed operation. If it is intended to use the capability of the drive to run a motor at speeds above its designed maximum, it is strongly recommended that the manufacturer is consulted first.

Low speeds may cause the motor to overheat because the cooling fan becomes less effective. The motor should be installed with a protection thermistor. If necessary, an electric forced vent fan should be used.

The values of the motor parameters set in the drive affect the protection of the motor. The default values in the drive should not be relied upon.

It is essential that the correct value is entered in Pr **00.006** motor rated current. This affects the thermal protection of the motor.

1.9 Mechanical brake control

The brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.

1.10 Adjusting parameters

Some parameters have a profound effect on the operation of the drive. They must not be altered without careful consideration of the impact on the controlled system. Measures must be taken to prevent unwanted changes due to error or tampering.

1.11 Electrical installation

1.11.1 Electric shock risk

The voltages present in the following locations can cause severe electric shock and may be lethal:

AC supply cables and connections

Output cables and connections

Many internal parts of the drive, and external option units

Unless otherwise indicated, control terminals are single insulated and must not be touched.

1.11.2 Stored charge

The drive contains capacitors that remain charged to a potentially lethal voltage after the AC supply has been disconnected. If the drive has been energized, the AC supply must be isolated at least ten minutes before work may continue.

1.12 Hazard

1.12.1 Falling hazard

The drive presents a falling or toppling hazard. This can still cause injury to personnel and therefore should be handled with care.

Maximum weight:


Size 2: 1.3 kg (3lb).

2 Product information

2.1 Model number


The way in which the model numbers for the Unidrive M range are formed is illustrated below:

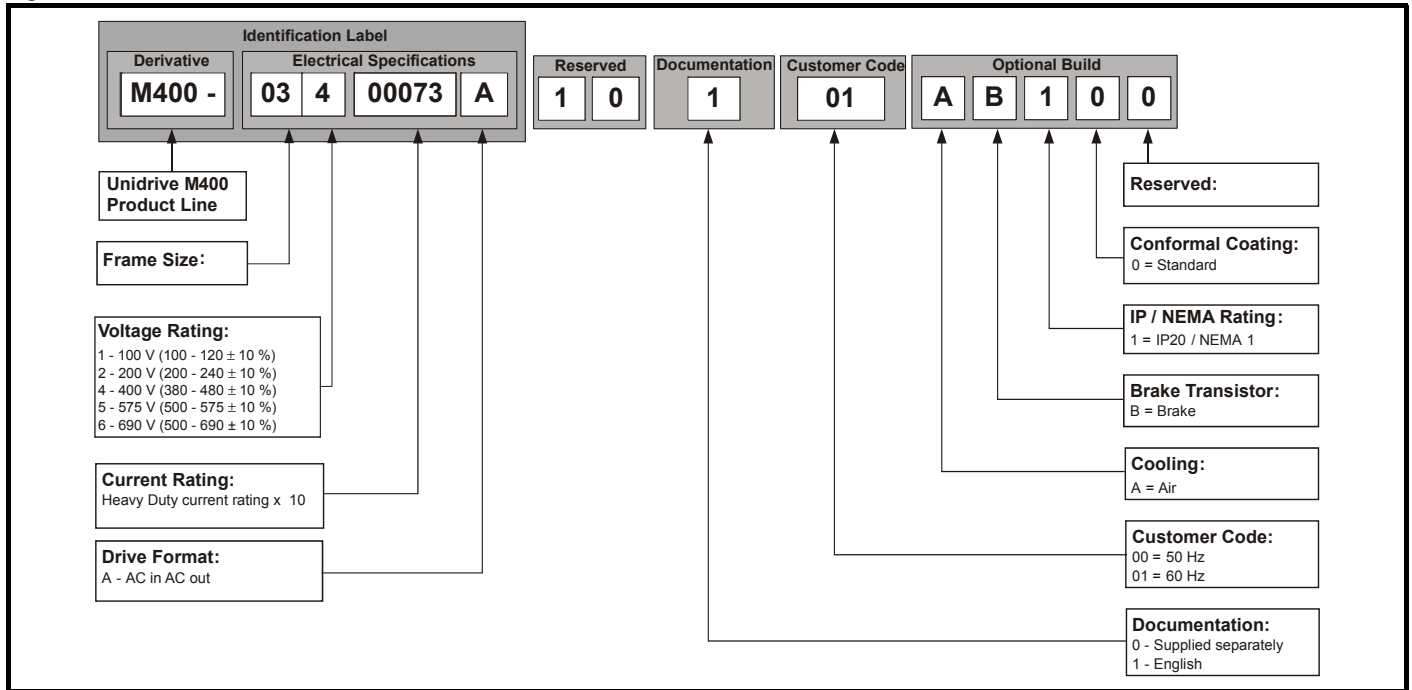Figure 2-1 Model number



2.2 Ratings

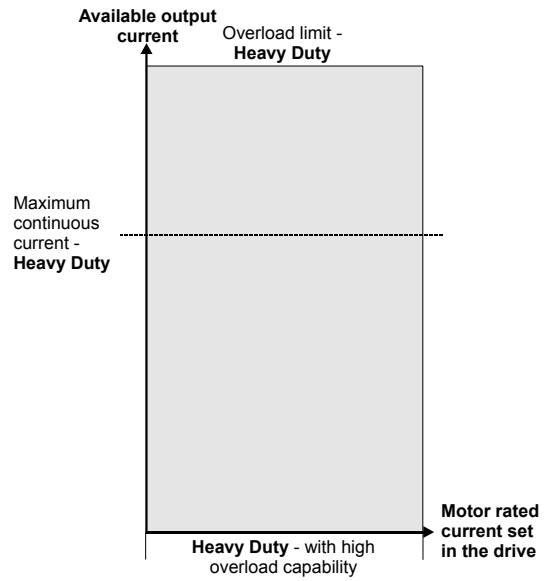The drive is single rated.
 The rating is compatible with motors designed to IEC60034.
 The graph on the right illustrates Heavy Duty with respect to continuous current rating and short term overload limits.



Heavy Duty

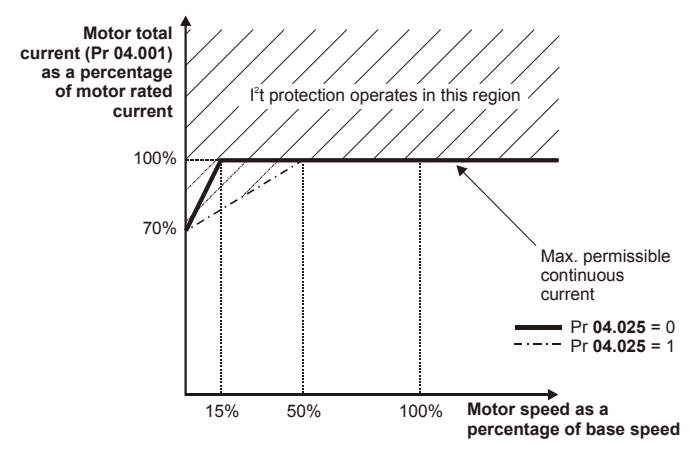
For constant torque applications or applications which require a high overload capability, or full torque is required at low speeds (e.g. winders, hoists).
 The thermal protection is set to protect force ventilated induction motors by default.

NOTE
 If the application uses a self ventilated (TENV/TEFC) induction motor and increased thermal protection is required for speeds below 50 % base speed, then this can be enabled by setting *Low Speed Thermal Protection Mode* (04.025) = 1.

Operation of motor I^2t protection


Motor I^2t protection is fixed as shown below and is compatible with:

- Self ventilated (TENV/TEFC) induction motors



Motor I^2t protection defaults to be compatible with:

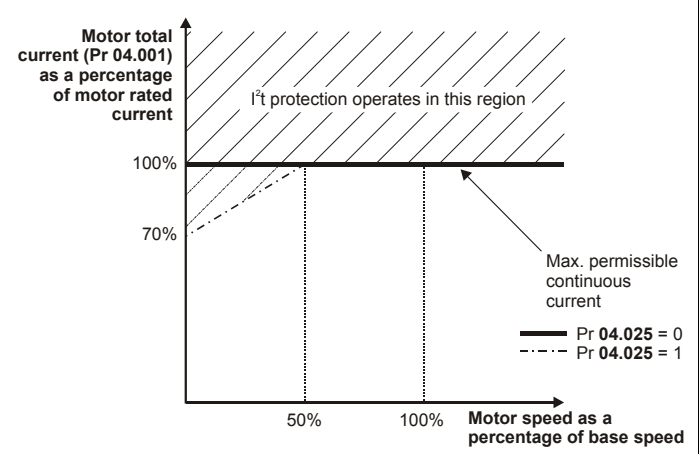- Forced ventilation induction motors



The continuous current ratings given are for maximum 40 °C (104 °F), 1000 m altitude and 3.0 kHz switching. Derating is required for higher switching frequencies, ambient temperature >40 °C (104 °F) and high altitude. For further information, refer to Chapter 12 *Technical data* on page 159.

Table 2-1 100 V drive ratings (100 V to 120 V ±10 %)

Model		Heavy Duty				
		Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 100V	Motor power at 100V
		A	A	A	kW	hp
Frame size 1	01100017	1.7	2.6	3.1	0.25	0.33
	01100024	2.4	3.6	4.3	0.37	0.5
Frame size 2	02100042	4.2	6.3	7.6	0.75	1
	02100056	5.6	8.4	10.1	1.1	1.5

Table 2-2 200 V drive ratings (200 V to 240 V ±10 %)

Model		Heavy Duty				
		Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 230V	Motor power at 230V
		A	A	A	kW	hp
Frame size 1	01200017	1.7	2.6	3.1	0.25	0.33
	01200024	2.4	3.6	4.3	0.37	0.5
	01200033	3.3	5	5.9	0.55	0.75
	01200042	4.2	6.3	7.6	0.75	1
Frame size 2	02200024	2.4	3.6	4.3	0.37	0.5
	02200033	3.3	5	5.9	0.55	0.75
	02200042	4.2	6.3	7.6	0.75	1
	02200056	5.6	8.4	10.1	1.1	1.5
	02200075	7.5	11.3	13.5	1.5	2
Frame size 3	03200100	10.0	15	18.0	2.2	3
Frame size 4	04200133	13.3	20	23.9	3	3
	04200176	17.6	26.4	31.7	4	5

Table 2-3 400 V drive ratings (380 V to 480 V ±10 %)

Model		Heavy Duty				
		Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 400V	Motor power at 400V
		A	A	A	kW	hp
Frame size 2	02400013	1.3	2	2.3	0.37	0.5
	02400018	1.8	2.7	3.2	0.55	0.75
	02400023	2.3	3.5	4.1	0.75	1
	02400032	3.2	4.8	5.8	1.1	1.5
	02400041	4.1	6.2	7.4	1.5	2
Frame size 3	03400056	5.6	8.4	10.1	2.2	3
	03400073	7.3	11	13.1	3	3
	03400094	9.4	14.1	16.9	4	5
Frame size 4	04400135	13.5	20.3	24.3	5.5	7.5
	04400170	17.0	25.5	30.6	7.5	10

2.2.1 Typical short term overload limits

The maximum percentage overload limit changes depending on the selected motor. Variations in motor rated current, motor power factor and motor leakage inductance all result in changes in the maximum possible overload. The exact value for a specific motor can be calculated using the equations detailed in Menu 4 in the *Parameter Reference Guide*.

Typical values are shown in the table below for RFC-A and open loop (OL) modes:

Table 2-4 Typical overload limits

Operating mode	RFC From cold	RFC From 100 %	Open loop from cold	Open loop from 100 %
Heavy Duty overload with motor rated current = drive rated current	180 % for 3 s	180 % for 3 s	150 % for 60 s	150 % for 8 s

Generally the drive rated current is higher than the matching motor rated current allowing a higher level of overload than the default setting. The time allowed in the overload region is proportionally reduced at very low output frequency on some drive ratings.

NOTE

The maximum overload level which can be attained is independent of the speed.

2.3 Operating modes

The drive is designed to operate in any of the following modes:

1. Open loop mode
 - Open loop vector mode
 - Fixed V/F mode (V/Hz)
 - Square V/F mode (V/Hz)
2. RFC - A
 - Without position feedback sensor

2.3.1 Open loop mode

The drive applies power to the motor at frequencies varied by the user. The motor speed is a result of the output frequency of the drive and slip due to the mechanical load. The drive can improve the speed control of the motor by applying slip compensation. The performance at low speed depends on whether V/F mode or open loop vector mode is selected.

Open loop vector mode

The voltage applied to the motor is directly proportional to the frequency except at low speed where the drive uses motor parameters to apply the correct voltage to keep the flux constant under varying load conditions.

Typically 100 % torque is available down to 1 Hz for a 50 Hz motor.

Fixed V/F mode

The voltage applied to the motor is directly proportional to the frequency except at low speed where a voltage boost is provided which is set by the user. This mode can be used for multi-motor applications.

Typically 100 % torque is available down to 4 Hz for a 50 Hz motor.

Square V/F mode

The voltage applied to the motor is directly proportional to the square of the frequency except at low speed where a voltage boost is provided which is set by the user. This mode can be used for running fan or pump applications with quadratic load characteristics or for multi-motor applications. This mode is not suitable for applications requiring a high starting torque.

2.3.2 RFC-A mode


Rotor Flux Control for Asynchronous (induction) motors (RFC-A) encompasses closed loop vector control without a position feedback device

Without position feedback sensor

Rotor flux control provides closed loop control without the need for position feedback by using current, voltages and key motor parameters to estimate the motor speed. It can eliminate instability traditionally associated with open loop control for example when operating large motors with light loads at low frequencies.

2.4 Drive features

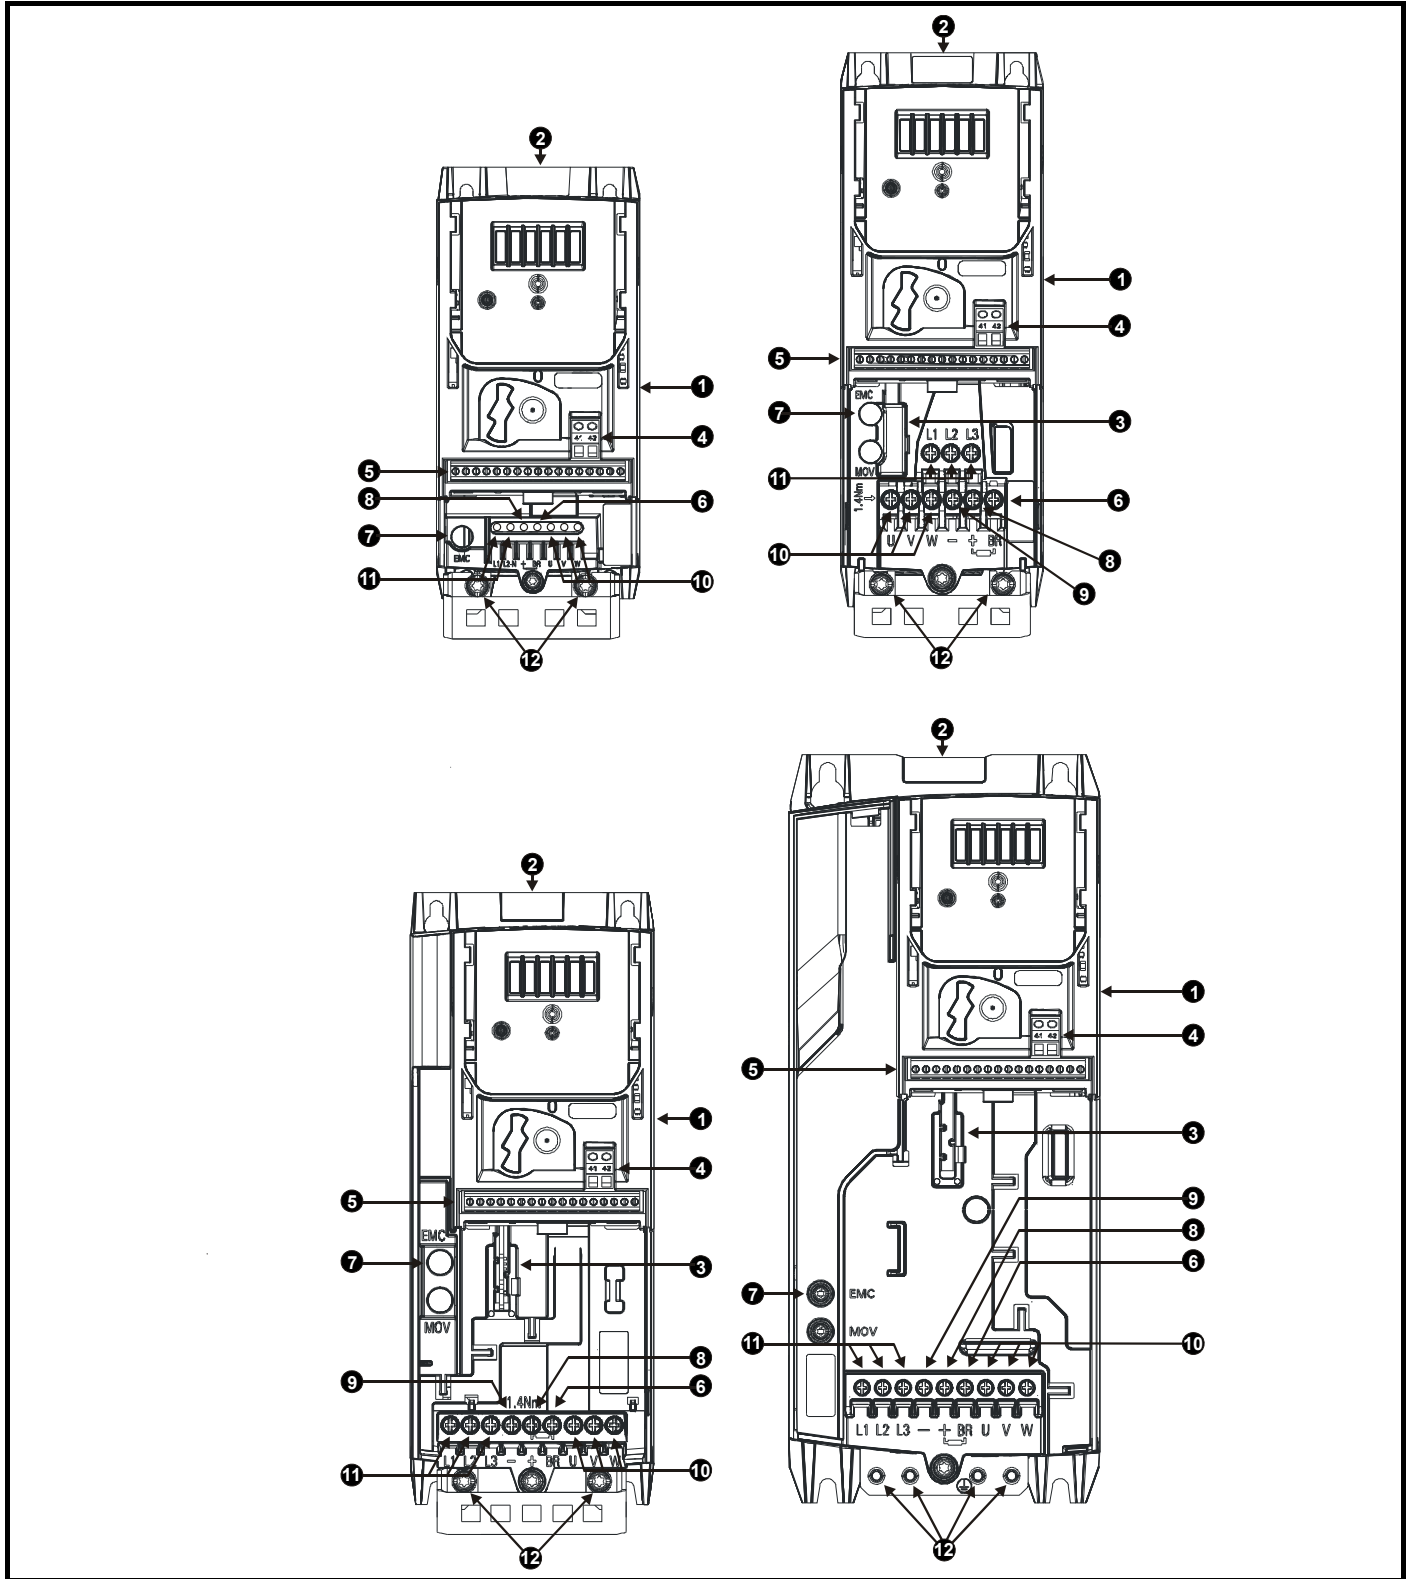Figure 2-2 Features of the drive




Key

- | | | |
|------------------------------------|------------------------------|---------------------------|
| 1. Rating label (On side of drive) | 5. Control connections | 9. DC bus - |
| 2. Identification label | 6. Braking terminal | 10. Motor connections |
| 3. Option module | 7. Internal EMC filter screw | 11. AC supply connections |
| 4. Relay connections | 8. DC bus + | 12. Ground connections |

2.5 Nameplate description

See Figure 2-2 for location of rating labels.

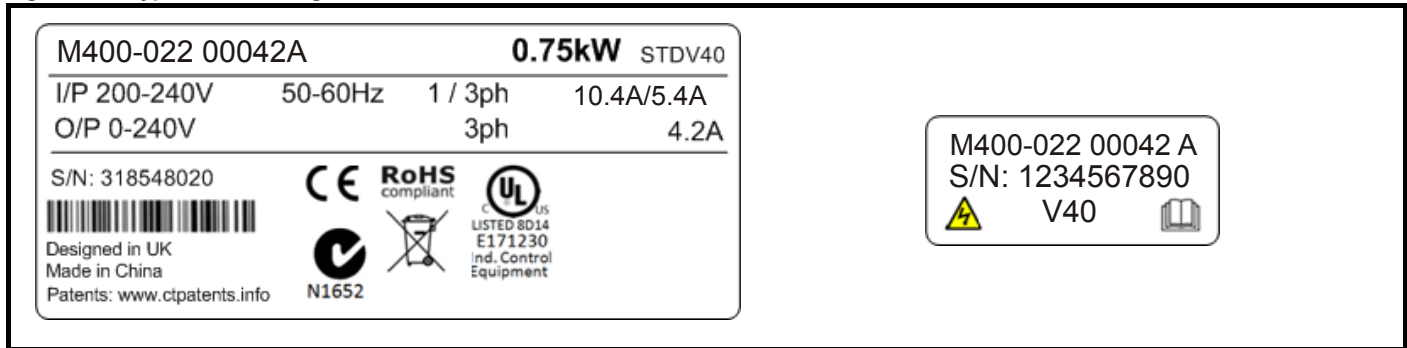
Figure 2-3 Typical drive rating labels size 2



Refer to Figure 2-1 *Model number* on page 9 for further information relating to the labels.

2.6 Options

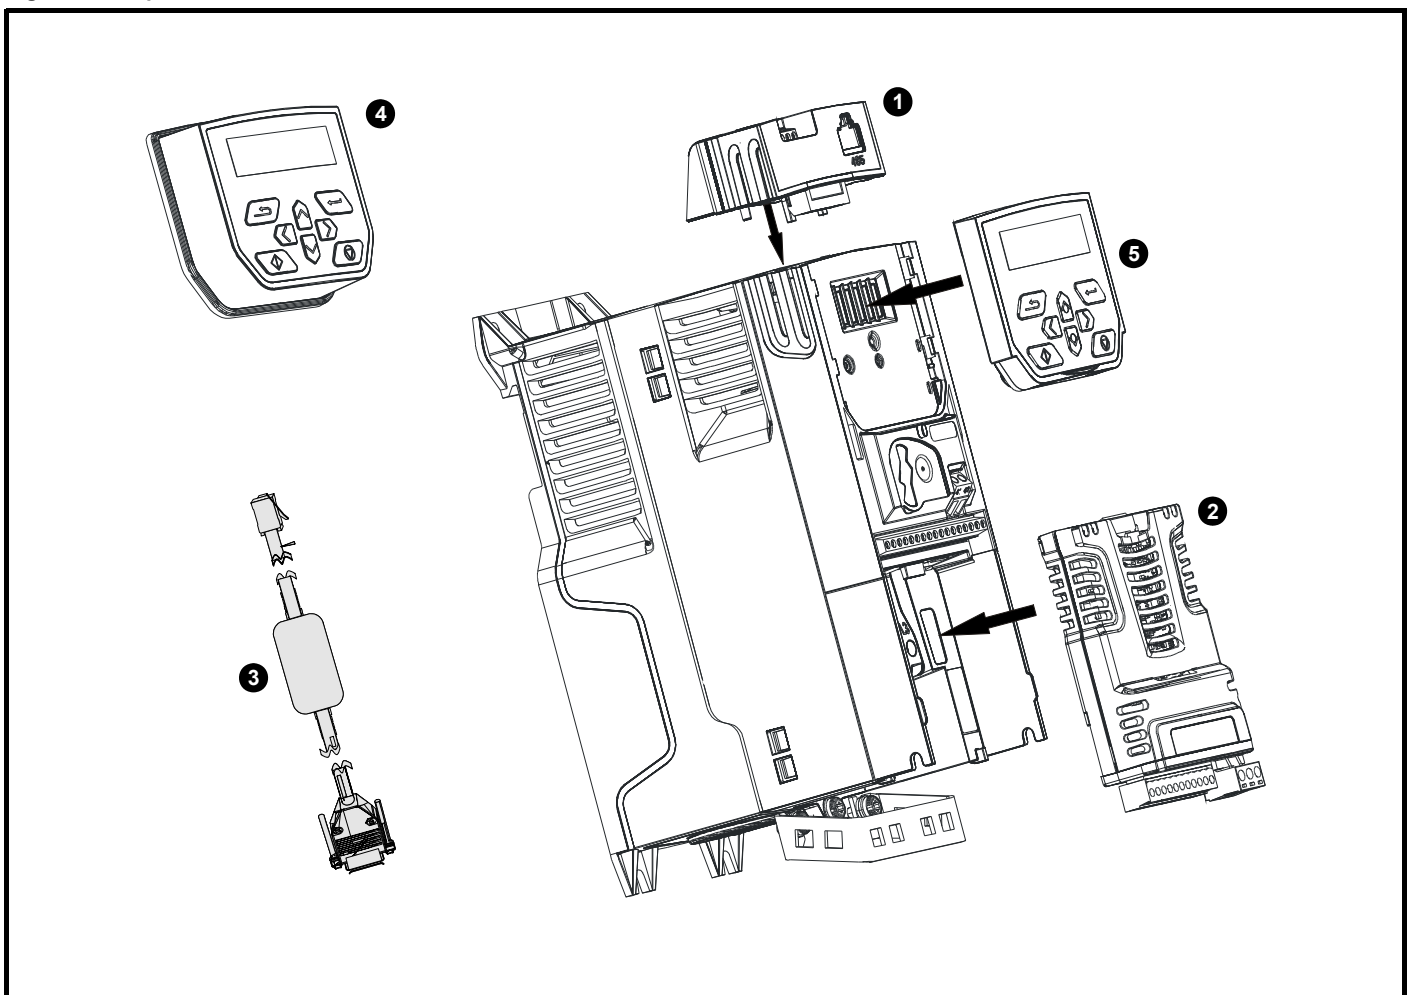Figure 2-4 Options available with the drive



1. Adaptor Interface (AI) Module
2. System Integration (SI) module
3. CT Comms cable
4. Remote mountable LCD keypad
5. Compact Interface (CI) keypad

Table 2-5 System Integration option module identification



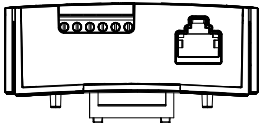
Type	option module	Color	Name	Further Details
Fieldbus		Purple	SI-PROFIBUS	Profibus option PROFIBUS adaptor for communications with the drive
		Grey	SI-DeviceNet	DeviceNet option DeviceNet adaptor for communications with the drive

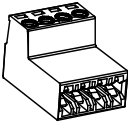


Table 2-6 Adaptor Interface (AI) option module identification

Type	option module	Name	Further Details
Communications		AI-485 adaptor	485 serial communications option Provides a 485 serial communications interface via an RJ45 connector or alternative screw terminals.

2.7 Items supplied with the drive

The drive is supplied with a copy of the *Quick Start Guide*, a safety information booklet, plus the items shown in Table 2-7.

Table 2-7 Parts supplied with the drive

Description	Size 1	Size 2	Size 3	Size 4
STO connector				
Grounding bracket				
M4 x 8 Double Sem Torx screw	 x2			

3 Mechanical installation

This chapter describes how to use all mechanical details to install the drive. The drive is intended to be installed in an enclosure. Key features of this chapter include:

- Enclosure sizing and layout
- Option module installing
- Terminal location and torque settings

3.1 Safety information



WARNING

Follow the instructions

The mechanical and electrical installation instructions must be adhered to. Any questions or doubt should be referred to the supplier of the equipment. It is the responsibility of the owner or user to ensure that the installation of the drive and any external option unit, and the way in which they are operated and maintained, comply with the requirements of the Health and Safety at Work Act in the United Kingdom or applicable legislation and regulations and codes of practice in the country in which the equipment is used.



WARNING

Competence of the installer

The drive must be installed by professional assemblers who are familiar with the requirements for safety and EMC. The assembler is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used.



WARNING

Enclosure

The drive is intended to be mounted in an enclosure which prevents access except by trained and authorized personnel, and which prevents the ingress of contamination. It is designed for use in an environment classified as pollution degree 2 in accordance with IEC 60664-1. This means that only dry, non-conducting contamination is acceptable.

3.2 Planning the installation

The following considerations must be made when planning the installation:

3.2.1 Access

Access must be restricted to authorized personnel only. Safety regulations which apply at the place of use must be complied with.

3.2.2 Environmental protection

The drive must be protected from:

- Moisture, including dripping water or spraying water and condensation. An anti-condensation heater may be required, which must be switched off when the drive is running.
- Contamination with electrically conductive material
- Contamination with any form of dust which may restrict the fan, or impair airflow over various components
- Temperature beyond the specified operating and storage ranges
- Corrosive gasses

NOTE

During installation it is recommended that the vents on the drive are covered to prevent debris (e.g. wire off-cuts) from entering the drive.

3.2.3 Cooling

The heat produced by the drive must be removed without its specified operating temperature being exceeded. Note that a sealed enclosure gives much reduced cooling compared with a ventilated one, and may need to be larger and/or use internal air circulating fans.

For further information, refer to section 3.6 *Enclosure for standard drives* on page 25.

3.2.4 Electrical safety

The installation must be safe under normal and fault conditions. Electrical installation instructions are given in Chapter 4 *Electrical installation* on page 32.

3.2.5 Fire protection

The drive enclosure is not classified as a fire enclosure. A separate fire enclosure must be provided.

For installation in the USA, a NEMA 12 enclosure is suitable.


For installation outside the USA, the following (based on IEC 62109-1, standard for PV inverters) is recommended.

Enclosure can be metal and/or polymeric, polymer must meet requirements which can be summarized for larger enclosures as using materials meeting at least UL 94 class 5VB at the point of minimum thickness.

Air filter assemblies to be at least class V-2.


The location and size of the bottom shall cover the area shown in Figure 3-1. Any part of the side which is within the area traced out by the 5° angle is also considered to be part of the bottom of the fire enclosure.

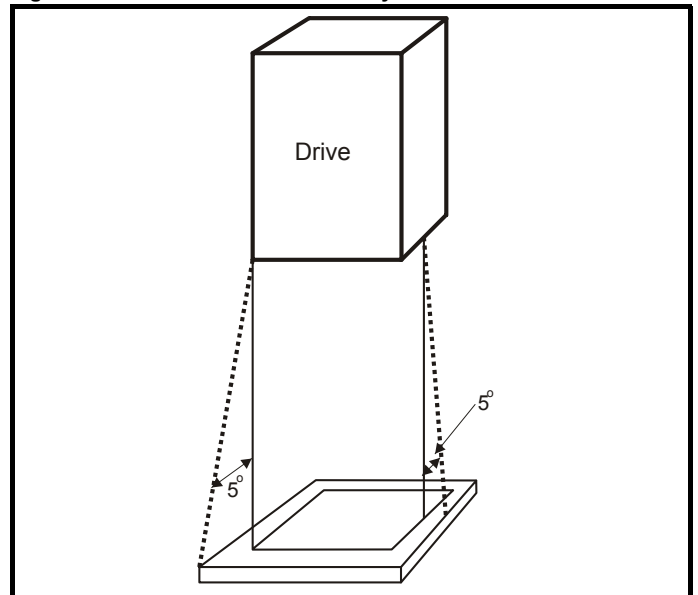Figure 3-1 Fire enclosure bottom layout



The bottom, including the part of the side considered to be part of the bottom, must be designed to prevent escape of burning material - either by having no openings or by having a baffle construction. This means that openings for cables etc. must be sealed with materials meeting the 5VB requirement, or else have a baffle above. See Figure 3-2 for acceptable baffle construction. This does not apply for mounting in an enclosed electrical operating area (restricted access) with concrete floor.

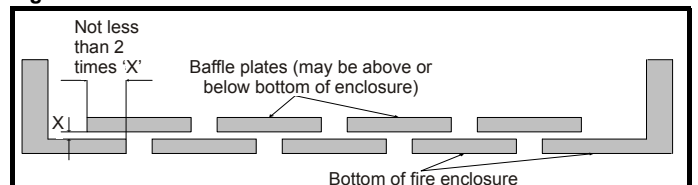Figure 3-2 Fire enclosure baffle construction



3.2.6 Electromagnetic compatibility

Variable speed drives are powerful electronic circuits which can cause electromagnetic interference if not installed correctly with careful attention to the layout of the wiring.

Some simple routine precautions can prevent disturbance to typical industrial control equipment.

If it is necessary to meet strict emission limits, or if it is known that electromagnetically sensitive equipment is located nearby, then full precautions must be observed. In-built into the drive, is an internal EMC filter, which reduces emissions under certain conditions. If these conditions are exceeded, then the use of an external EMC filter may be required at the drive inputs, which must be located very close to the drives. Space must be made available for the filters and allowance made for carefully segregated wiring. Both levels of precautions are covered in section 4.7 *EMC (Electromagnetic compatibility)* on page 43.

3.2.7 Hazardous areas

The drive must not be located in a classified hazardous area unless it is installed in an approved enclosure and the installation is certified.

3.3 Terminal cover removal



Isolation device

The AC and / or DC power supply must be disconnected from the drive using an approved isolation device before any cover is removed from the drive or before any servicing work is performed.




Stored charge

The drive contains capacitors that remain charged to a potentially lethal voltage after the AC and / or DC power supply has been disconnected. If the drive has been energized, the power supply must be isolated at least ten minutes before work may continue.

Normally, the capacitors are discharged by an internal resistor. Under certain, unusual fault conditions, it is possible that the capacitors may fail to discharge, or be prevented from being discharged by a voltage applied to the output terminals. If the drive has failed in a manner that causes the display to go blank immediately, it is possible the capacitors will not be discharged. In this case, consult Control Techniques or their authorized distributor.

3.3.1 Removing the terminal covers

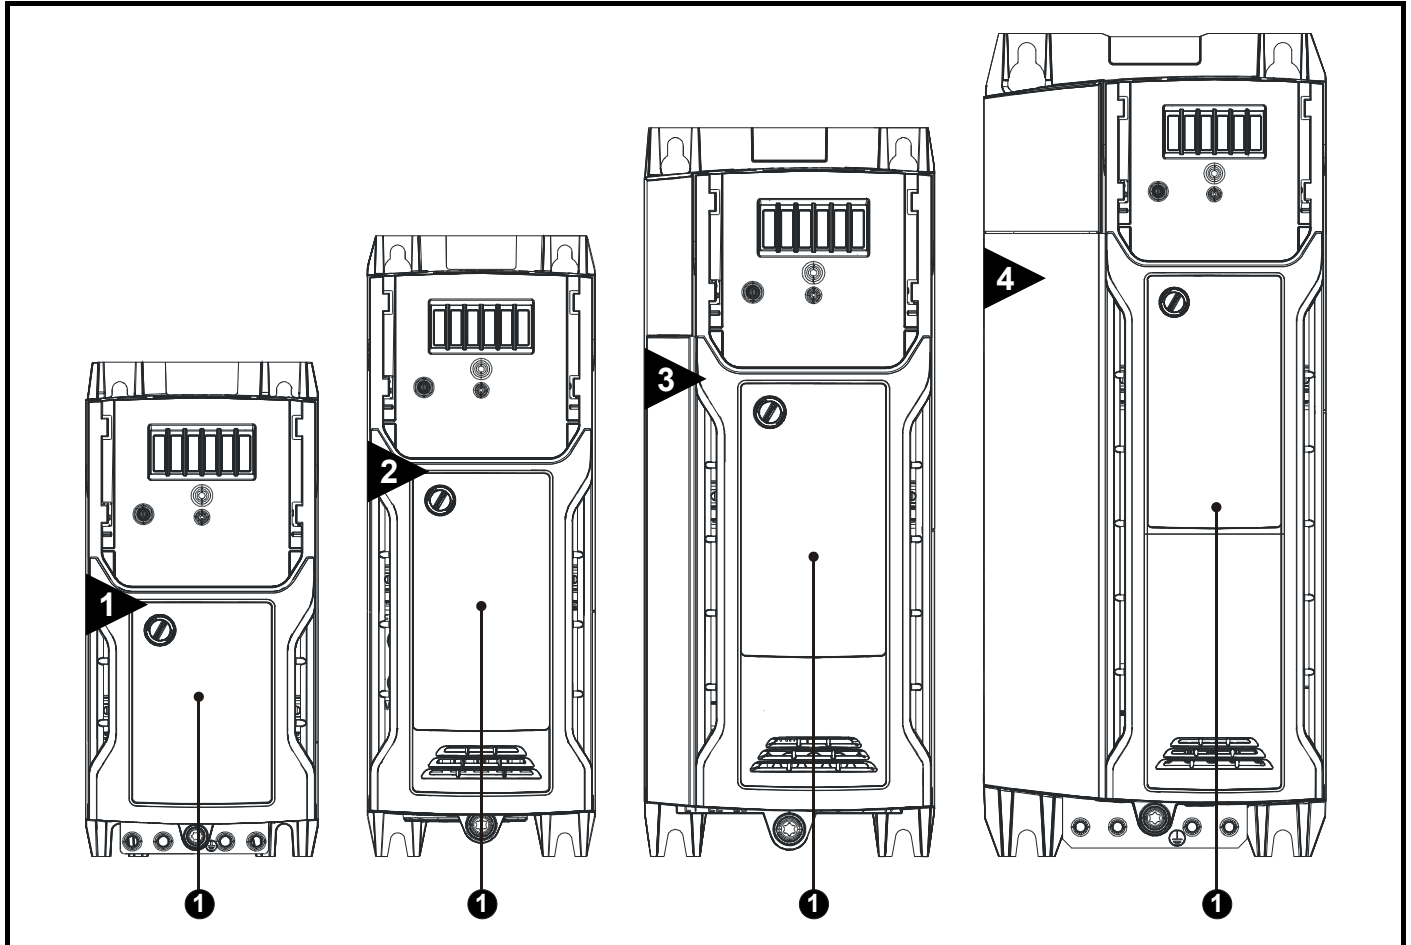Figure 3-3 Location and identification of terminal covers




1 Terminal cover

NOTE

The drives shown in Figure 3-3 on page 18 above, have a single removable terminal cover which provides access to all electrical connections, i.e. Control, AC, Motor and Brake functions. Figure 3-4 on page 19 illustrates the three steps required to remove the drive terminal covers.

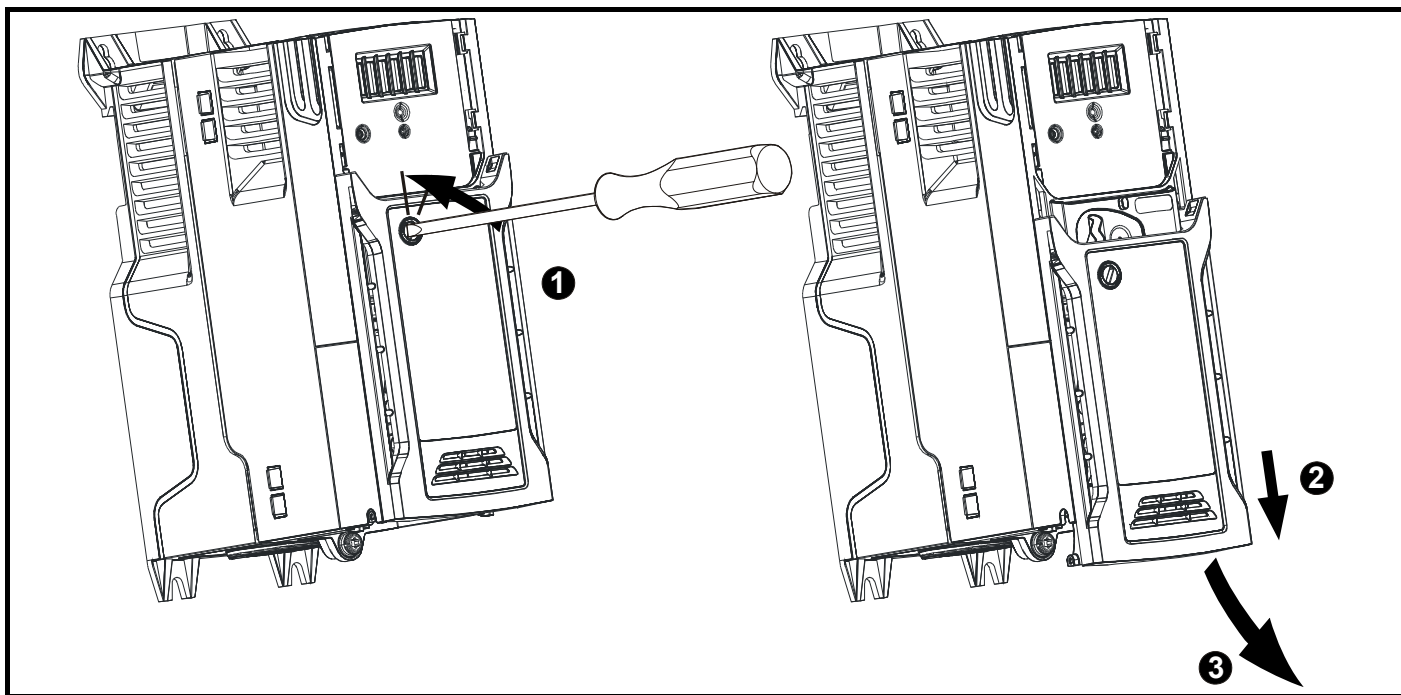Figure 3-4 Removing the terminal cover



1. Using a flat bladed screwdriver, turn the terminal cover locking clip anti-clockwise by approximately 30°
2. Slide the terminal cover down
3. Remove terminal cover


3.4 Installing / removing options and keypad



Power down the drive before installing / removing the SI option module. Failure to do so may result in damage to the product.

3.4.1 Installation / removal of an SI option module

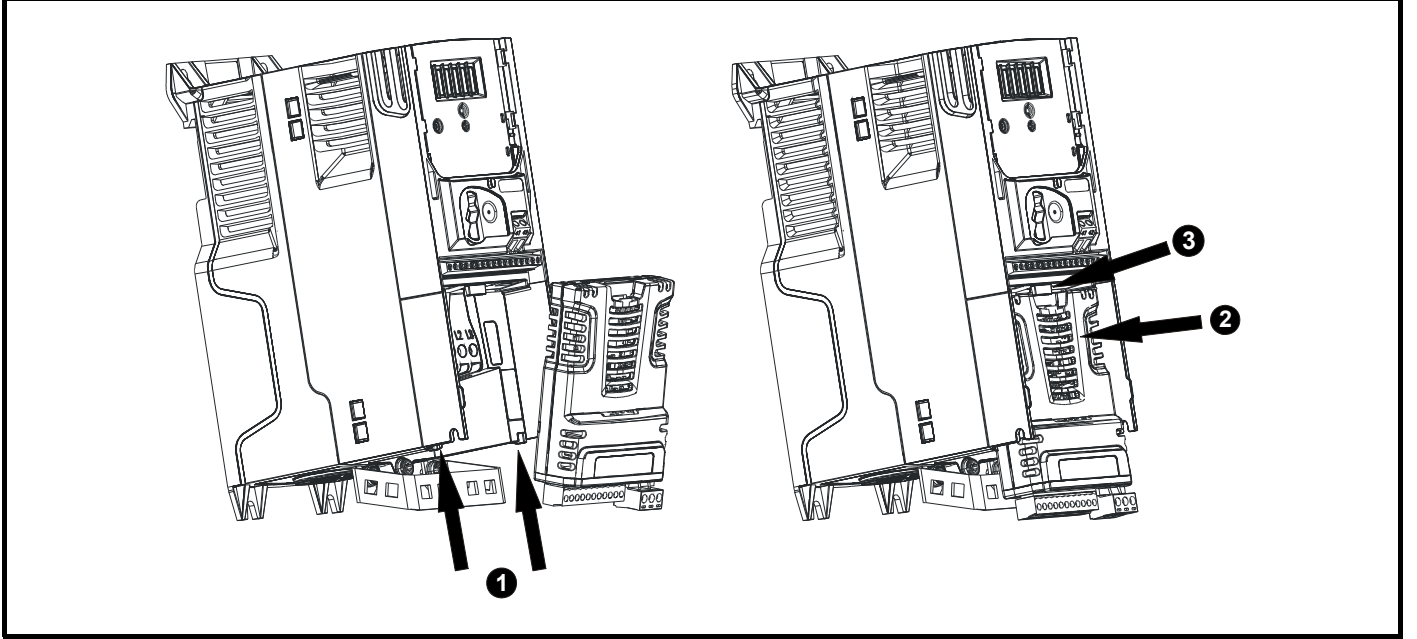Figure 3-5 Installation of an SI option module




Installing the option module

- With the option module tilted slightly backwards, align and locate the two holes in the rear of the option module onto the two tabs (1) on the drive.
- Press the option module onto the drive as shown in (2) until the connector mates with the drive, ensuring that the tab (3) retains the option module in place.

NOTE


Check that the option module is securely located on the drive. Always ensure that the Terminal Cover is always replaced before use as this ensures that the option module is firmly secured.

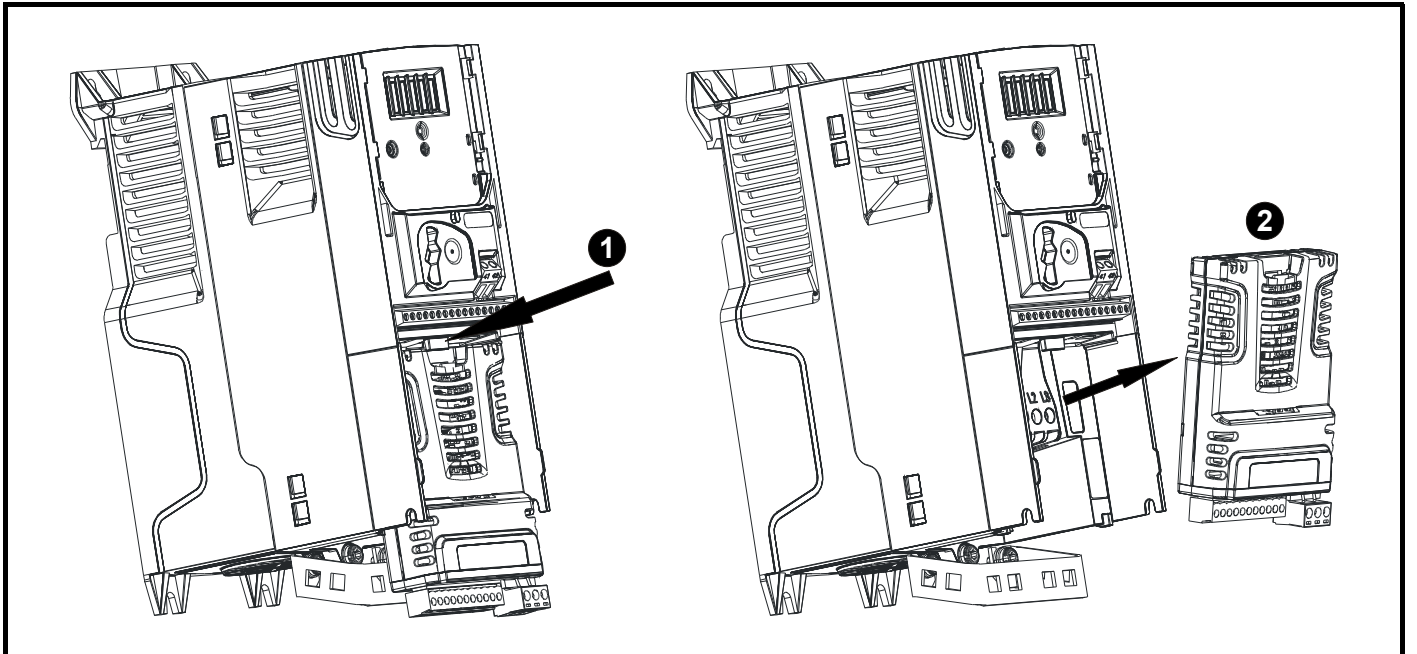Figure 3-6 Removal of an SI option module




- Press down on the tab (1) to release the option module from the drive housing as shown.
- Tilt the option module slightly towards you and pull away from the drive housing (2).

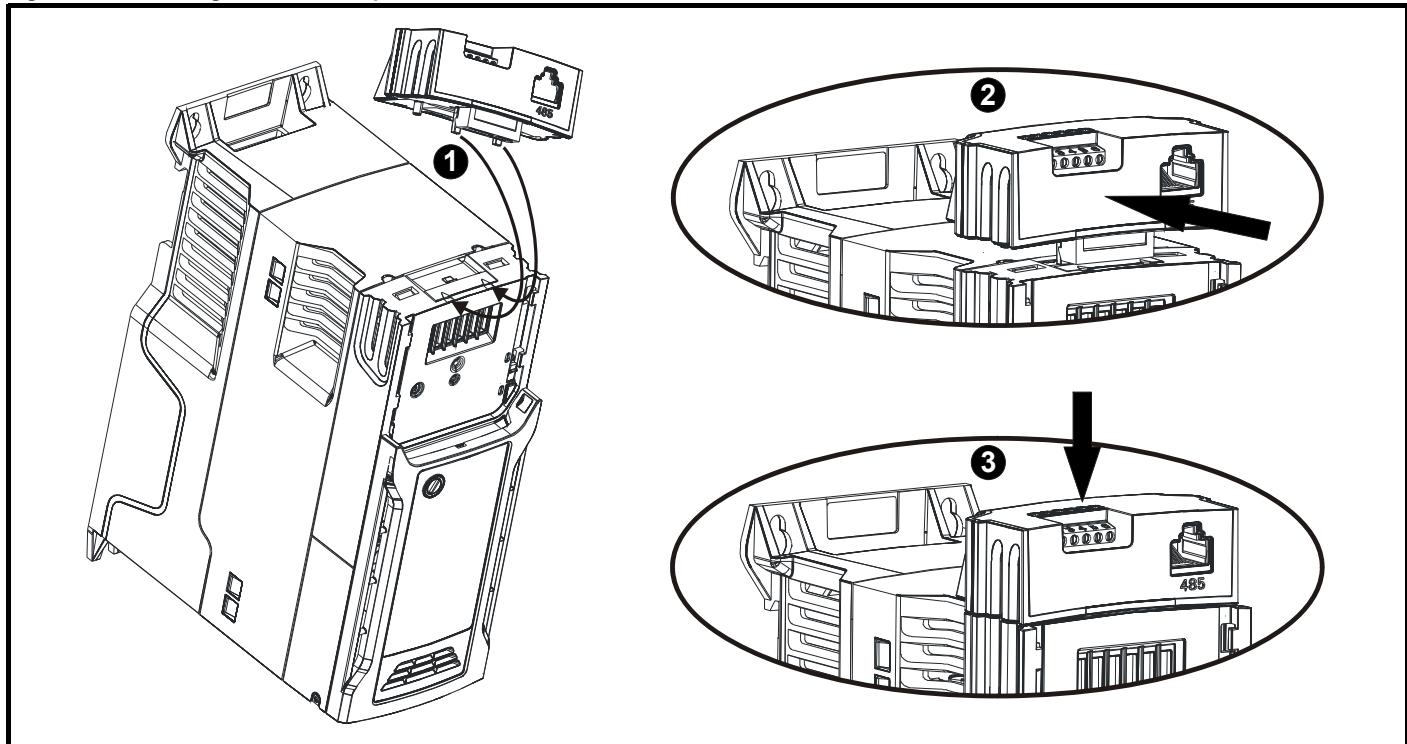Figure 3-7 Installing the AI-485 adaptor to the drive




1. Identify the two plastic fingers on the underside of the AI-485 adaptor (1) - then insert the two fingers into the corresponding slots in the spring loaded sliding cover on the top of the drive.
2. Hold the adaptor firmly and push the spring loaded protective cover towards the back of the drive to expose the connector block (2) below.
3. Press the adaptor downwards (3) until the adaptor connector locates into the drive connection below.

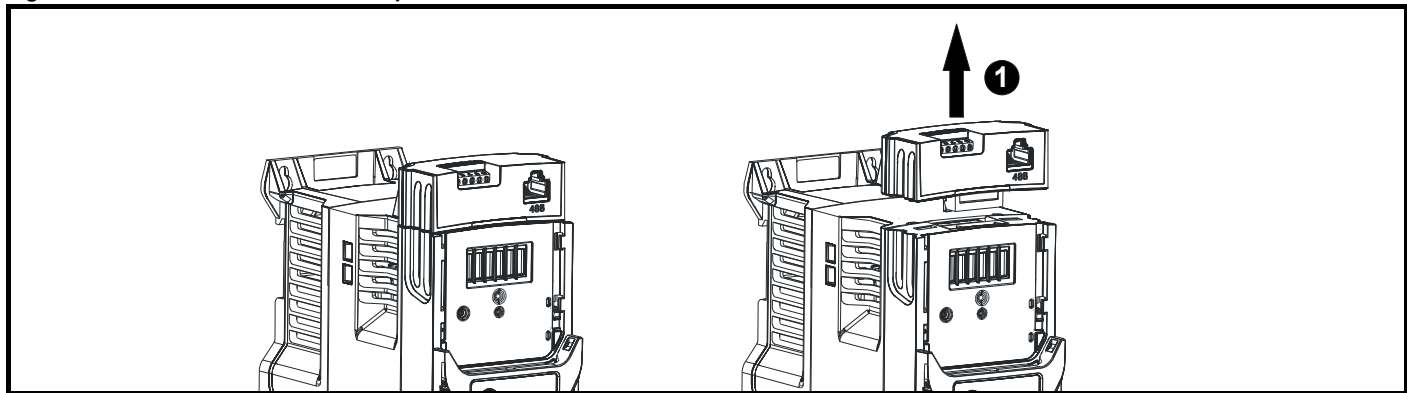Figure 3-8 Removal of the AI-485 adaptor



* To remove the AI-485 adaptor, pull it up and away from the drive in the direction shown (1)

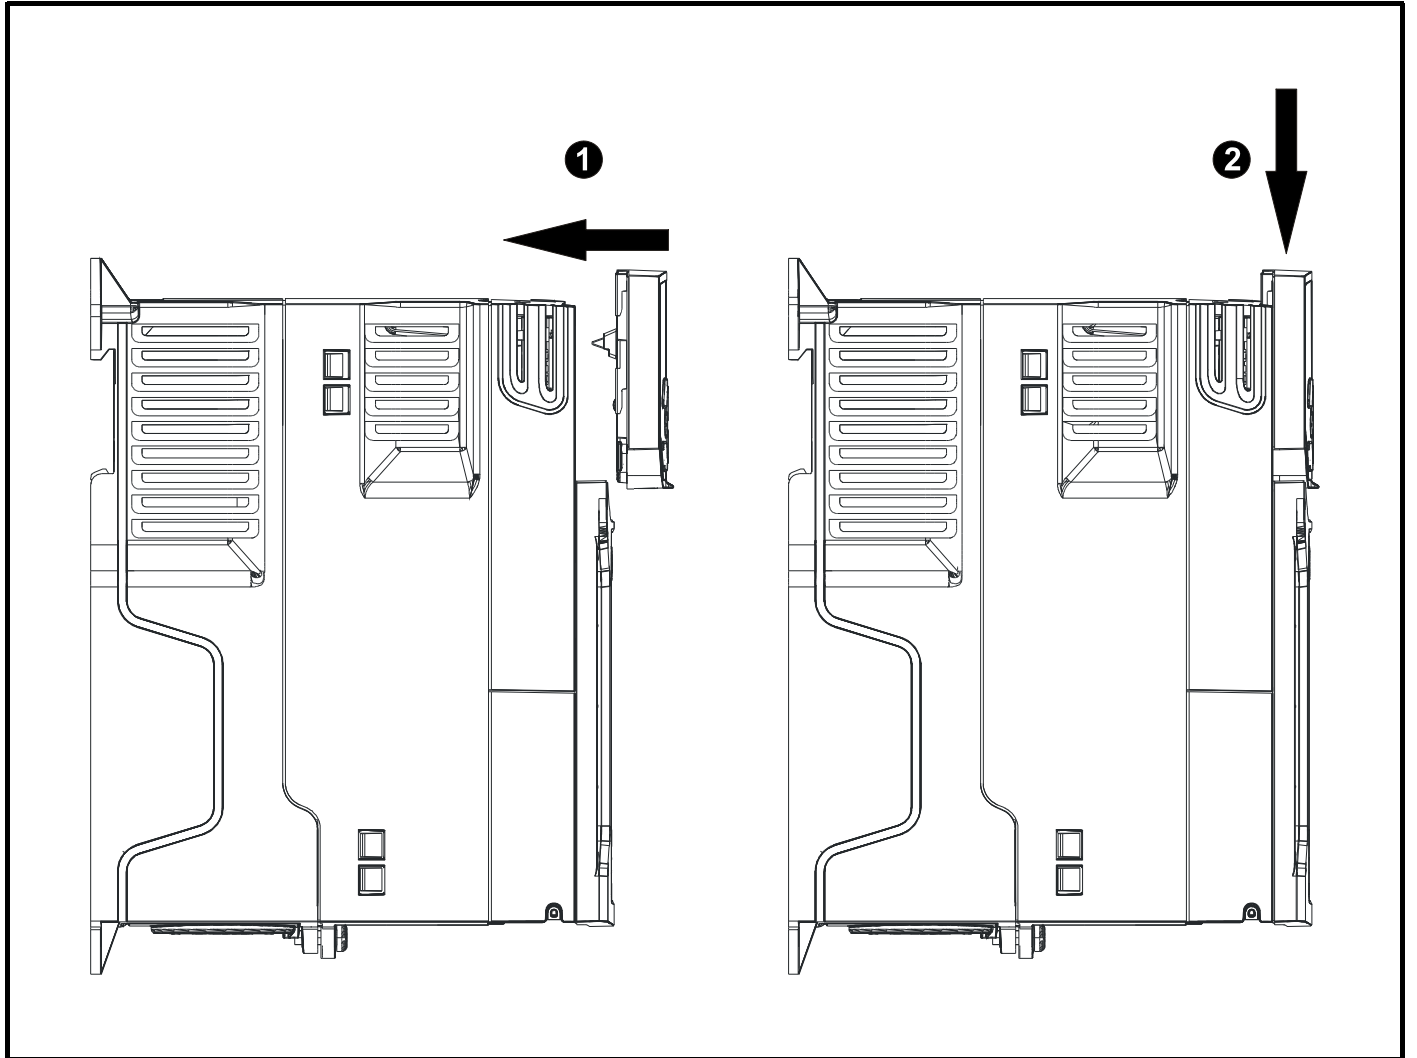Figure 3-9 Installing the CI-Keypad on the drive



To remove the CI-Keypad, reverse the installation procedure shown in Figure 3-9.

NOTE

The keypad can be installed / removed while the drive is powered up and running motor, providing that the drive is not operating in keypad mode.

3.5 Dimensions and mounting methods

The drive is surface mounted. The following drawings show the dimensions of the drive and mounting holes to allow a back plate to be prepared.

3.5.1 Surface mounting

Figure 3-10 Surface mounting the size 1 drive

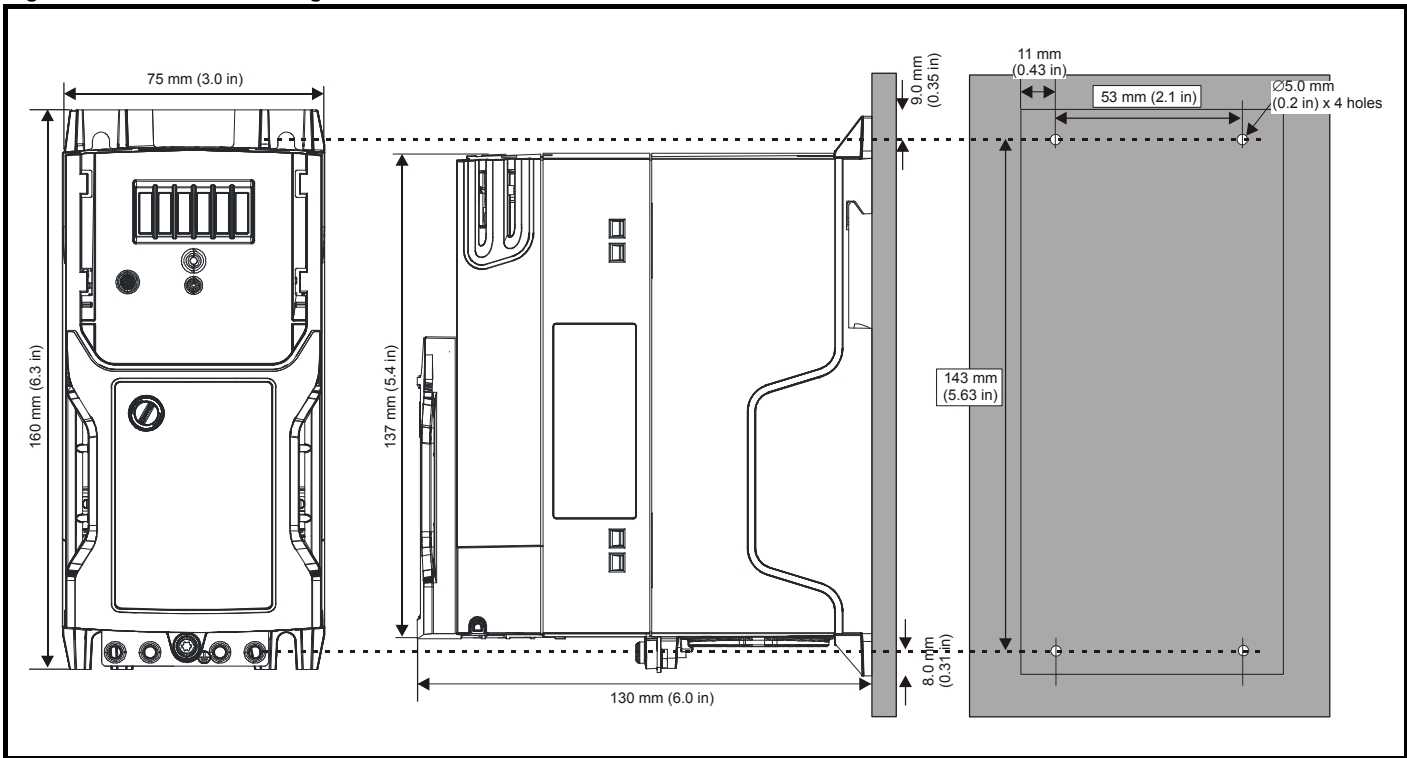


Figure 3-11 Surface mounting the size 2 drive

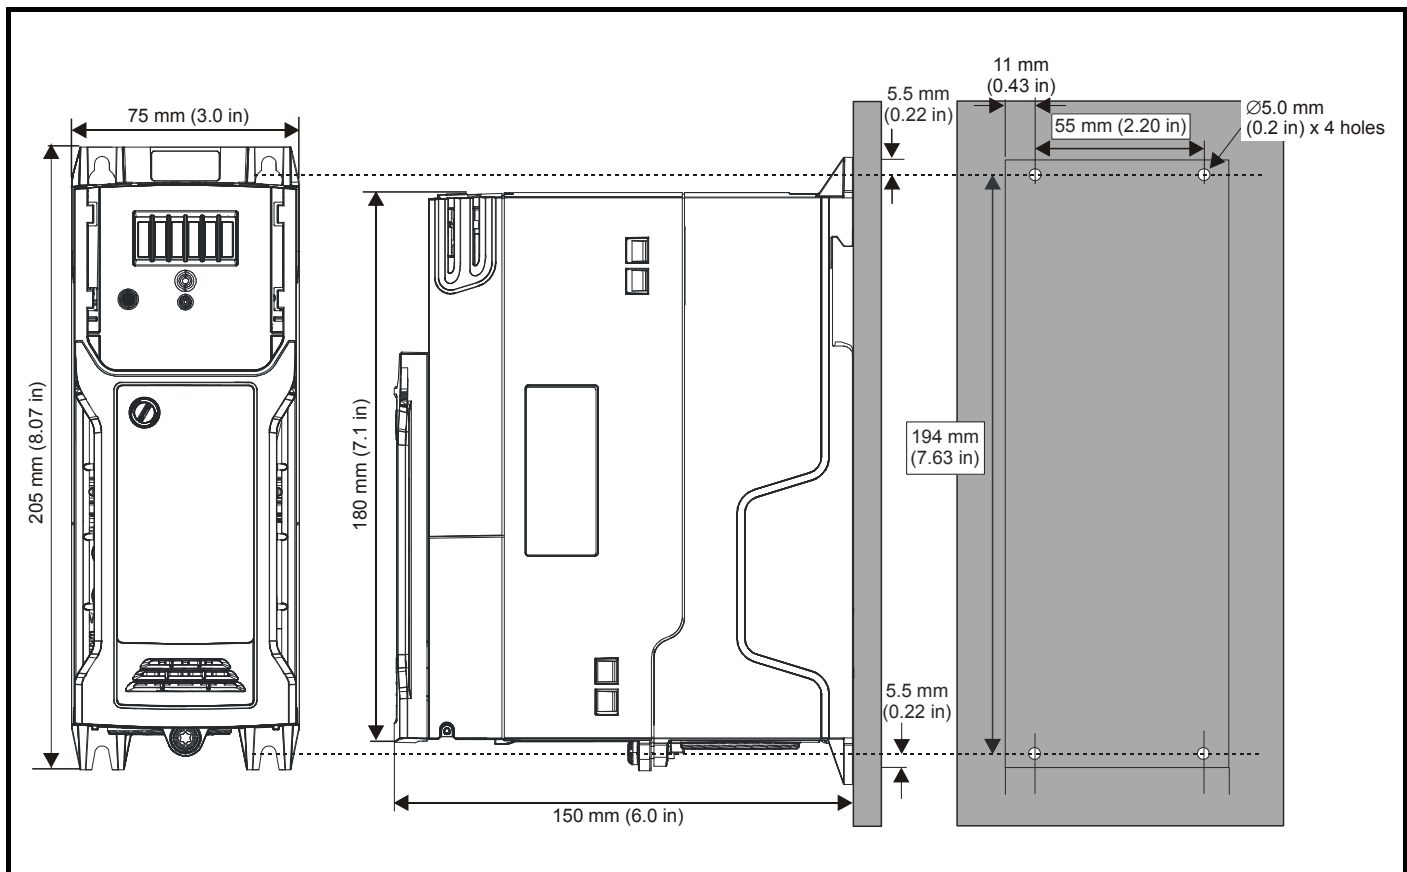


Figure 3-12 Surface mounting the size 3 drive


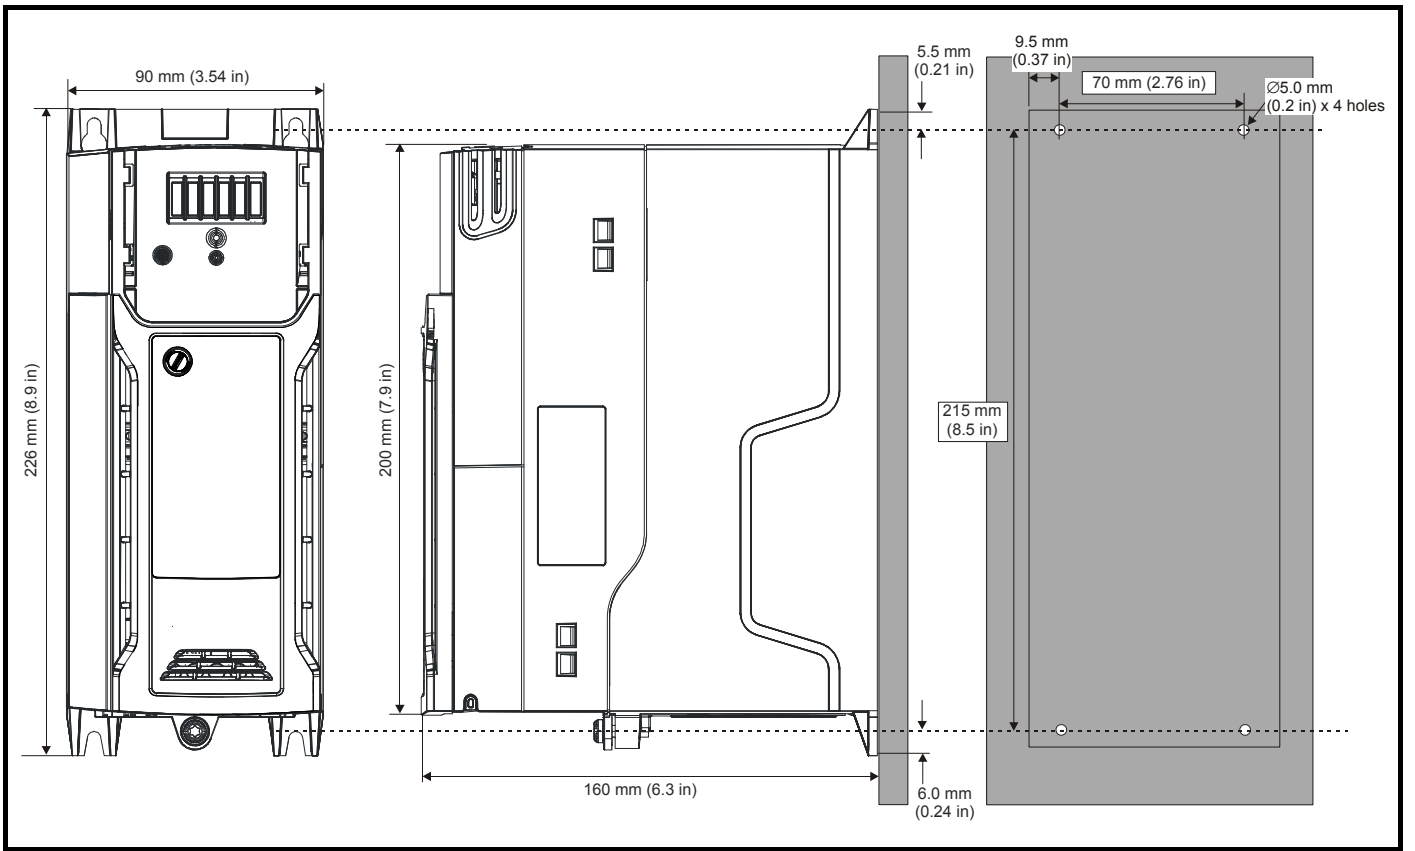


Figure 3-13 Surface mounting the size 4 drive

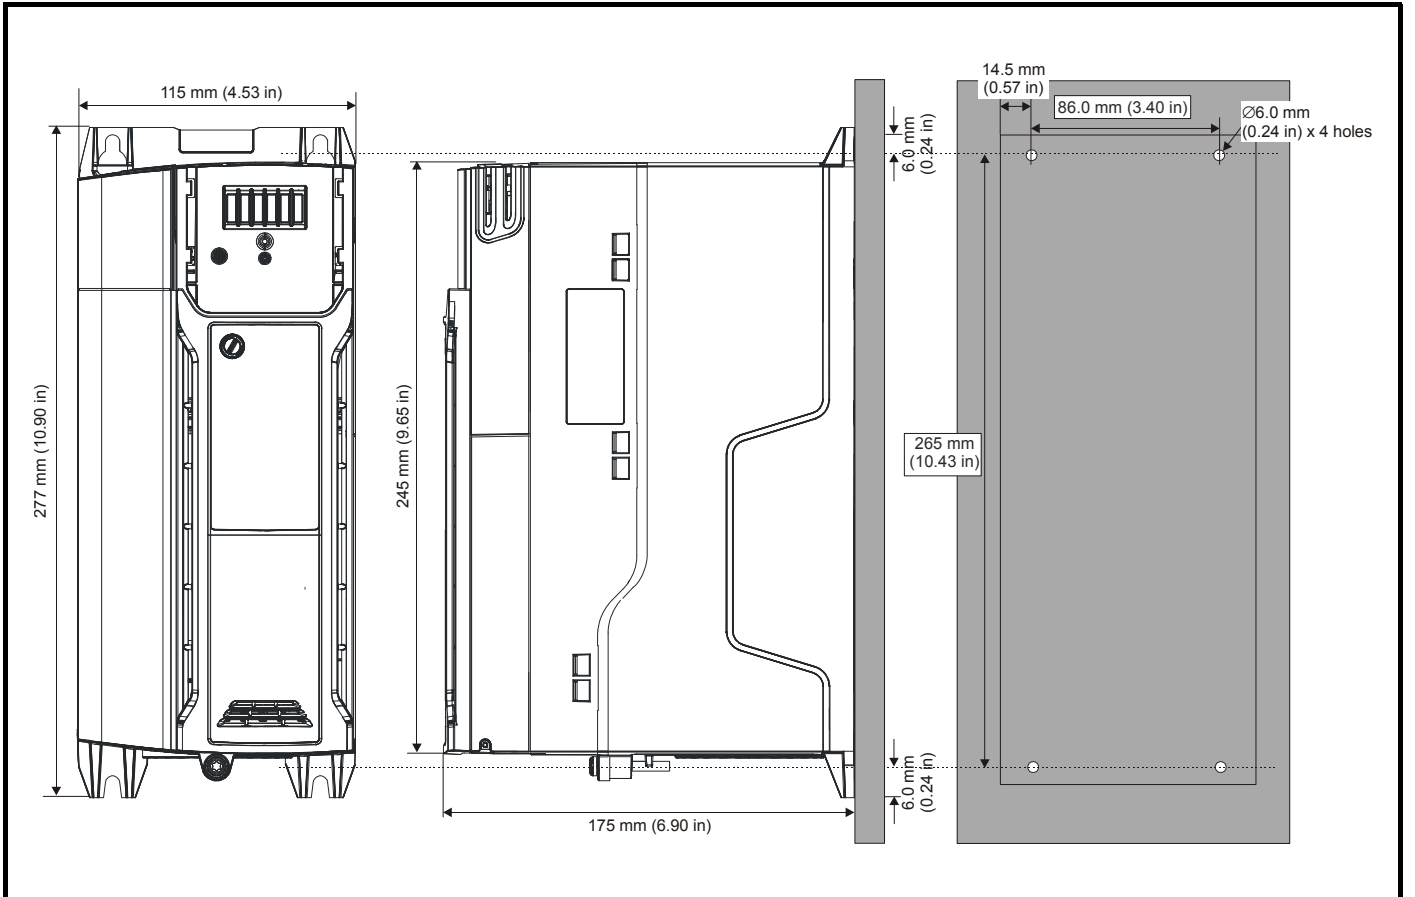


3.6 Enclosure for standard drives

3.6.1 Enclosure layout

Please observe the clearances in the diagram below taking into account any appropriate notes for other devices / auxiliary equipment when planning the installation.

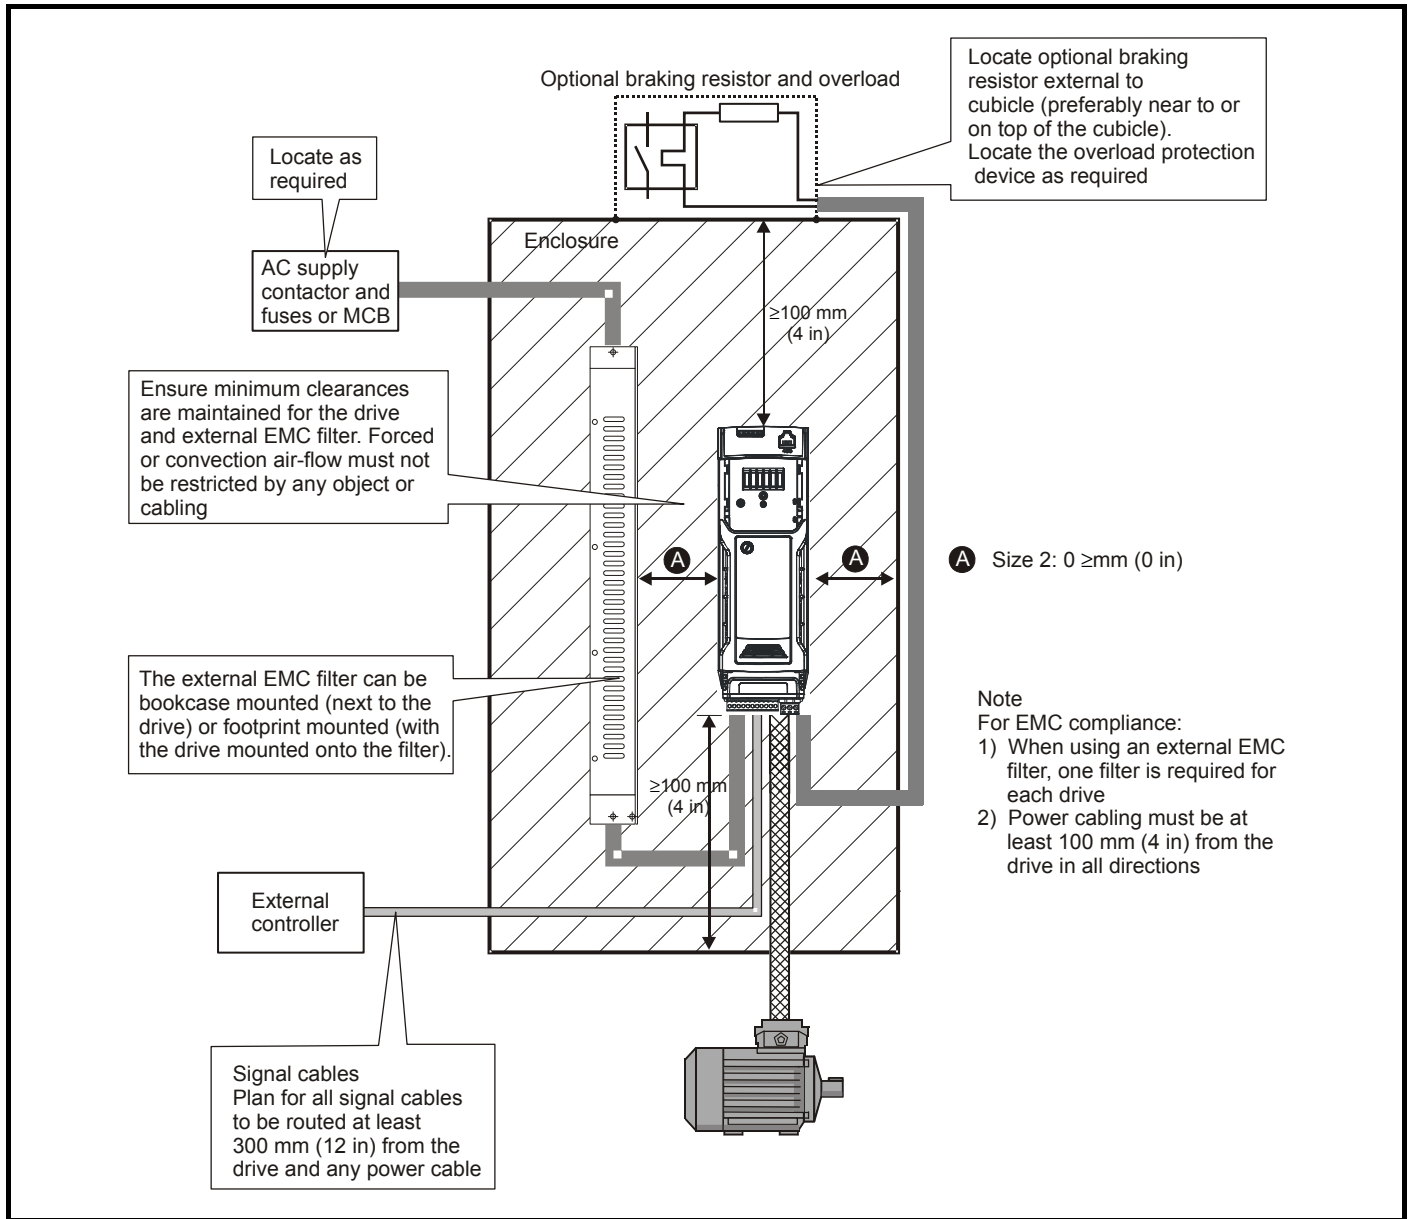Figure 3-14 Enclosure layout



3.6.2 Enclosure sizing

1. Add the dissipation figures from section 12.1.2 *Power dissipation* on page 161 for each drive that is to be installed in the enclosure.
2. If an external EMC filter is to be used with each drive, add the dissipation figures from section 12.2.1 *EMC filter ratings* on page 171 for each external EMC filter that is to be installed in the enclosure.
3. If the braking resistor is to be mounted inside the enclosure, add the average power figures from for each braking resistor that is to be installed in the enclosure.
4. Calculate the total heat dissipation (in Watts) of any other equipment to be installed in the enclosure.
5. Add the heat dissipation figures obtained above. This gives a figure in Watts for the total heat that will be dissipated inside the enclosure.

Calculating the size of a sealed enclosure

The enclosure transfers internally generated heat into the surrounding air by natural convection (or external forced air flow); the greater the surface area of the enclosure walls, the better is the dissipation capability. Only the surfaces of the enclosure that are unobstructed (not in contact with a wall or floor) can dissipate heat.

Calculate the minimum required unobstructed surface area A_e for the enclosure from:

$$A_e = \frac{P}{k(T_{int} - T_{ext})}$$

Where:

A_e	Unobstructed surface area in m^2 ($1 m^2 = 10.9 ft^2$)
T_{ext}	Maximum expected temperature in $^{\circ}C$ <i>outside</i> the enclosure
T_{int}	Maximum permissible temperature in $^{\circ}C$ <i>inside</i> the enclosure
P	Power in Watts dissipated by <i>all</i> heat sources in the enclosure
k	Heat transmission coefficient of the enclosure material in $W/m^2/^{\circ}C$

Example

To calculate the size of an enclosure for the following:

- Two drives operating at the Normal Duty rating
- External EMC filter for each drive
- Braking resistors are to be mounted outside the enclosure
- Maximum ambient temperature inside the enclosure: $40^{\circ}C$
- Maximum ambient temperature outside the enclosure: $30^{\circ}C$

For example, if the power dissipation from each drive is 187 W and the power dissipation from each external EMC filter is 9.2 W.

Total dissipation: $2 \times (187 + 9.2) = 392.4 W$


NOTE

Power dissipation for the drives and the external EMC filters can be obtained from Chapter 12 *Technical data* on page 159.

The enclosure is to be made from painted 2 mm (0.079 in) sheet steel having a heat transmission coefficient of $5.5 W/m^2/^{\circ}C$. Only the top, front, and two sides of the enclosure are free to dissipate heat.

The value of $5.5 W/m^2/^{\circ}C$ can generally be used with a sheet steel enclosure (exact values can be obtained from the supplier of the material). If in any doubt, allow for a greater margin in the temperature rise.

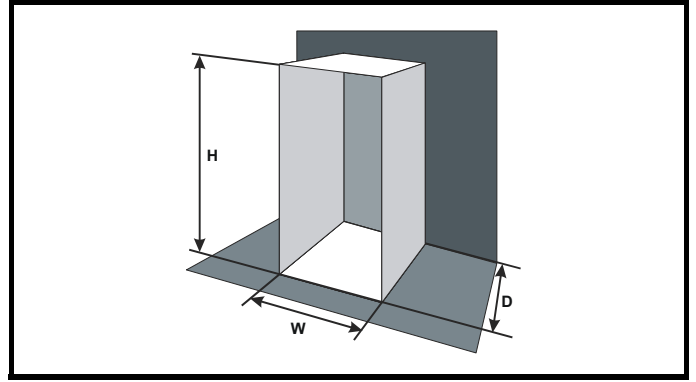Figure 3-15 Enclosure having front, sides and top panels free to dissipate heat



Insert the following values:

T_{int}	$40^{\circ}C$
T_{ext}	$30^{\circ}C$
k	5.5
P	392.4 W

The minimum required heat conducting area is then:

$$A_e = \frac{392.4}{5.5(40 - 30)}$$

$$= 7.135 m^2 (77.8 ft^2) \quad (1 m^2 = 10.9 ft^2)$$

Estimate two of the enclosure dimensions - the height (H) and depth (D), for instance. Calculate the width (W) from:

$$W = \frac{A_e - 2HD}{H + D}$$

Inserting $H = 2m$ and $D = 0.6 m$, obtain the minimum width:

$$W = \frac{7.135 - (2 \times 2 \times 0.6)}{2 + 0.6}$$

$$= 1.821 m (71.7 in)$$

If the enclosure is too large for the space available, it can be made smaller only by attending to one or all of the following:

- Using a lower PWM switching frequency to reduce the dissipation in the drives
- Reducing the ambient temperature outside the enclosure, and/or applying forced-air cooling to the outside of the enclosure
- Reducing the number of drives in the enclosure
- Removing other heat-generating equipment

Calculating the air-flow in a ventilated enclosure

The dimensions of the enclosure are required only for accommodating the equipment. The equipment is cooled by the forced air flow.

Calculate the minimum required volume of ventilating air from:

$$V = \frac{3kP}{T_{int} - T_{ext}}$$

Where:

V	Air-flow in m^3 per hour ($1 m^3/hr = 0.59 ft^3/min$)
T_{ext}	Maximum expected temperature in $^{\circ}C$ <i>outside</i> the enclosure
T_{int}	Maximum permissible temperature in $^{\circ}C$ <i>inside</i> the enclosure
P	Power in Watts dissipated by <i>all</i> heat sources in the enclosure
k	Ratio of $\frac{P_o}{P_i}$

Where:

P_o is the air pressure at sea level

P_i is the air pressure at the installation

Typically use a factor of 1.2 to 1.3, to allow also for pressure-drops in dirty air-filters.

Example

To calculate the size of an enclosure for the following:

- Three drives operating at the Normal Duty rating
- External EMC filter for each drive
- Braking resistors are to be mounted outside the enclosure
- Maximum ambient temperature inside the enclosure: 40 °C
- Maximum ambient temperature outside the enclosure: 30 °C

For example, dissipation of each drive: 101 W and dissipation of each external EMC filter: 6.9 W (max).

Total dissipation: $3 \times (101 + 6.9) = 323.7 \text{ W}$

Insert the following values:

T_{int} 40 °C
 T_{ext} 30 °C
 k 1.3
 P 323.7 W

Then:

$$V = \frac{3 \times 1.3 \times 323.7}{40 - 30}$$

$$= 126.2 \text{ m}^3/\text{hr} \text{ (74.5 ft}^3/\text{min)} \text{ (1 m}^3/\text{hr} = 0.59 \text{ ft}^3/\text{min)}$$

3.7 Enclosure design and drive ambient temperature

Drive derating is required for operation in high ambient temperatures

Totally enclosing or through panel mounting the drive in either a sealed cabinet (no airflow) or in a well ventilated cabinet makes a significant difference on drive cooling.

The chosen method affects the ambient temperature value (T_{rate}) which should be used for any necessary derating to ensure sufficient cooling for the whole of the drive.

The ambient temperature for the four different combinations is defined below:

1. Totally enclosed with no air flow (<2 m/s) over the drive
 $T_{\text{rate}} = T_{\text{int}} + 5 \text{ °C}$
2. Totally enclosed with air flow (>2 m/s) over the drive
 $T_{\text{rate}} = T_{\text{int}}$
3. Through panel mounted with no airflow (<2 m/s) over the drive
 $T_{\text{rate}} = \text{the greater of } T_{\text{ext}} + 5 \text{ °C, or } T_{\text{int}}$
4. Through panel mounted with air flow (>2 m/s) over the drive
 $T_{\text{rate}} = \text{the greater of } T_{\text{ext}} \text{ or } T_{\text{int}}$

Where:

T_{ext} = Temperature outside the cabinet
 T_{int} = Temperature inside the cabinet
 T_{rate} = Temperature used to select current rating from tables in Chapter 12 *Technical data* on page 159.

3.8 Heatsink fan operation

The drive is ventilated by an internal heatsink fan. The fan channels air through the heatsink chamber.

Ensure the minimum clearances around the drive are maintained to allow air to flow freely.

The heatsink fan on size 1, 2, 3, and 4 frames is a variable speed fan.

The drive controls the speed at which the fan runs based on the temperature of the heatsink and the drive's thermal model system. The maximum speed at which the fan operates can be limited in Pr **06.045**.

This could incur an output current derating.

3.9 External EMC filter

The external EMC filter details for each drive rating are provided in the table below.

Model	CT part number	Weight	
		kg	lb
200 V			
400 V			

Mount the external EMC filter following the guidelines in section 4.7.5 *Compliance with generic emission standards* on page 46.

Figure 3-16 Footprint mounting the EMC filter

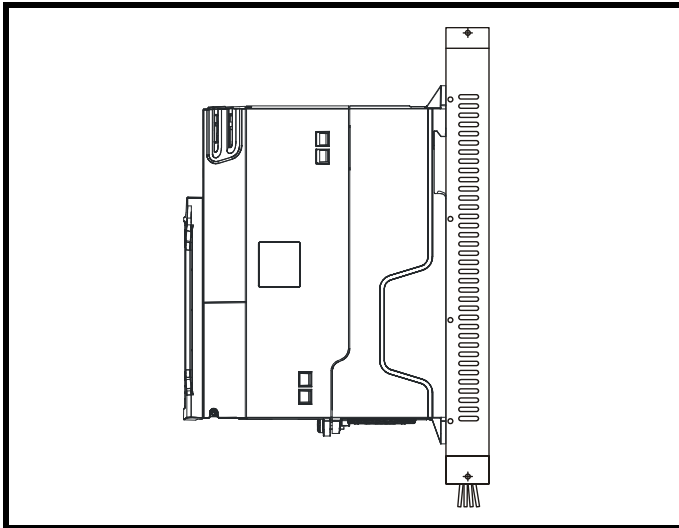


Figure 3-17 Bookcase mounting the EMC filter


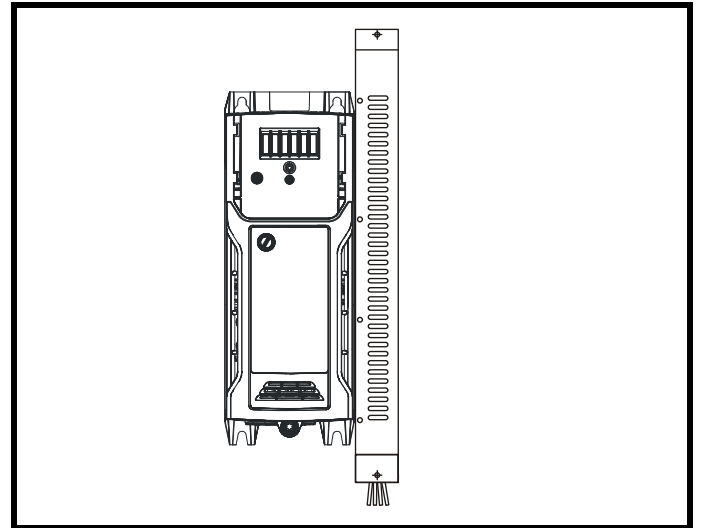


Figure 3-18 Size 1 to 4 external EMC filter

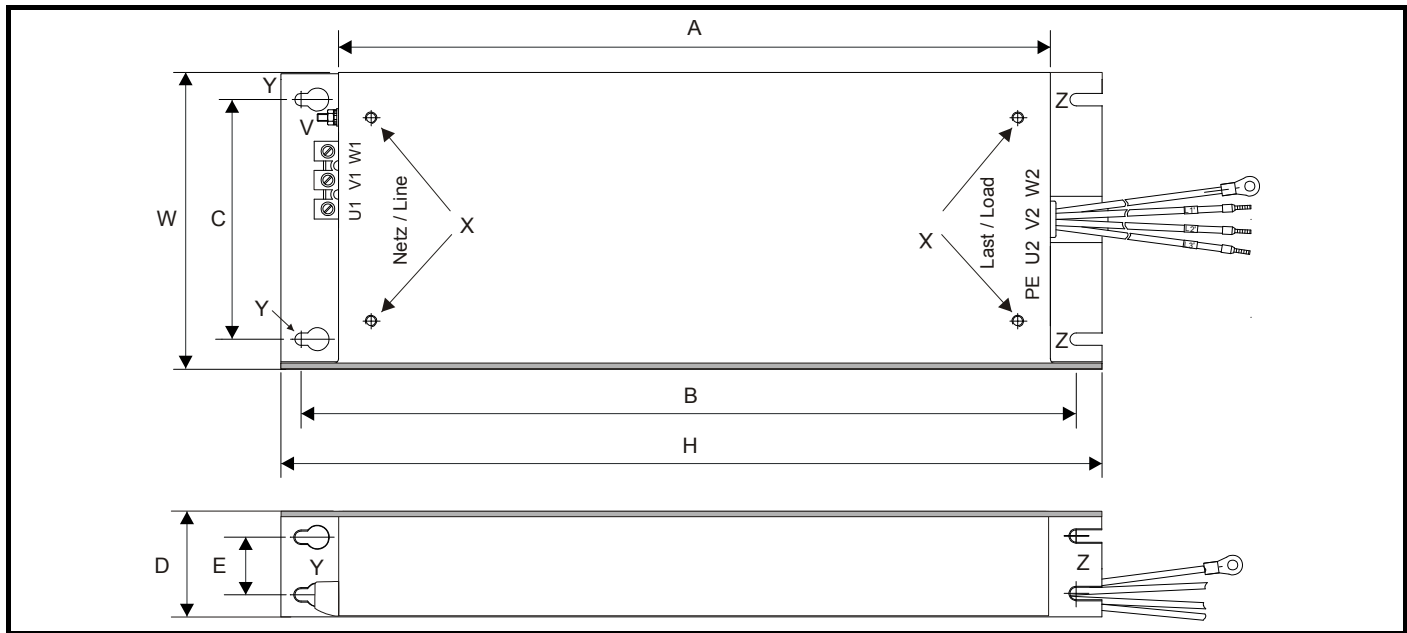

V: Ground stud
 Z: Bookcase mounting slot diameter.
 X: Threaded holes for footprint mounting of the drive
 CS: Cable size
 Y: Footprint mounting hole diameter

Table 3-1 Size 1 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS

Table 3-2 Size 2 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS

Table 3-3 Size 3 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS


Table 3-4 Size 4 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS

3.10 Electrical terminals

3.10.1 Location of the power and ground terminals

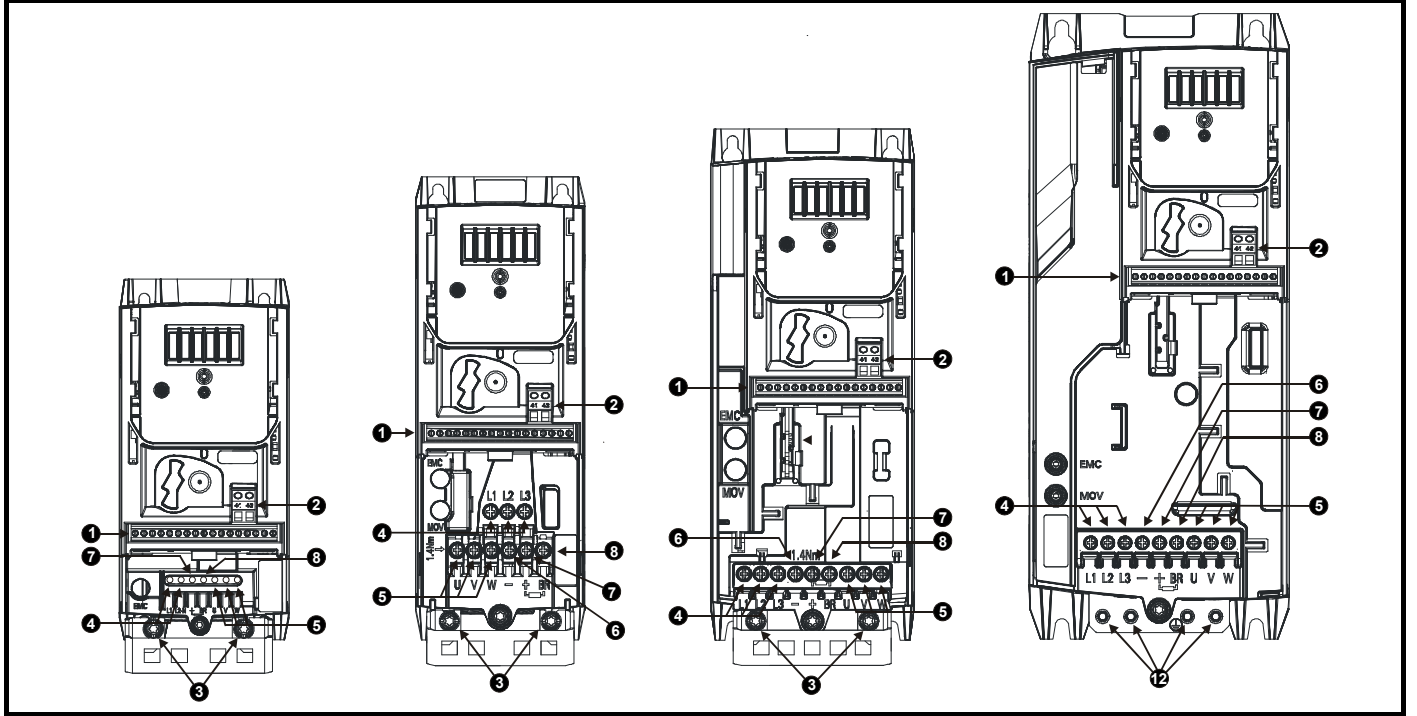Figure 3-19 Location of the power and ground terminals



Key to Figure 3-19

- | | | |
|-----------------------|-----------------------|-------------------|
| 1. Control terminals | 4. AC power terminals | 7. DC bus + |
| 2. Relay terminals | 5. Motor terminals | 8. Brake terminal |
| 3. Ground connections | 6. DC bus - | |

3.10.2 Terminal sizes and torque settings

WARNING To avoid a fire hazard and maintain validity of the UL listing, adhere to the specified tightening torques for the power and ground terminals. Refer to the following tables.

Table 3-5 Drive relay terminal data

Model	Connection type	Torque setting
All	Screw terminals	0.5 N m (0.4 lb ft)

Table 3-6 Drive power terminal data

Model size	AC terminals	DC and braking	Ground terminal
1	0.5 N m (0.4 lb ft)		1.5 N m (1.1 lb ft)
2	1.4 N m (1 lb ft)		
3			
4			

Table 3-7 Terminal block maximum cable sizes

Model size	Terminal block description	Max cable size
All	Control connector	1.5 mm ² (16 AWG)
	2 way relay connector	2.5 mm ² (12 AWG)
	STO connector	0.5 mm ² (20 AWG)
All	AC input power connector	6 mm ² (10 AWG)
All	AC output power connector	2.5 mm ² (12 AWG)

Table 3-8 External EMC filter terminal data

CT part number	Power connections		Ground connections	
	Max cable size	Max torque	Ground stud size	Max torque

3.11 Routine maintenance

The drive should be installed in a cool, clean, well ventilated location. Contact with moisture and/or dust with the drive should be avoided.

Regular checks of the following should be carried out to ensure drive / installation reliability are maximized:

Environment	
Ambient temperature	Ensure the enclosure temperature remains at or below maximum specified
Dust	Ensure the drive remains dust free – check that the heatsink and drive fan are not gathering dust. The lifetime of the fan is reduced in dusty environments.
Moisture	Ensure the drive enclosure shows no signs of condensation
Enclosure	
Enclosure door filters	Ensure filters are not blocked and that air is free to flow
Electrical	
Screw connections	Ensure all screw terminals remain tight
Crimp terminals	Ensure all crimp terminals remains tight – check for any discoloration which could indicate overheating
Cables	Check all cables for signs of damage

4 Electrical installation

Many cable management features have been incorporated into the product and accessories, this chapter shows how to optimize them. Key features include:

- SAFE TORQUE OFF function
- Internal EMC filter
- EMC compliance with shielding / grounding accessories
- Product rating, fusing and cabling information
- Brake resistor details (selection / ratings)

Electric shock risk
 The voltages present in the following locations can cause severe electric shock and may be lethal:

- AC supply cables and connections
- DC and brake cables, and connections
- Output cables and connections
- Many internal parts of the drive, and external option units

Unless otherwise indicated, control terminals are single insulated and must not be touched.

Isolation device
 The AC and / or DC power supply must be disconnected from the drive using an approved isolation device before any cover is removed from the drive or before any servicing work is performed.

STOP function
 The STOP function does not remove dangerous voltages from the drive, the motor or any external option units.

SAFE TORQUE OFF function
 The SAFE TORQUE OFF function does not remove dangerous voltages from the drive, the motor or any external option units.


Stored charge
 The drive contains capacitors that remain charged to a potentially lethal voltage after the AC and / or DC power supply has been disconnected. If the drive has been energized, the AC and / or DC power supply must be isolated at least ten minutes before work may continue. Normally, the capacitors are discharged by an internal resistor. Under certain, unusual fault conditions, it is possible that the capacitors may fail to discharge, or be prevented from being discharged by a voltage applied to the output terminals. If the drive has failed in a manner that causes the display to go blank immediately, it is possible the capacitors will not be discharged. In this case, consult Control Techniques or their authorized distributor.

Equipment supplied by plug and socket
 Special attention must be given if the drive is installed in equipment which is connected to the AC supply by a plug and socket. The AC supply terminals of the drive are connected to the internal capacitors through rectifier diodes which are not intended to give safety isolation. If the plug terminals can be touched when the plug is disconnected from the socket, a means of automatically isolating the plug from the drive must be used (e.g. a latching relay).

4.1 Power connections


4.1.1 AC and DC connections

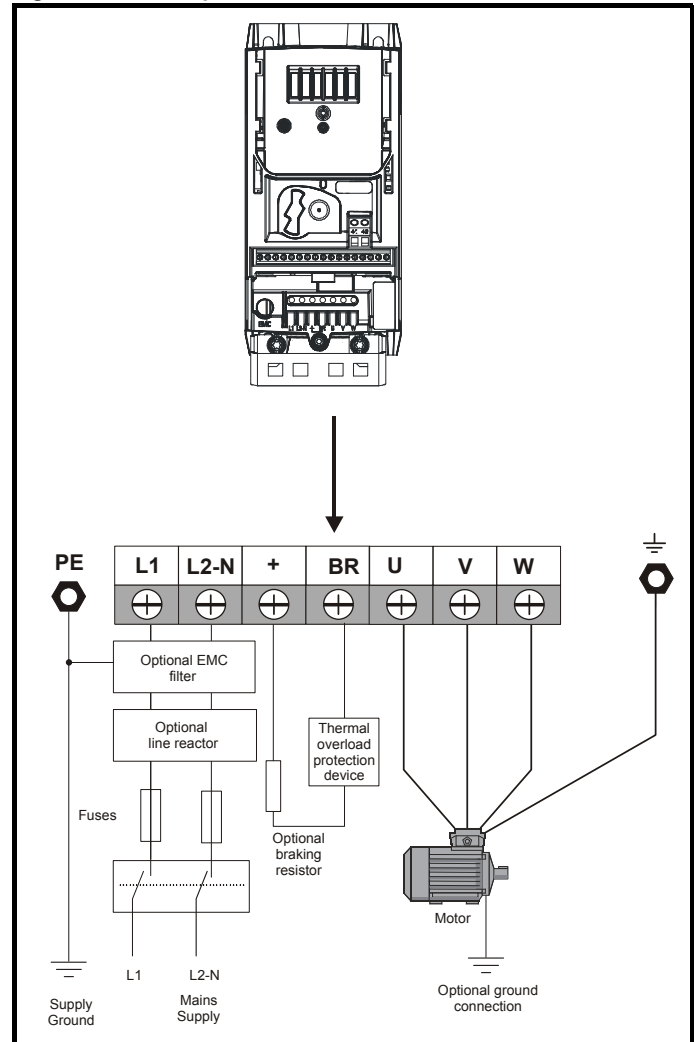Figure 4-1 Size 1 power connections




See Figure 4-5 Size 1 to 4 ground connections (size 2 shown) on page 34 for further information on ground connections.

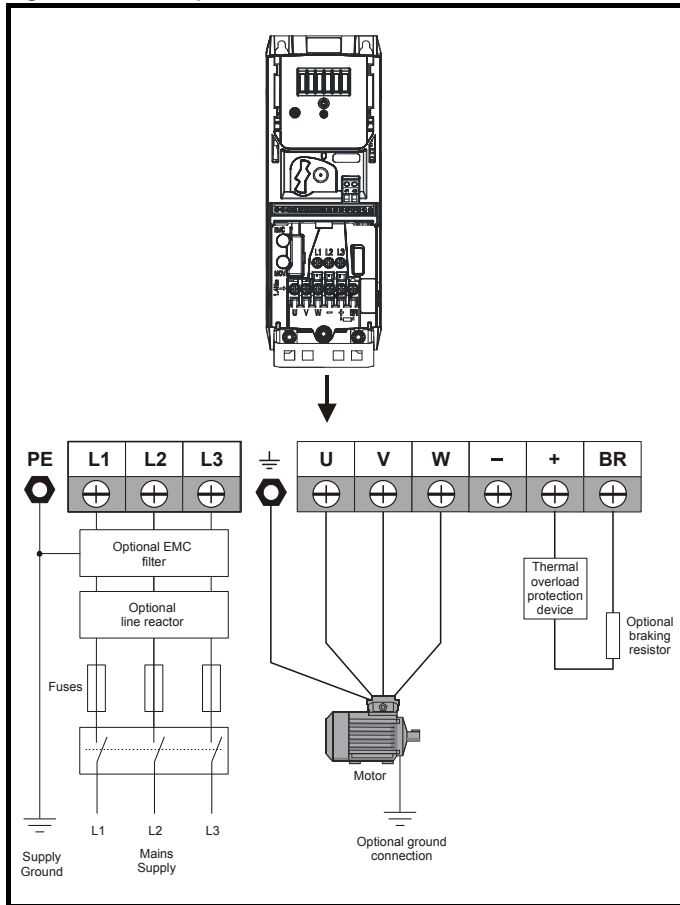Figure 4-2 Size 2 power connections




See Figure 4-5 *Size 1 to 4 ground connections (size 2 shown)* on page 34 for further information on ground connections.

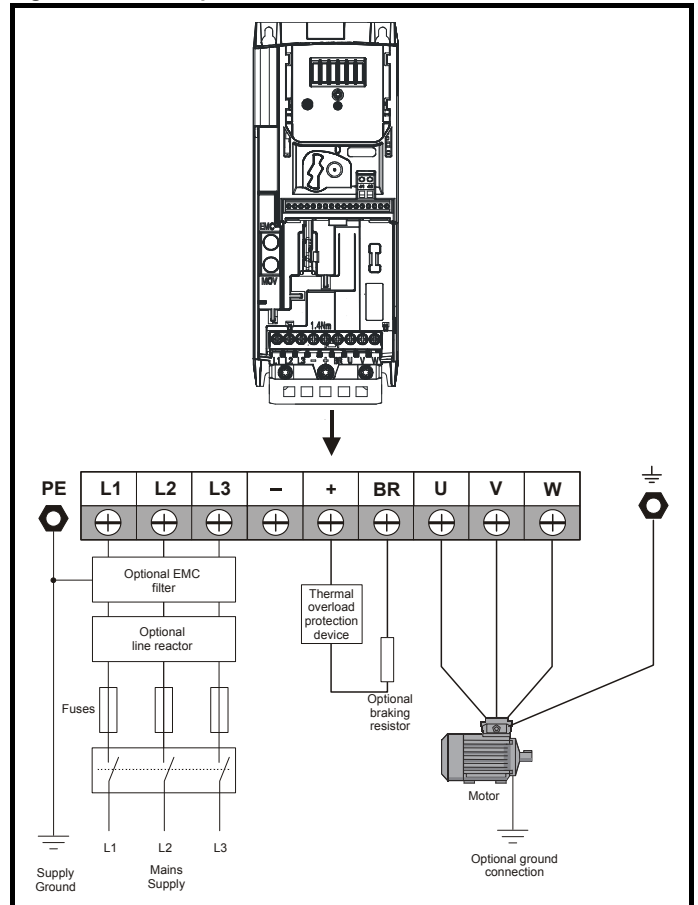Figure 4-3 Size 3 power connections



See Figure 4-5 *Size 1 to 4 ground connections (size 2 shown)* on page 34 for further information on ground connections.

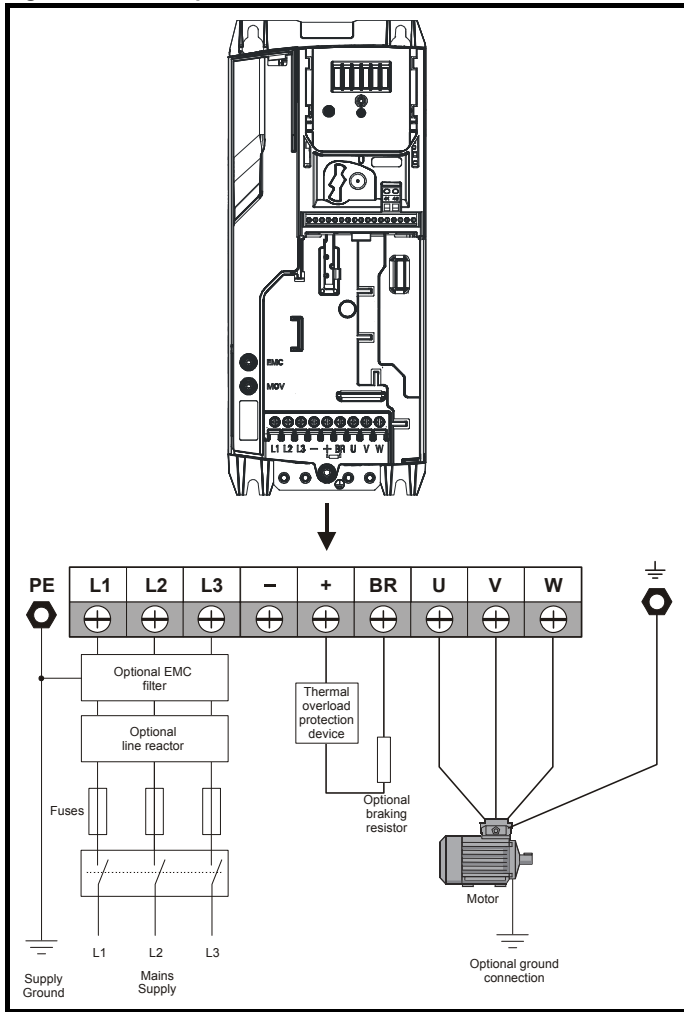Figure 4-4 Size 4 power connections



4.1.2 Ground connections




Electrochemical corrosion of grounding terminals
Ensure that grounding terminals are protected against corrosion i.e. as could be caused by condensation.

WARNING

Size 1 to 4

On sizes 1 to 4, the supply and motor ground connections are made using the ground busbar located at the bottom of the drive as shown in Figure 4-5.

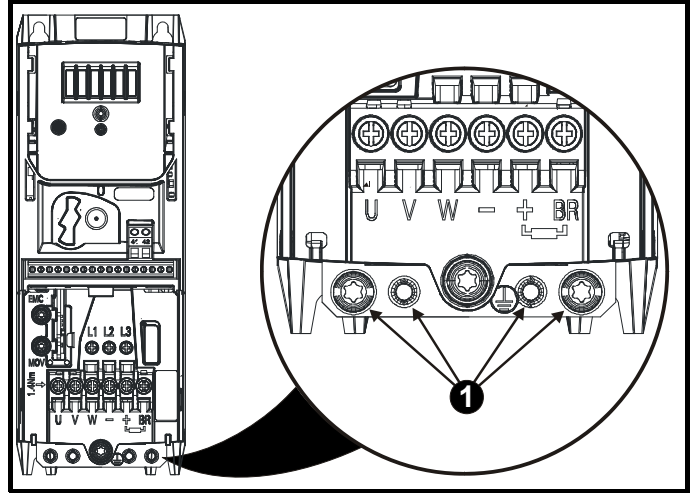Figure 4-5 Size 1 to 4 ground connections (size 2 shown)



1 4 x M4 threaded holes for the ground connection busbar



The ground loop impedance must conform to the requirements of local safety regulations.

The drive must be grounded by a connection capable of carrying the prospective fault current until the protective device (fuse, etc.) disconnects the AC supply.

The ground connections must be inspected and tested at appropriate intervals.

WARNING

Table 4-1 Protective ground cable ratings

Input phase conductor size	Minimum ground conductor size
$\leq 10 \text{ mm}^2$	Either 10 mm^2 or two conductors of the same cross-sectional area as the input phase conductor.
$> 10 \text{ mm}^2$ and $\leq 16 \text{ mm}^2$	The same cross-sectional area as the first input phase conductor.
$> 16 \text{ mm}^2$ and $\leq 35 \text{ mm}^2$	16 mm^2
$> 35 \text{ mm}^2$	Half of the cross-sectional area of the input phase conductor.

4.2 AC supply requirements

Voltage:

- 100 V drive: 100 V to 120 V ±10 %
- 200 V drive: 200 V to 240 V ±10 %
- 400 V drive: 380 V to 480 V ±10 %

Number of phases: 3

Maximum supply imbalance: 2 % negative phase sequence (equivalent to 3 % voltage imbalance between phases).

Frequency range: 48 to 62 Hz

For UL compliance only, the maximum supply symmetrical fault current must be limited to 100 kA

4.2.1 Supply types

All drives are suitable for use on any supply type i.e TN-S, TN-C-S, TT and IT.

- Supplies with voltage up to 600 V may have grounding at any potential, i.e. neutral, centre or corner (“grounded delta”)
- Supplies with voltage above 600 V may not have corner grounding

Drives are suitable for use on supplies of installation category III and lower, according to IEC60664-1. This means they may be connected permanently to the supply at its origin in a building, but for outdoor installation additional over-voltage suppression (transient voltage surge suppression) must be provided to reduce category IV to category III.



Operation with IT (ungrounded) supplies:

Special attention is required when using internal or external EMC filters with ungrounded supplies, because in the event of a ground (earth) fault in the motor circuit the drive may not trip and the filter could be over-stressed. In this case, either the filter must not be used i.e. removed, or additional independent motor ground fault protection must be provided. For instructions on removal, refer to Figure 4-10 *Installation of grounding bracket* and Figure 4-13 *Removal of the size 3 internal EMC filter*. For details of ground fault protection contact the supplier of the drive.

A ground fault in the supply has no effect in any case. If the motor must continue to run with a ground fault in its own circuit, then an input isolating transformer must be provided, and if an EMC filter is required it must be located in the primary circuit.

Unusual hazards can occur on ungrounded supplies with more than one source, for example on ships. Contact the supplier of the drive for more information.

4.2.2 Supplies requiring line reactors

Input line reactors reduce the risk of damage to the drive resulting from poor phase balance or severe disturbances on the supply network.

Where line reactors are to be used, reactance values of approximately 2 % are recommended. Higher values may be used if necessary, but may result in a loss of drive output (reduced torque at high speed) because of the voltage drop.

For all drive ratings, 2 % line reactors permit drives to be used with a supply unbalance of up to 3.5 % negative phase sequence (equivalent to 5 % voltage imbalance between phases).

Severe disturbances may be caused by the following factors, for example:

- Power factor correction equipment connected close to the drive.
- Large DC drives having no or inadequate line reactors connected to the supply.
- Across the line (DOL) started motor(s) connected to the supply such that when any of these motors are started, the voltage dip exceeds 20 %.

Such disturbances may cause excessive peak currents to flow in the input power circuit of the drive. This may cause nuisance tripping, or in extreme cases, failure of the drive.

Drives of low power rating may also be susceptible to disturbance when connected to supplies with a high rated capacity.

Line reactors are particularly recommended for use with the following drive models when one of the above factors exists, or when the supply capacity exceeds 175 kVA.

Model sizes XXX to XXX have an internal DC choke so they do not require AC line reactors except for cases of excessive phase unbalance or extreme supply conditions.

When required, each drive must have its own reactor(s). Three individual reactors or a single three-phase reactor should be used.

Reactor current ratings

The current rating of the line reactors should be as follows:

Continuous current rating:

Not less than the continuous input current rating of the drive

Repetitive peak current rating:

Not less than twice the continuous input current rating of the drive

4.2.3 Input inductor calculation

To calculate the inductance required (at Y%), use the following equation:

$$L = \frac{Y}{100} \times \frac{V}{\sqrt{3}} \times \frac{1}{2\pi f I}$$

Where:

I = drive rated input current (A)

L = inductance (H)

f = supply frequency (Hz)

V = voltage between lines

4.3 Ratings

The input current is affected by the supply voltage and impedance.

Typical input current

The values of typical input current are given to aid calculations for power flow and power loss.

The values of typical input current are stated for a balanced supply.

Maximum continuous input current

The values of maximum continuous input current are given to aid the selection of cables and fuses. These values are stated for the worst case condition with the unusual combination of stiff supply with bad balance. The value stated for the maximum continuous input current would only be seen in one of the input phases. The current in the other two phases would be significantly lower.

The values of maximum input current are stated for a supply with a 2 % negative phase-sequence imbalance and rated at the supply fault current given in Table 4-2.

Table 4-2 Supply fault current used to calculate maximum input currents

Model	Symmetrical fault level (kA)
All	100



Fuses

The AC supply to the drive must be installed with suitable protection against overload and short-circuits. Table 4-3, Table 4-4 and Table 4-5 show the recommended fuse ratings. Failure to observe this requirement will cause risk of fire.

Table 4-3 AC Input current and fuse ratings (100 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating			
				IEC gG		Class CC or Class J	
				Maximum A		Maximum A	
01100017	8.7	8.7		10		10	
01100024	11.1	11.1		16		16	
02100042	18.8	18.8		20		20	
02100056	24.0	24.0		25		25	

Table 4-4 AC Input current and fuse ratings (200 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating			
				IEC gG		Class CC or Class J	
				Maximum A		Maximum A	
				1ph	3ph	1ph	3ph
01200017	4.5	4.5		6		5	
01200024	5.3	5.3		10		10	
01200033	8.3	8.3		16		16	
01200042	10.4	10.4		6		10	5
02200024	5.3/3.2	5.3/4.1		10		10	
02200033	8.3/4.3	8.3/6.7		16	10	16	10
02200042	10.4/5.4	10.4/7.5		20	16	20	16
02200056	14.9/7.4	14.9/11.3		25	20	25	20
02200075	18.1/9.1	18.1/13.5		25	20	25	20
03200100	23.9/12.8	23.9/17.7			25		25
04200133	23.7/13.5	23.7/16.9			25		25
04200176	17.0	21.3			25		25

Table 4-5 AC Input current and fuse ratings (400 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating			
				IEC gG		Class CC or Class J	
				Maximum A		Maximum A	
02400013	2.1	2.4		6		5	
02400018	2.6	2.9					
02400023	3.1	3.5					
02400032	4.7	5.1					
02400041	5.8	6.2		10		10	
03400056	8.3	8.7		10		10	
03400073	10.2	12.2		16		16	
03400094	13.1	14.8				20	
04400135	14.0	16.3				20	
04400170	18.5	20.7		25		25	

NOTE

Ensure cables used suit local wiring regulations.



The nominal cable sizes below are only a guide. The mounting and grouping of cables affects their current-carrying capacity, in some cases smaller cables may be acceptable but in other cases a larger cable is required to avoid excessive temperature or voltage drop. Refer to local wiring regulations for the correct size of cables.

CAUTION

Table 4-6 Cable ratings (100 V)

Model	Cable size (IEC 60364-5-52) mm ²				Cable size (UL508C) AWG			
	Input		Output		Input		Output	
	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum
01100017	1		1		16		16	
01100024	1.5		1		14		16	
02100042	2.5		1		12		16	
02100056	4		1		10		16	

Table 4-7 Cable ratings (200 V)

Model	Cable size (IEC 60364-5-52) mm ²				Cable size (UL 508C) AWG			
	Input		Output		Input		Output	
	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum
01200017	1		1		16		16	
01200024	1		1		16		16	
01200033	1		1		16		16	
01200042	1		1		16		16	
02200024	1		1		16		16	
02200033	1		1		16		16	
02200042	1		1		16		16	
02200056	2.5/1.5		1		12/14		16	
02200075	2.5		1		12		16	
03200100	4		1.5		10/12		14	
04200133	4/2.5		2.5		10		12	
04200176	4		2.5		10		12	

Table 4-8 Cable ratings (400 V)

Model	Cable size (IEC 60364-5-52) mm ²				Cable size (UL 508C) AWG			
	Input		Output		Input		Output	
	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum
02400013	1		1		16		16	
02400018	1		1		16		16	
02400023	1		1		16		16	
02400032	1		1		16		16	
02400041	1		1		16		16	
03400056	1		1		14		16	
03400073	1.5		1		12		16	
03400094	2.5		1.5		12		14	
04400135	2.5		2.5		10		12	
04400170	4		2.5		10		12	

NOTE

PVC insulated cable should be used.

NOTE

Cable sizes are from IEC60364-5-52:2001 table A.52.C with correction factor for 40°C ambient of 0.87 (from table A52.14) for cable installation method B2 (multicore cable in conduit).

Installation class (ref: IEC60364-5-52:2001)

B1 - Separate cables in conduit.

B2 - Multicore cable in conduit.

C - Multicore cable in free air.

Cable size may be reduced if a different installation method is used, or if the ambient temperature is lower.

NOTE

The nominal output cable sizes assume that the motor maximum current matches that of the drive. Where a motor of reduced rating is used the cable rating may be chosen to match that of the motor. To ensure that the motor and cable are protected against overload, the drive must be programmed with the correct motor rated current.

A fuse or other protection must be included in all live connections to the AC supply.

Fuse types

The fuse voltage rating must be suitable for the drive supply voltage.

MCB

Do not use an MCB instead of the recommended fuses.

Ground connections

The drive must be connected to the system ground of the AC supply. The ground wiring must conform to local regulations and codes of practice.

NOTE

For information on ground cable sizes, refer to Table 4-1 *Protective ground cable ratings* on page 34.


4.3.1 Main AC supply contactor

The recommended AC supply contactor type for size 1 to 4 is AC1.

4.4 Output circuit and motor protection

The output circuit has fast-acting electronic short-circuit protection which limits the fault current to typically no more than 2.5 times the rated output current, and interrupts the current in approximately 20 µs. No additional short-circuit protection devices are required.

The drive provides overload protection for the motor and its cable. For this to be effective, *Rated Current (00.006)* must be set to suit the motor.



Motor Rated Current (00.006) must be set correctly to avoid a risk of fire in the event of motor overload.

WARNING

There is also provision for the use of a motor thermistor to prevent over-heating of the motor, e.g. due to loss of cooling.

4.4.1 Cable types and lengths

Since capacitance in the motor cable causes loading on the output of the drive, ensure the cable length does not exceed the values given in Table 4-10, Table 4-11 and Table 4-17.

Use 105 °C (221 °F) (UL 60/75 °C temp rise) PVC-insulated cable with copper conductors having a suitable voltage rating, for the following power connections:

- AC supply to external EMC filter (when used)
- AC supply (or external EMC filter) to drive
- Drive to motor
- Drive to braking resistor

Table 4-9 Maximum motor cable lengths (100 V drives)

100 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
01100017	50 m				37.5 m	25 m	18.75 m	12.5 m	9 m
01100024	50 m				37.5 m	25 m	18.75 m	12.5 m	9 m
02100042	100 m				75 m	50 m	37.5 m	25 m	18 m
02100056	100 m				75 m	50 m	37.5 m	25 m	18 m

Table 4-10 Maximum motor cable lengths (200 V drives)

200 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
01200017	50 m				37.5	25 m	18.75	12.5 m	9 m
01200024									
01200033									
01200042									
02200024	100 m				75 m	50 m	37.5	25 m	18 m
02200033									
02200042									
02200056									
02200075									
03200100	100 m				75 m	50 m	37.5	25 m	18 m
04200133	100 m				75 m	50 m	37.5	25 m	18 m
04200176									

Table 4-11 Maximum motor cable lengths (400 V drives)


400 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
02400013	100 m				75 m	50 m	37.5	25 m	18.25 m
02400018									
02400023									
02400032									
02400041									
03400056	100 m				75 m	50 m	37.5	25 m	18.25 m
03400073									
03400094									
04400135	100 m				75 m	50 m	37.5	25 m	18.25 m
04400170									

4.4.2 High-capacitance / reduced diameter cables

The maximum cable length is reduced from that shown in Table 4-10, Table 4-11 and Table 4-17, if high capacitance or reduced diameter motor cables are used.

Most cables have an insulating jacket between the cores and the armor or shield; these cables have a low capacitance and are recommended. Cables that do not have an insulating jacket tend to have high capacitance; if a cable of this type is used, the maximum cable length is half that quoted in the tables, (Figure 4-6 shows how to identify the two types).

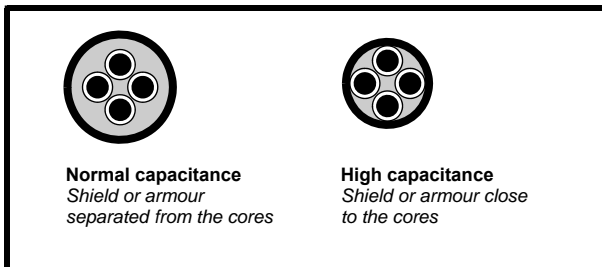Figure 4-6 Cable construction influencing the capacitance



The cable used for Table 4-10, Table 4-11 and Table 4-17 is shielded and contains four cores. Typical capacitance for this type of cable is 130 pF/m (i.e. from one core to all others and the shield connected together).

4.4.3 Motor winding voltage

The PWM output voltage can adversely affect the inter-turn insulation in the motor. This is because of the high rate of change of voltage, in conjunction with the impedance of the motor cable and the distributed nature of the motor winding.

For normal operation with AC supplies up to 500 Vac and a standard motor with a good quality insulation system, there is no need for any special precautions. In case of doubt the motor supplier should be consulted. Special precautions are recommended under the following conditions, but only if the motor cable length exceeds 10 m:

- AC supply voltage exceeds 500 V
- DC supply voltage exceeds 670 V
- Operation of 400 V drive with continuous or very frequent sustained braking
- Multiple motors connected to a single drive

For multiple motors, the precautions given in section 4.4.4 *Multiple motors* on page 40 should be followed.

For the other cases listed, it is recommended that an inverter-rated motor be used taking into account the voltage rating of the inverter. This has a reinforced insulation system intended by the manufacturer for repetitive fast-rising pulsed voltage operation.

Users of 575 V NEMA rated motors should note that the specification for inverter-rated motors given in NEMA MG1 section 31 is sufficient for motoring operation but not where the motor spends significant periods braking. In that case an insulation peak voltage rating of 2.2 kV is recommended.

If it is not practical to use an inverter-rated motor, an output choke (inductor) should be used. The recommended type is a simple iron-cored component with a reactance of about 2 %. The exact value is not critical. This operates in conjunction with the capacitance of the motor cable to increase the rise-time of the motor terminal voltage and prevent excessive electrical stress.

4.4.4 Multiple motors

Open-loop only

If the drive is to control more than one motor, one of the fixed V/F modes should be selected (Pr 05.014 = Fixed or Squared). Make the motor connections as shown in Figure 4-7 and Figure 4-8. The maximum cable lengths in Table 4-10, Table 4-11 and Table 4-17 apply to the sum of the total cable lengths from the drive to each motor.

It is recommended that each motor is connected through a protection relay since the drive cannot protect each motor individually. For Δ connection, a sinusoidal filter or an output inductor must be connected as shown in Figure 4-8, even when the cable lengths are less than the maximum permissible. For details of inductor sizes refer to the supplier of the drive.

Figure 4-7 Preferred chain connection for multiple motors


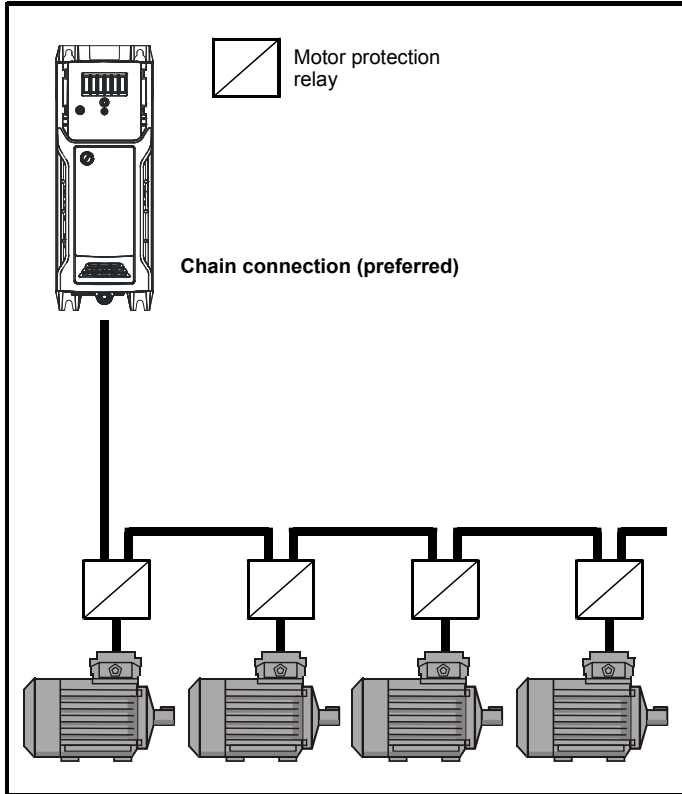


Figure 4-8 Alternative connection for multiple motors

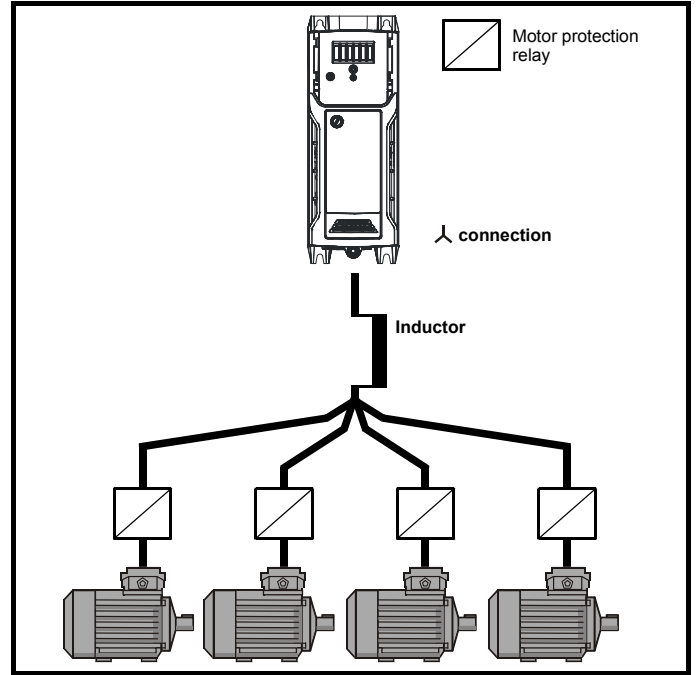

4.4.5 Δ / Δ motor operation

The voltage rating for Δ and Δ connections of the motor should always be checked before attempting to run the motor.

The default setting of the motor rated voltage parameter is the same as the drive rated voltage, i.e.

- 400 V drive 400 V rated voltage
- 230 V drive 230 V rated voltage

A typical 3 phase motor would be connected in Δ for 400 V operation or Δ for 230 V operation, however, variations on this are common e.g.

Δ 690 V Δ 400 V.

Incorrect connection of the windings will cause severe under or over fluxing of the motor, leading to a very poor output torque or motor saturation and overheating respectively.

4.4.6 Output contactor

WARNING If the cable between the drive and the motor is to be interrupted by a contactor or circuit breaker, ensure that the drive is disabled before the contactor or circuit breaker is opened or closed. Severe arcing may occur if this circuit is interrupted with the motor running at high current and low speed.

A contactor is sometimes required to be installed between the drive and motor for safety purposes.

The recommended motor contactor is the AC3 type.

Switching of an output contactor should only occur when the output of the drive is disabled.

Opening or closing of the contactor with the drive enabled will lead to:

1. OI ac trips (which cannot be reset for 10 seconds)
2. High levels of radio frequency noise emission
3. Increased contactor wear and tear

The Drive Enable terminal (T31 and T34) when opened provides a SAFE TORQUE OFF function. This can in many cases replace output contactors.

For further information see section 4.11 *SAFE TORQUE OFF (STO)* on page 57.

4.5 Braking

Braking occurs when the drive is decelerating the motor, or is preventing the motor from gaining speed due to mechanical influences. During braking, energy is returned to the drive from the motor.

When motor braking is applied by the drive, the maximum regenerated power that the drive can absorb is equal to the power dissipation (losses) of the drive.

When the regenerated power is likely to exceed these losses, the DC bus voltage of the drive increases. Under default conditions, the drive brakes the motor under PI control, which extends the deceleration time as necessary in order to prevent the DC bus voltage from rising above a user defined set-point.

If the drive is expected to rapidly decelerate a load, or to hold back an overhauling load, a braking resistor must be installed.

Table 4-12 shows the default DC voltage level at which the drive turns on the braking transistor. However the braking resistor turn on and the turn off voltages are programmable with *Braking IGBT Lower Threshold* (06.073) and *Braking IGBT Upper Threshold* (06.074).

Table 4-12 Default braking transistor turn on voltage

Drive voltage rating	DC bus voltage level
100 & 200 V	390 V
400 V	780 V

NOTE

When a braking resistor is used, Pr **02.004** should be set to Fast ramp mode.



High temperatures

Braking resistors can reach high temperatures. Locate braking resistors so that damage cannot result. Use cable having insulation capable of withstanding high temperatures.



Braking resistor overload protection parameter settings

Failure to observe the following information may damage the resistor.

The drive software contains an overload protection function for a braking resistor.

For more information on the braking resistor software overload protection, see Pr **10.030**, Pr **10.031** and Pr **10.061** full descriptions in the *Parameter Reference Guide*.

4.5.1 External braking resistor



Overload protection

When an external braking resistor is used, it is essential that an overload protection device is incorporated in the braking resistor circuit; this is described in Figure 4-9 on page 42.

When a braking resistor is to be mounted outside the enclosure, ensure that it is mounted in a ventilated metal housing that will perform the following functions:

- Prevent inadvertent contact with the resistor
- Allow adequate ventilation for the resistor

When compliance with EMC emission standards is required, external connection requires the cable to be armored or shielded, since it is not fully contained in a metal enclosure. See section 4.7.5 *Compliance with generic emission standards* on page 46 for further details.

Internal connection does not require the cable to be armored or shielded.

Minimum resistances and power ratings

Table 4-13 Minimum resistance values and peak power rating for the braking resistor at 40 °C (104 °F)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
100 V			
01100017	130	1.2	
01100024	130	1.2	
02100042	68	1.2	
02100056	68	1.2	
200 V			
01200017	130	1.2	
01200024	130	1.2	
01200033	130	1.2	
01200042	130	1.2	
02200024	68	2.2	
02200033	68	2.2	
02200042	68	2.2	
02200056	68	2.2	
02200075	68	2.2	
03200100	45	3.4	
04200133	22	6.9	
04200176	22	6.9	
400 V			
02400013	270	2.3	
02400018	270	2.3	
02400023	270	2.3	
02400032	270	2.3	
02400041	270	2.3	
03400056	100	6.1	
03400073	100	6.1	
03400094	100	6.1	
04400135	50	12.2	
04400170	50	12.2	

* Resistor tolerance: ±10 %

For high-inertia loads or under continuous braking, the *continuous power* dissipated in the braking resistor may be as high as the power rating of the drive. The total *energy* dissipated in the braking resistor is dependent on the amount of energy to be extracted from the load.

The instantaneous power rating refers to the short-term maximum power dissipated during the *on* intervals of the pulse width modulated braking control cycle. The braking resistor must be able to withstand this dissipation for short intervals (milliseconds). Higher resistance values require proportionately lower instantaneous power ratings.

In most applications, braking occurs only occasionally. This allows the continuous power rating of the braking resistor to be much lower than the power rating of the drive. It is therefore essential that the instantaneous power rating and energy rating of the braking resistor are sufficient for the most extreme braking duty that is likely to be encountered.


Optimization of the braking resistor requires careful consideration of the braking duty.

Select a value of resistance for the braking resistor that is not less than the specified minimum resistance. Larger resistance values may give a cost saving, as well as a safety benefit in the event of a fault in the braking system. Braking capability will then be reduced, which could cause the drive to trip during braking if the value chosen is too large.

Thermal protection circuit for the braking resistor

The thermal protection circuit must disconnect the AC supply from the drive if the resistor becomes overloaded due to a fault. Figure 4-9 shows a typical circuit arrangement.

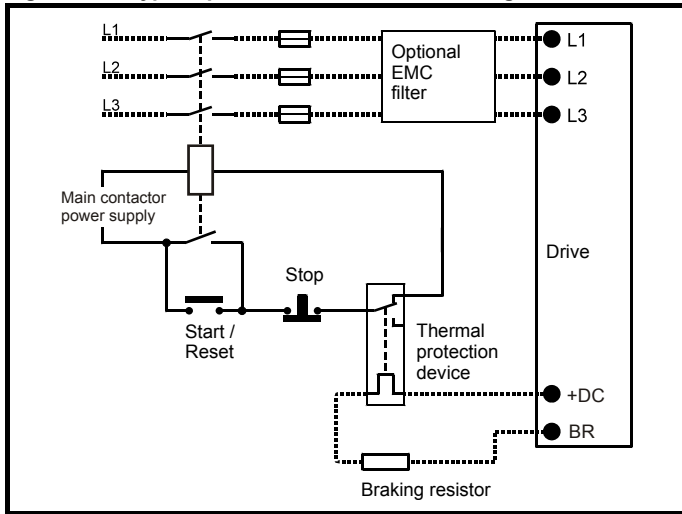Figure 4-9 Typical protection circuit for a braking resistor



See Figure 4-1 on page 32 and Figure 4-4 on page 34 for the location of the +DC and braking resistor connections.

4.5.2 Braking resistor software overload protection

The drive software contains an overload protection function for a braking resistor. In order to enable and set-up this function, it is necessary to enter three values into the drive:

- *Braking Resistor Rated Power* (10.030)
- *Braking Resistor Thermal Time Constant* (10.031)
- *Braking Resistor Resistance* (10.061)

This data should be obtained from the manufacturer of the braking resistors.

Pr **10.039** gives an indication of braking resistor temperature based on a simple thermal model. Zero indicates the resistor is close to ambient and 100 % is the maximum temperature the resistor can withstand. A 'Brake Resistor' alarm is given if this parameter is above 75 % and the braking IGBT is active. A Brake R Too Hot trip will occur if Pr **10.039** reaches 100 %, when Pr **10.037** is set to 0 (default value) or 1.

If Pr **10.037** is equal to 2 or 3, a Brake R Too Hot trip will not occur when Pr **10.039** reaches 100 %, but instead the braking IGBT will be disabled until Pr **10.039** falls below 95 %. This option is intended for applications with parallel connected DC buses where there are several braking resistors, each of which cannot withstand full DC bus voltage continuously. With this type of application it is unlikely the braking energy will be shared equally between the resistors because of voltage measurement tolerances within the individual drives. Therefore with Pr **10.037** set to 2 or 3, then as soon as a resistor has reached its maximum temperature the drive will disable the braking IGBT, and another resistor on another drive will take up the braking energy. Once Pr **10.039** has fallen below 95 % the drive will allow the braking IGBT to operate again.

See the *Parameter Reference Guide* for more information on Pr **10.030**, Pr **10.031**, Pr **10.037** and Pr **10.039**.

This software overload protection should be used in addition to an external overload protection device.

4.6 Ground leakage

The ground leakage current depends upon whether the internal EMC filter is installed or not. The drive is supplied with the filter installed. Instructions for removing the internal filter are given in 4.7.2 *Internal EMC filter* on page 43.

With internal filter installed:

- Size 1:** 2.5 mA* AC at 230 V 50 Hz (line to line supply, star point ground)
9.2 mA* AC at 230 V 50 Hz (line to neutral supply, star point ground)
- Size 3:** 19.7 mA* AC at 400 V 50 Hz (star point ground)
47.4 mA* AC at 400 V 50 Hz (corner ground)
- Size 4:** 21 mA* AC at 230 V 50 Hz (3 phase, star point ground)
6.8 mA* AC at 230 V 50 Hz (1 phase, line to line supply, star point ground)
30 mA* AC at 230 V 50 Hz (1 phase, line to neutral supply, star point ground)
50 mA* AC at 400 V 50 Hz (3 phase, star point ground)

*Proportional to the supply voltage and frequency.

With internal filter removed:

- Size 1:** <1.5 mA (line to line supply, star point ground)
<1 mA (line to neutral supply, star point ground)
- Size 3:** <3.3 mA (star point ground)
<4.9 mA (corner ground)
- Size 4:** < 3.5 mA (star point ground)

NOTE

The above leakage currents are just the leakage currents of the drive with the internal EMC filter connected and do not take into account any leakage currents of the motor or motor cable.



When the internal filter is installed the leakage current is high. In this case a permanent fixed ground connection must be provided, or other suitable measures taken to prevent a safety hazard occurring if the connection is lost.



When the leakage current exceeds 3.5 mA, a permanent fixed ground connection must be provided using two independent conductors each with a cross-section equal to or exceeding that of the supply conductors. The drive is provided with two ground connections to facilitate this. Both ground connections are necessary to meet EN 61800-5-1: 2007.

4.6.1 Use of residual current device (RCD)

There are three common types of ELCB / RCD:

1. AC - detects AC fault currents
2. A - detects AC and pulsating DC fault currents (provided the DC current reaches zero at least once every half cycle)
3. B - detects AC, pulsating DC and smooth DC fault currents
 - Type AC should never be used with drives.
 - Type A can only be used with single phase drives
 - Type B must be used with three phase drives



Only type B ELCB / RCD are suitable for use with 3 phase inverter drives.

If an external EMC filter is used, a delay of at least 50 ms should be incorporated to ensure spurious trips are not seen. The leakage current is likely to exceed the trip level if all of the phases are not energized simultaneously.

4.7 EMC (Electromagnetic compatibility)

The requirements for EMC are divided into three levels in the following three sections:

Section 4.10.3, General requirements for all applications, to ensure reliable operation of the drive and minimise the risk of disturbing nearby equipment. The immunity standards specified in Chapter 12 *Technical data* on page 159 will be met, but no specific emission standards are applied. Note also the special requirements given in *Surge immunity of control circuits - long cables and connections outside a building* on page 48 for increased surge immunity of control circuits where control wiring is extended.

Section 4.7.4, Requirements for meeting the EMC standard for power drive systems, IEC61800-3 (EN 61800-3:2004).

Section 4.7.5, Requirements for meeting the generic emission standards for the industrial environment, IEC61000-6-4, EN 61000-6-4:2007.

The recommendations of section 4.7.3 will usually be sufficient to avoid causing disturbance to adjacent equipment of industrial quality. If particularly sensitive equipment is to be used nearby, or in a non-industrial environment, then the recommendations of section 4.7.4 or section 4.7.5 should be followed to give reduced radio-frequency emission.

In order to ensure the installation meets the various emission standards described in:

- The EMC data sheet available from the supplier of the drive
- The Declaration of Conformity at the front of this manual
- Chapter 12 *Technical data* on page 159

The correct external EMC filter must be used and all of the guidelines in section 4.7.3 *General requirements for EMC* on page 45 and section 4.7.5 *Compliance with generic emission standards* on page 46 must be followed.

Table 4-14 Drive and EMC filter cross reference

Model	CT Part number
200 V	
400 V	



High ground leakage current

When an EMC filter is used, a permanent fixed ground connection must be provided which does not pass through a connector or flexible power cord. This includes the internal EMC filter.

NOTE

The installer of the drive is responsible for ensuring compliance with the EMC regulations that apply in the country in which the drive is to be used.


4.7.1 Grounding hardware

The drive is supplied with a grounding bracket to facilitate EMC compliance. This provides a convenient method for direct grounding of cable shields without the use of "pig-tails". Cable shields can be bared and clamped to the grounding bracket using metal clips or clamps¹ (not supplied) or cable ties. Note that the shield must in all cases be continued through the clamp to the intended terminal on the drive, in accordance with the connection details for the specific signal.

¹ A suitable clamp is the Phoenix DIN rail mounted SK14 cable clamp (for cables with a maximum outer diameter of 14 mm).

See Figure 4-10 for details regarding the installation of the grounding bracket.

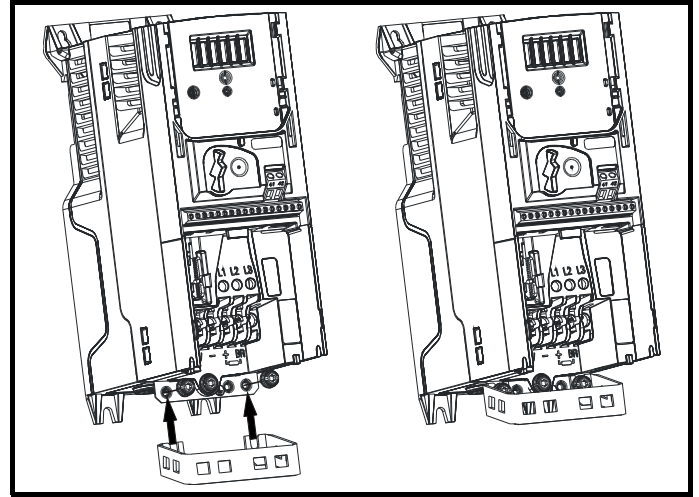Figure 4-10 Installation of grounding bracket



4.7.2 Internal EMC filter

It is recommended that the internal EMC filter be kept in place unless there is a specific reason for removing it.

If the drive is used as a motoring drive as part of a regen system, then the internal EMC filter must be removed.


The internal EMC filter reduces radio-frequency emission into the line power supply. Where the motor cable is short, it permits the requirements of EN 61800-3:2004 to be met for the second environment - see section 4.7.4 *Compliance with EN 61800-3:2004 (standard for Power Drive Systems)* on page 46 and section 12.1.26 *Electromagnetic compatibility (EMC)* on page 169. For longer motor cables the filter continues to provide a useful reduction in emission levels, and when used with any length of shielded motor cable up to the limit for the drive, it is unlikely that nearby industrial equipment will be disturbed. It is recommended that the filter be used in all applications unless the instructions given above require it to be removed, or where the ground leakage current of 28 mA for size 1 is unacceptable. As shown in Figure 4-11 to Figure 4-14 the size 1 internal EMC filter is removed by removing the screw (1).



The supply must be disconnected before removing the internal EMC filter.


WARNING

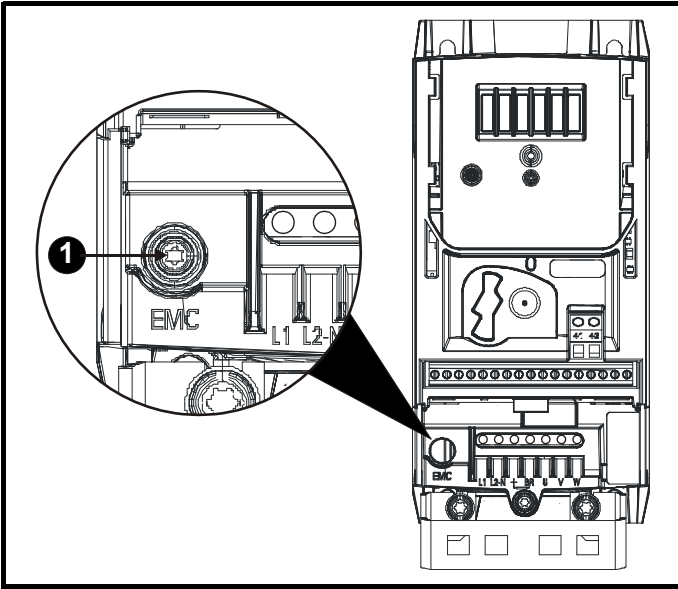Figure 4-11 Removal of the size 1 internal EMC filter




To electrically disconnect the internal EMC filter, remove the screw as shown above (1).

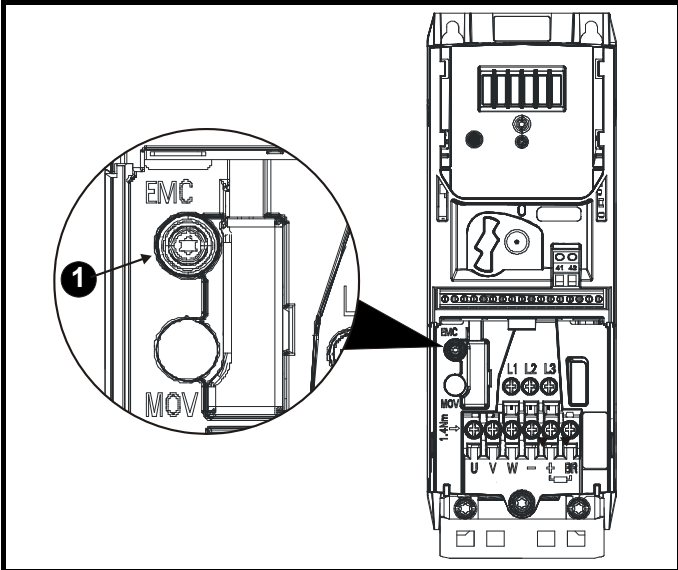Figure 4-12 Removal of the size 2 internal EMC filter




To electrically disconnect the internal EMC filter, remove the screw as shown above (1).

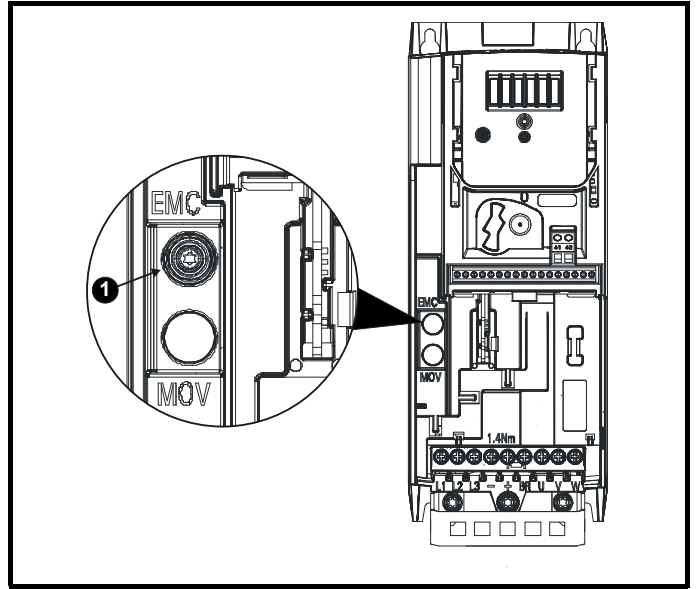Figure 4-13 Removal of the size 3 internal EMC filter



To electrically disconnect the internal EMC filter, remove the screw as shown above (1).

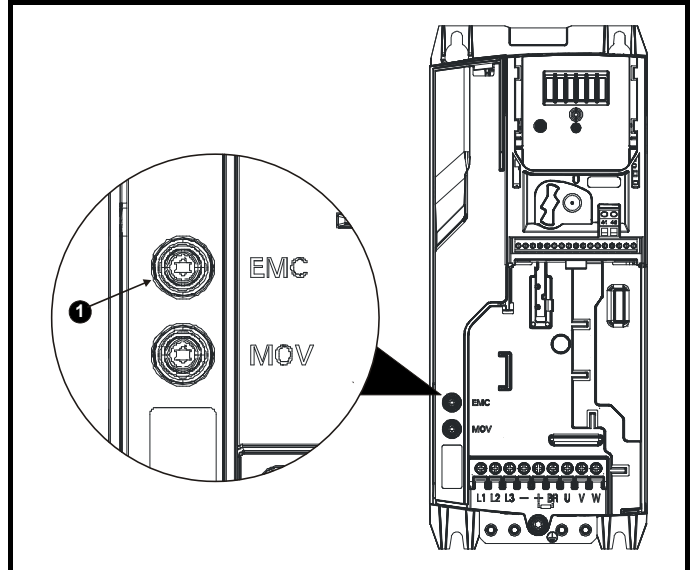Figure 4-14 Removal of the size 4 internal EMC filter



To electrically disconnect the internal EMC filter, remove the screw as shown above (1).


4.7.3 General requirements for EMC

Ground (earth) connections

The grounding arrangements should be in accordance with Figure 4-15, which shows a single drive on a back-plate with or without an additional enclosure.

Figure 4-15 shows how to configure and minimise EMC when using unshielded motor cable. However shielded cable is a better option, in which case it should be installed as shown in section 4.7.5 *Compliance with generic emission standards* on page 46.

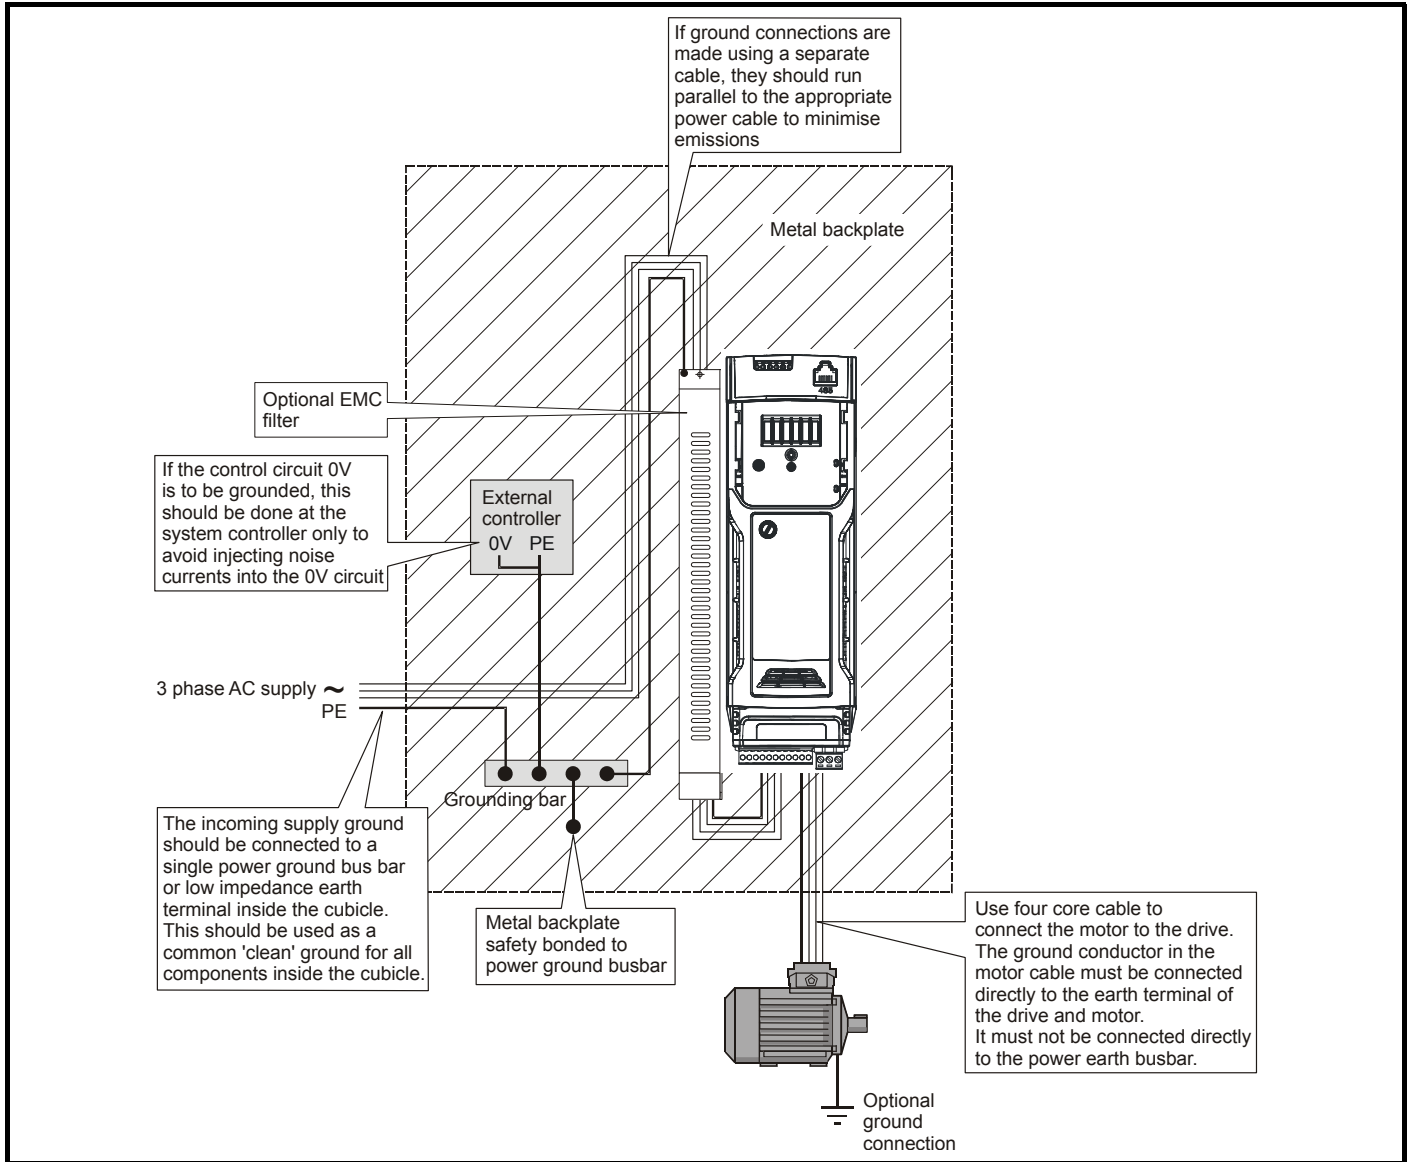
Figure 4-15 General EMC enclosure layout showing ground connections



Cable layout

Figure 4-16 indicates the clearances which should be observed around the drive and related 'noisy' power cables by all sensitive control signals / equipment.

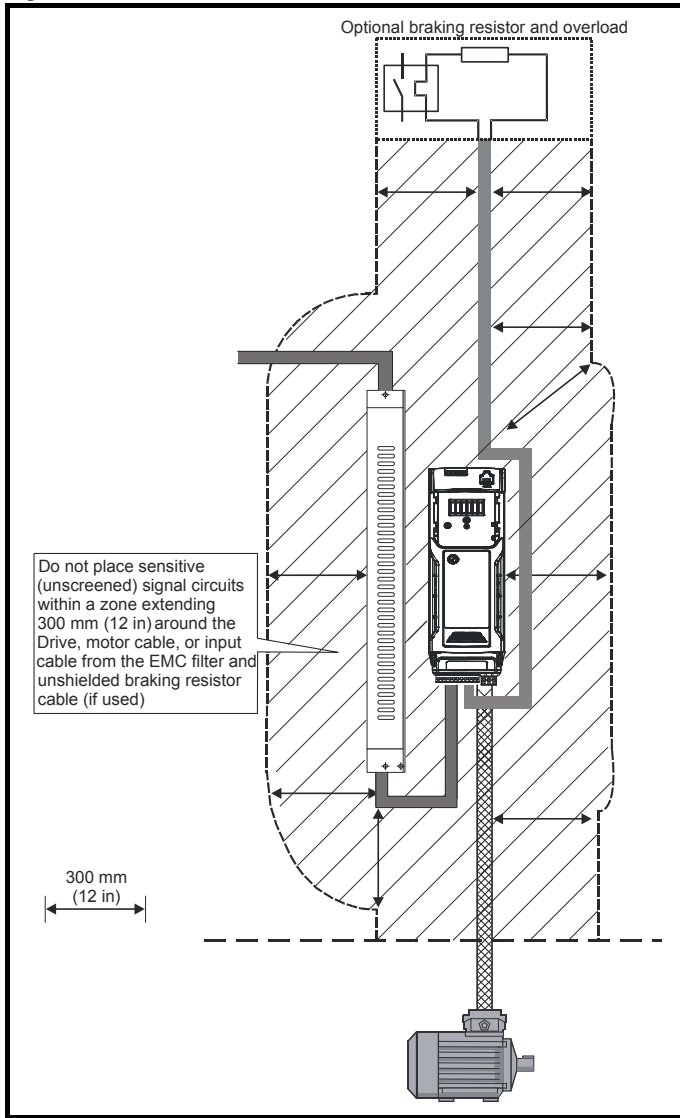Figure 4-16 Drive cable clearances



NOTE

Any signal cables which are carried inside the motor cable (i.e. motor thermistor, motor brake) will pick up large pulse currents via the cable capacitance. The shield of these signal cables must be connected to ground close to the motor cable, to avoid this noise current spreading through the control system.

4.7.4 Compliance with EN 61800-3:2004 (standard for Power Drive Systems)

Meeting the requirements of this standard depends on the environment that the drive is intended to operate in, as follows:

Operation in the first environment

Observe the guidelines given in section 4.7.5 *Compliance with generic emission standards* on page 46. An external EMC filter will always be required.

This is a product of the restricted distribution class according to IEC 61800-3

In a residential environment this product may cause radio interference in which case the user may be required to take adequate measures.

Operation in the second environment

In all cases a shielded motor cable must be used, and an EMC filter is required for all drives with a rated input current of less than 100 A.

The drive contains an in-built filter for basic emission control. In some cases feeding the motor cables (U, V and W) once through a ferrite ring can maintain compliance for longer cable lengths.

For longer motor cables, an external filter is required. Where a filter is required, follow the guidelines in Section 4.7.5 *Compliance with generic emission standards*.

Where a filter is not required, follow the guidelines given in section 4.7.3 *General requirements for EMC* on page 45.

The second environment typically includes an industrial low-voltage power supply network which does not supply buildings used for residential purposes. Operating the drive in this environment without an external EMC filter may cause interference to nearby electronic equipment whose sensitivity has not been appreciated. The user must take remedial measures if this situation arises. If the consequences of unexpected disturbances are severe, it is recommended that the guidelines in Section 4.7.5 *Compliance with generic emission standards* be adhered to.

Refer to section 12.1.26 *Electromagnetic compatibility (EMC)* on page 169 for further information on compliance with EMC standards and definitions of environments.


Detailed instructions and EMC information are given in the *EMC Data Sheet* which is available from the supplier of the drive.

4.7.5 Compliance with generic emission standards

The following information applies to frame sizes 1 to 4.


Use the recommended filter and shielded motor cable. Observe the layout rules given in Figure 4-17. Ensure the AC supply and ground cables are at least 100 mm from the power module and motor cable.

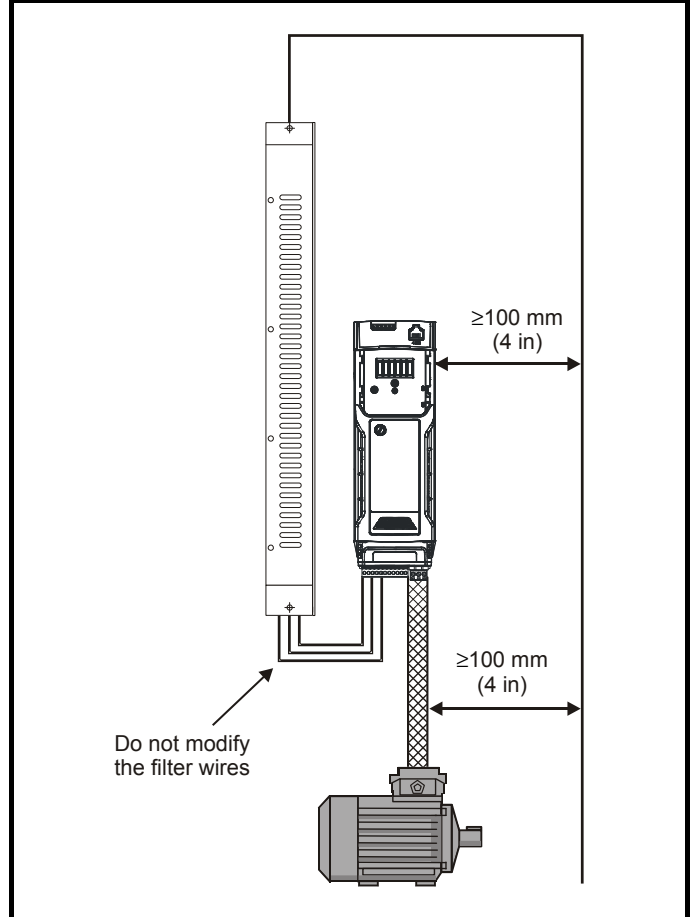Figure 4-17 Supply and ground cable clearance (sizes 1 to 4)




Avoid placing sensitive signal circuits in a zone 300 mm (12 in) in the area immediately surrounding the power module.

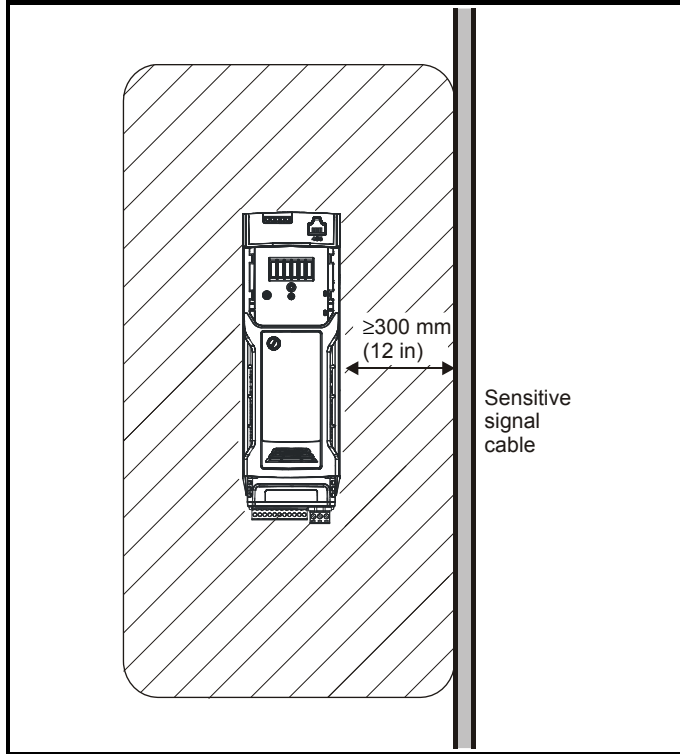Figure 4-18 Sensitive signal circuit clearance



Ensure good EMC grounding.

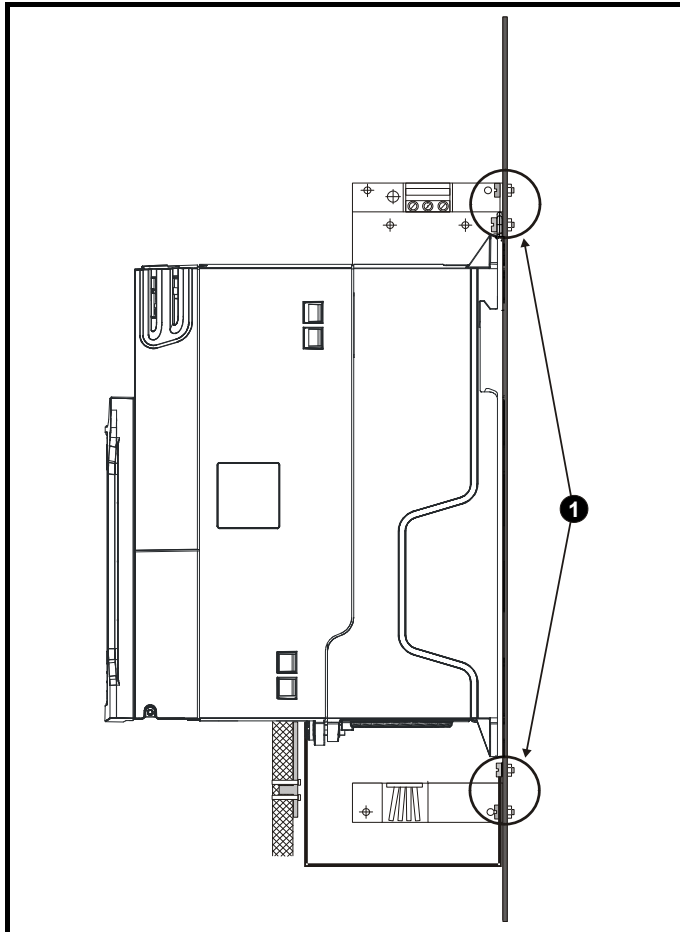Figure 4-19 Grounding the drive, motor cable shield and filter



NOTE

1 Ensure direct metal contact at the drive and filter mounting points. Any paint must be removed beforehand.


The unbroken motor cable shield (unbroken) electrically connected to and held in place by means of the grounding bracket.

Connect the shield of the motor cable to the ground terminal of the motor frame using a link that is as short as possible and not exceeding 50 mm (2 in) long.

A complete 360° termination of the shield to the terminal housing of the motor is beneficial.


From an EMC consideration it is irrelevant whether the motor cable contains an internal (safety) ground core, or if there is a separate external ground conductor, or where grounding is through the shield alone. An internal ground core will carry a high noise current and therefore it must be terminated as close as possible to the shield termination.

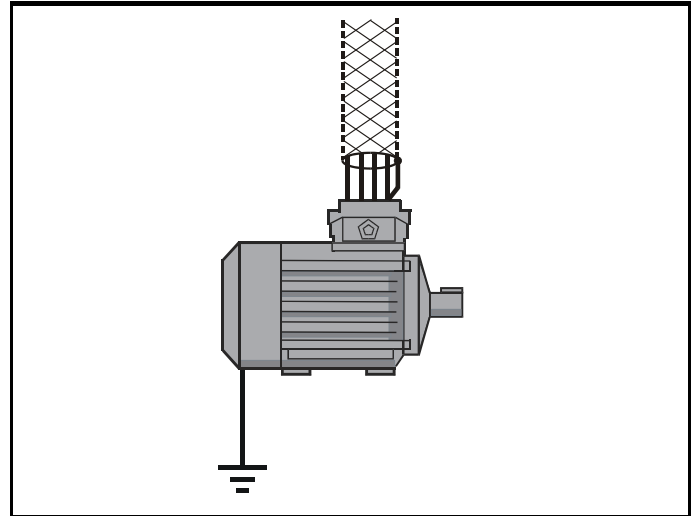Figure 4-20 Grounding the motor cable shield



Unshielded wiring to the optional braking resistor(s) may be used provided the wiring runs internally to the enclosure. Ensure a minimum spacing of 300 mm (12 in) from the signal wiring and the AC supply wiring to the external EMC filter. If this condition cannot be met then the wiring must be shielded.

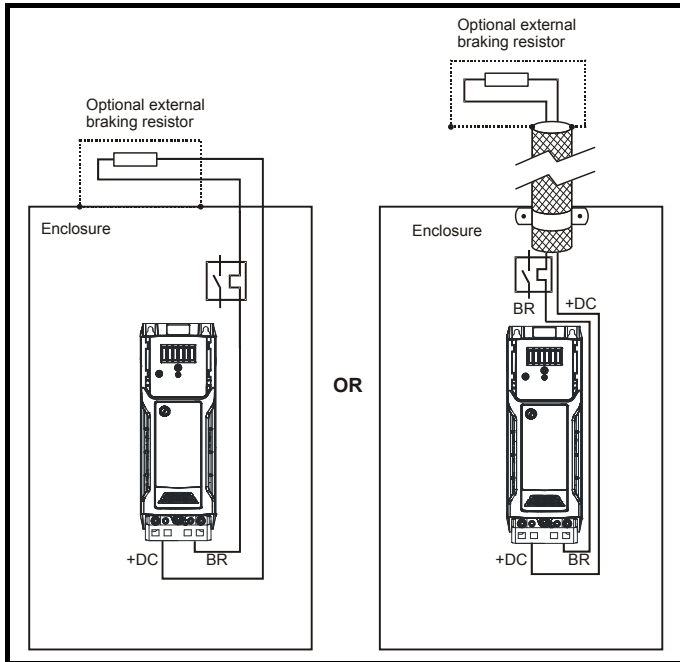
Figure 4-21 Shielding requirements of optional external braking resistor



If the control wiring is to leave the enclosure, it must be shielded and the shield(s) clamped to the drive using the grounding bracket as shown in Figure 4-22. Remove the outer insulating cover of the cable to ensure the shield(s) make direct contact with the bracket, but keep the shield(s) intact until as close as possible to the terminals

Alternatively, wiring may be passed through a ferrite ring, part number 3225-1004.

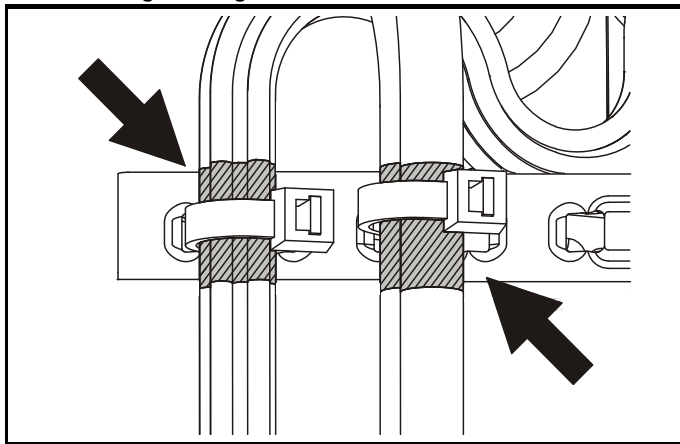Figure 4-22 Grounding of signal cable shields using the grounding bracket



4.7.6 Variations in the EMC wiring Interruptions to the motor cable

The motor cable should ideally be a single length of shielded or armored cable having no interruptions. In some situations it may be necessary to interrupt the cable, as in the following examples:


- Connecting the motor cable to a terminal block in the drive enclosure
- Installing a motor isolator / disconnect switch for safety when work is done on the motor

In these cases the following guidelines should be followed.

Terminal block in the enclosure

The motor cable shields should be bonded to the back-plate using uninsulated metal cable-clamps which should be positioned as close as possible to the terminal block. Keep the length of power conductors to a minimum and ensure that all sensitive equipment and circuits are at least 0.3 m (12 in) away from the terminal block.

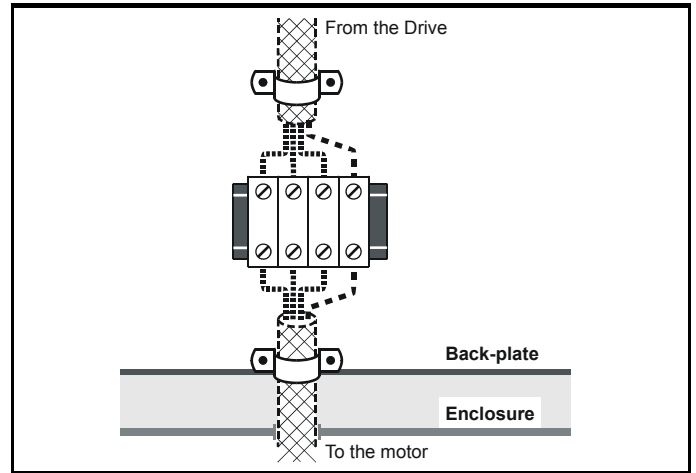Figure 4-23 Connecting the motor cable to a terminal block in the enclosure




Using a motor isolator / disconnect-switch

The motor cable shields should be connected by a very short conductor having a low inductance. The use of a flat metal coupling-bar is recommended; conventional wire is not suitable.

The shields should be bonded directly to the coupling-bar using uninsulated metal cable-clamps. Keep the length of the exposed power conductors to a minimum and ensure that all sensitive equipment and circuits are at least 0.3 m (12 in) away.

The coupling-bar may be grounded to a known low-impedance ground nearby, for example a large metallic structure which is connected closely to the drive ground.

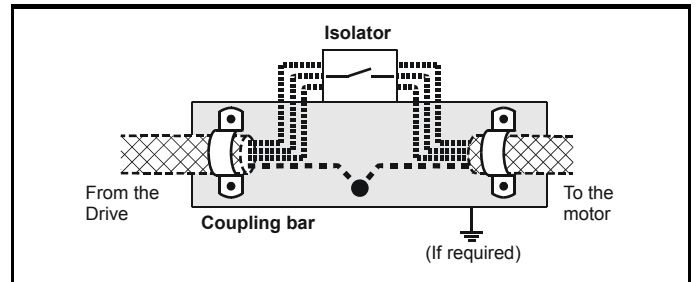Figure 4-24 Connecting the motor cable to an isolator / disconnect switch



Surge immunity of control circuits - long cables and connections outside a building

The input/output ports for the control circuits are designed for general use within machines and small systems without any special precautions.

These circuits meet the requirements of EN 61000-6-2:2005 (1 kV surge) provided the 0 V connection is not grounded.

In applications where they may be exposed to high-energy voltage surges, some special measures may be required to prevent malfunction or damage. Surges may be caused by lightning or severe power faults in association with grounding arrangements which permit high transient voltages between nominally grounded points. This is a particular risk where the circuits extend outside the protection of a building.

As a general rule, if the circuits are to pass outside the building where the drive is located, or if cable runs within a building exceed 30 m, some additional precautions are advisable. One of the following techniques should be used:

1. Galvanic isolation, i.e. do not connect the control 0 V terminal to ground. Avoid loops in the control wiring, i.e. ensure every control wire is accompanied by its return (0 V) wire.
2. Shielded cable with additional power ground bonding. The cable shield may be connected to ground at both ends, but in addition the ground conductors at both ends of the cable must be bonded together by a power ground cable (equipotential bonding cable) with cross-sectional area of at least 10 mm², or 10 times the area of the signal cable shield, or to suit the electrical safety requirements of the plant. This ensures that fault or surge current passes mainly through the ground cable and not in the signal cable shield. If the building or plant has a well-designed common bonded network this precaution is not necessary.
3. Additional over-voltage suppression - for the analog and digital inputs and outputs, a zener diode network or a commercially available surge suppressor may be connected in parallel with the input circuit as shown in Figure 4-25 and Figure 4-26.

If a digital port experiences a severe surge its protective trip may operate (O.Ld1 trip). For continued operation after such an event, the trip can be reset automatically by setting Pr 10.034 to 5.

Figure 4-25 Surge suppression for digital and unipolar inputs and outputs


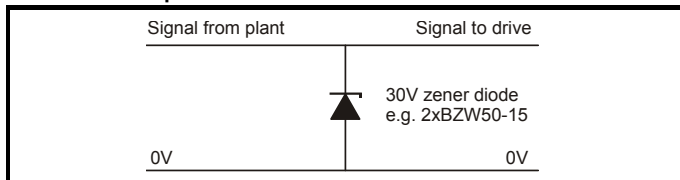


Figure 4-26 Surge suppression for analog and bipolar inputs and outputs

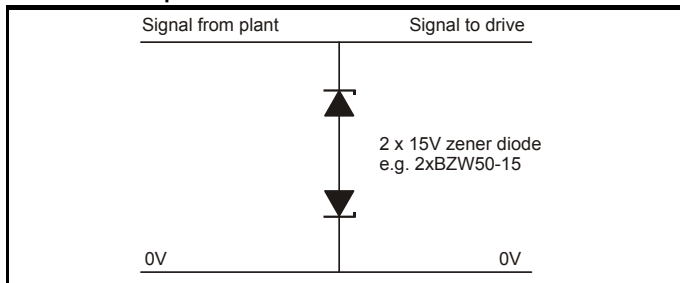

Surge suppression devices are available as rail-mounting modules, e.g. from Phoenix Contact:


- Unipolar TT-UKK5-D/24 DC
- Bipolar TT-UKK5-D/24 AC

These devices are not suitable for encoder signals or fast digital data networks because the capacitance of the diodes adversely affects the signal. Most encoders have galvanic isolation of the signal circuit from the motor frame, in which case no precautions are required. For data networks, follow the specific recommendations for the particular network.

4.8 Communications connections

Fitting an AI-485 adaptor provides the drive with a 2 wire 485 serial communications interface. This enables the drive set-up, operation and monitoring to be carried out with a PC or controller as required.

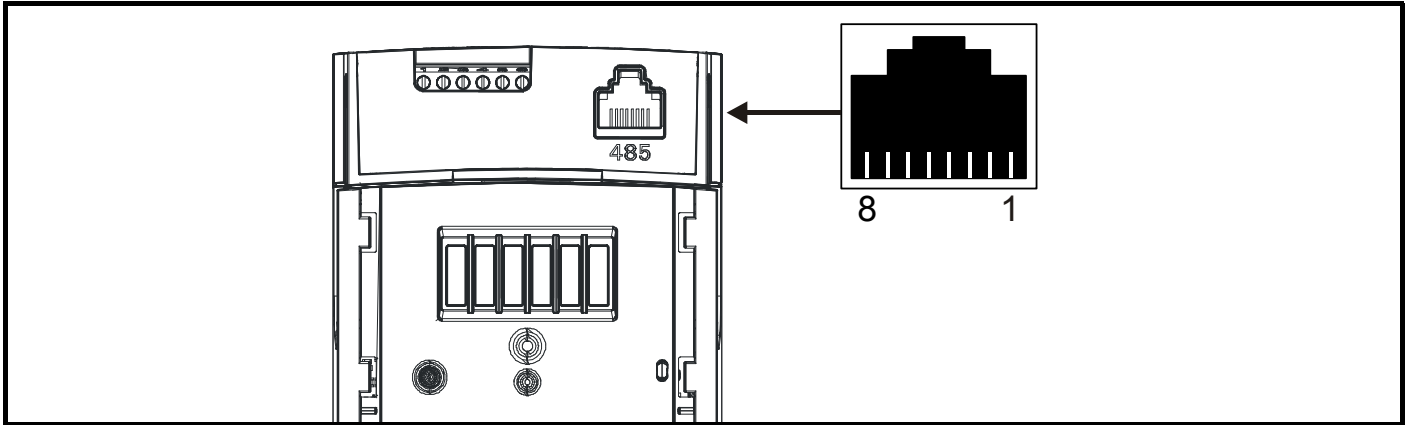
Figure 4-27 Location of the AI-485 adaptor option



4.9 Mounting the AI-485 adaptor

The AI-485 adaptor is a removable option installed to the top of a drive as shown in Figure 4-28.

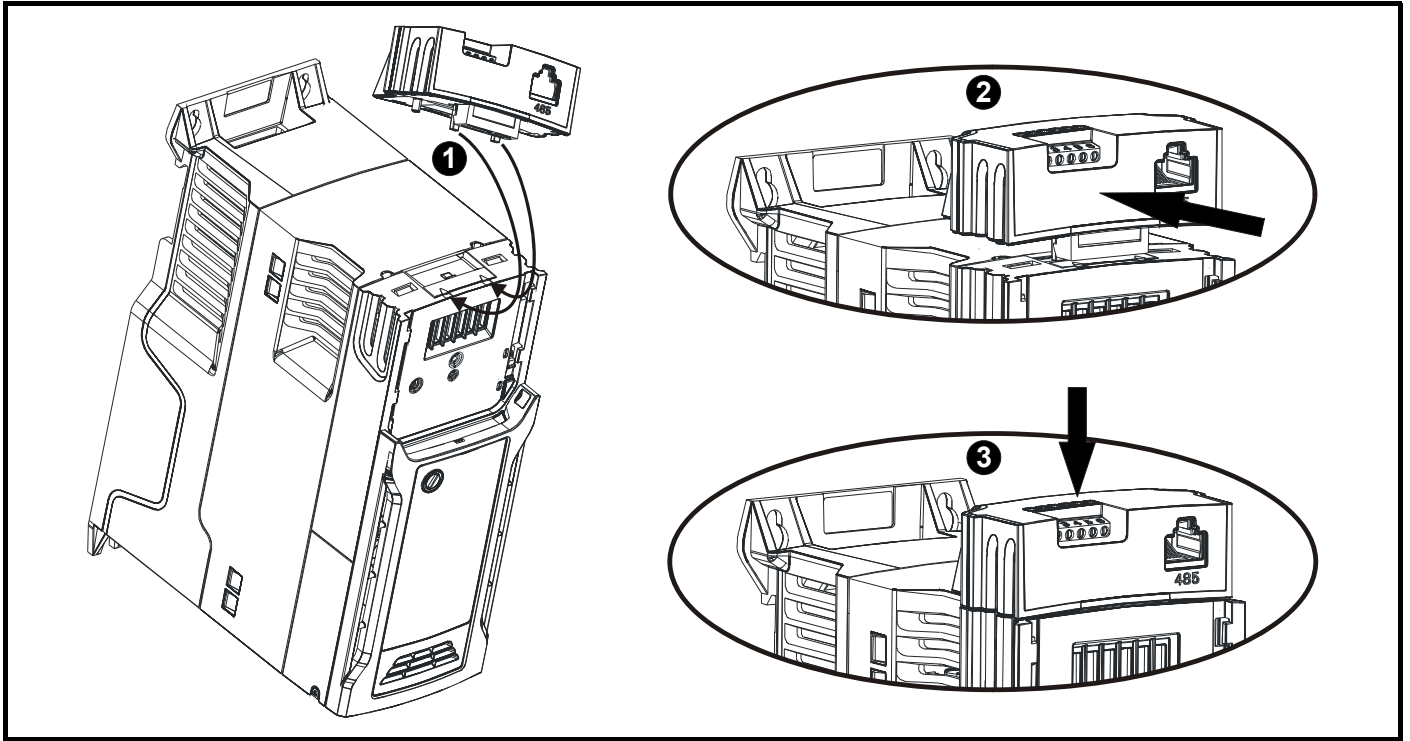Figure 4-28 Mounting the AI-485 adaptor to the drive (size 2 shown).



1. Identify the two plastic fingers on the underside of the AI-485 adaptor (1) - then insert the two fingers into the corresponding slots in the spring-loaded sliding cover on the top of the drive.
2. Hold the adaptor firmly and push the spring loaded protective cover towards the back of the drive to expose the connector block (2) below.
3. Press the adaptor downwards (3) until the adaptor connector mates with the drive connection below.

4.9.1 485 serial communications

The drive only supports Modbus RTU protocol. See Table 4-15 for the connection details.

NOTE

Standard Ethernet cables are not recommended for use when connecting drives on a 485 network as they do not have the correct twisted pairs for the pinout of the serial comms port.

Table 4-15 Serial communication port pin-outs (AI-485 adaptor)

Pin	Function
1	120 Ω Termination resistor
2	RX TX
3	0 V
4	+24 V (100 mA)
5	Not connected
6	TX enable
7	RX\ TX\
8	RX\ TX\ (if termination resistors are required, link to pin 1)

Minimum number of connections are 2, 3, 7 and shield.

Table 4-16 Serial communication port pin-outs (screw terminal block)

Pin	Function
1	+24 V (100 mA)
2	TX Enable
3	120 Ω Termination resistor
4	RX TX
5	RX\ TX\
6	0 V

4.9.2 Isolation of the 485 serial communications port

The serial PC communications port is single insulated and meets the requirements for ELV.



WARNING

When using the communications port with a personal computer or centralised controller e.g. PLC, an isolation device must be included with a rated voltage at least equal to the drive supply voltage. Ensure that the correct fuses are installed at the drive input, and that the drive is connected to the correct supply voltage.

If a serial communications converter other than the CT Comms cable is used to connect to other circuits classified as Safety Extra Low Voltage (SELV) (e.g. to a personal computer), then a safety isolating barrier must be included to maintain the SELV classification.

An isolated serial communications lead has been designed to connect the drive to IT equipment (such as laptop computers), and is available from the supplier of the drive. See below for details:

Table 4-17 Isolated serial comms lead details

Part number	Description
4500-0096	CT USB Comms cable

The "isolated serial communications" lead has reinforced insulation as defined in IEC60950 for altitudes up to 3,000 m.

4.10 Control connections

4.10.1 General

Table 4-18 The control connections consist of:

Function	Qty	Control parameters available	Terminal number
Single ended analog input	2	Mode, offset, invert, scaling, destination	2, 3, 5
Analog output	2	Source, mode, scaling	7, 8
Digital input	5	Destination, invert, logic select	12, 13, 14, 15, 16
Digital input / output	2	Input / output mode select, destination / source, invert, logic select	10, 11
Relay	1	Source, invert	41, 42
Drive enable (SAFE TORQUE OFF)	2		31, 34
+ 10 V User output	1		4
+ 24 V User output	2		9, 17
0V common	2		1, 6
0V SAFE TORQUE OFF	2		32, 33

NOTE

The 0V terminals on the SAFE TORQUE OFF are isolated from each other and the 0V common.

Key:

Destination parameter:	Indicates the parameter which is being controlled by the terminal / function
Source parameter:	Indicates the parameter being output by the terminal
Mode parameter:	Analog - indicates the mode of operation of the terminal, i.e. voltage 0-10 V, current 4-20 mA etc. Digital - indicates the mode of operation of the terminal, (the Drive Enable terminal is fixed in positive logic).

All analog terminal functions can be programmed in menu 7.

All digital terminal functions (including the relay) can be programmed in menu 8.



WARNING

The control circuits are isolated from the power circuits in the drive by basic insulation (single insulation) only. The installer must ensure that the external control circuits are insulated from human contact by at least one layer of insulation (supplementary insulation) rated for use at the AC supply voltage.



WARNING

If the control circuits are to be connected to other circuits classified as Safety Extra Low Voltage (SELV) (e.g. to a personal computer), an additional isolating barrier must be included in order to maintain the SELV classification.



CAUTION

If any of the digital inputs (including the drive enable input) are connected in parallel with an inductive load (i.e. contactor or motor brake) then suitable suppression (i.e. diode or varistor) should be used on the coil of the load. If no suppression is used then over voltage spikes can cause damage to the digital inputs and outputs on the drive. Ensure the logic sense is correct for the control circuit to be used. Incorrect logic sense could cause the motor to be started unexpectedly. Positive logic is the default state for the drive.



Ensure the logic sense is correct for the control circuit to be used. Incorrect logic sense could cause the motor to be started unexpectedly. Positive logic is the default state for the drive.

WARNING

NOTE

Any signal cables which are carried inside the motor cable (i.e. motor thermistor, motor brake) will pick up large pulse currents via the cable capacitance. The shield of these signal cables must be connected to ground close to the point of exit of the motor cable, to avoid this noise current spreading through the control system.

NOTE

The SAFE TORQUE OFF drive enable terminals are positive logic input only (see Figure 4-30 on page 52).

Figure 4-29 Default terminal functions


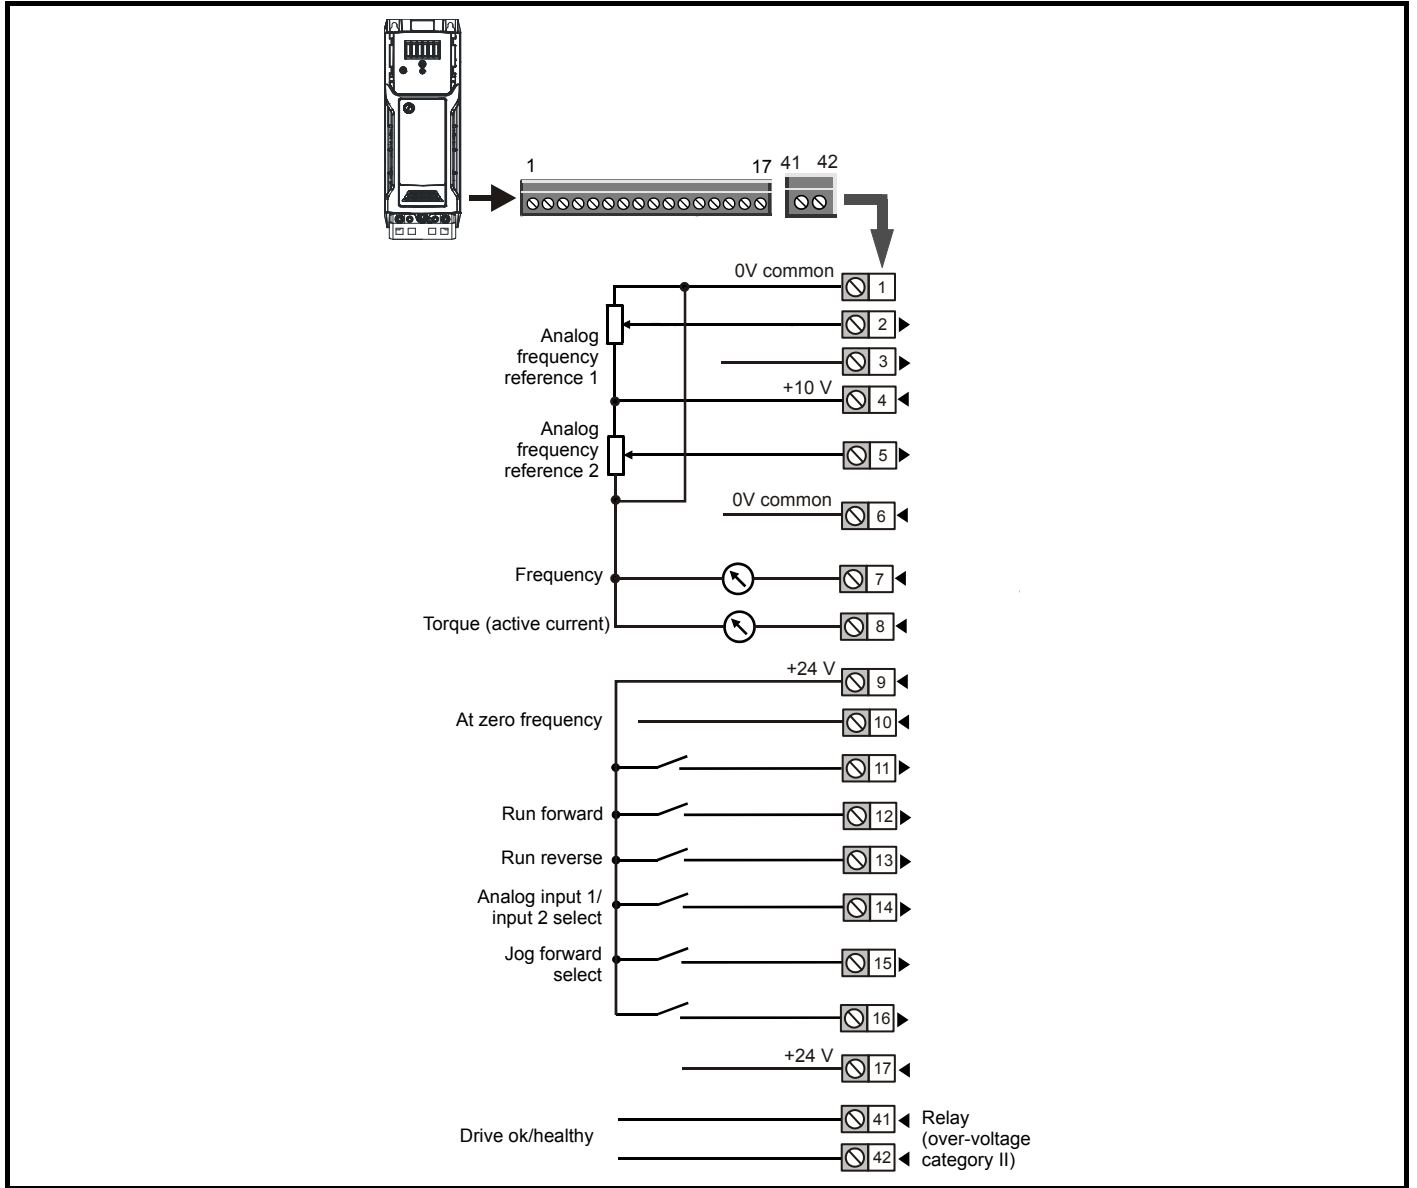


Figure 4-30 Safe Torque Off inputs

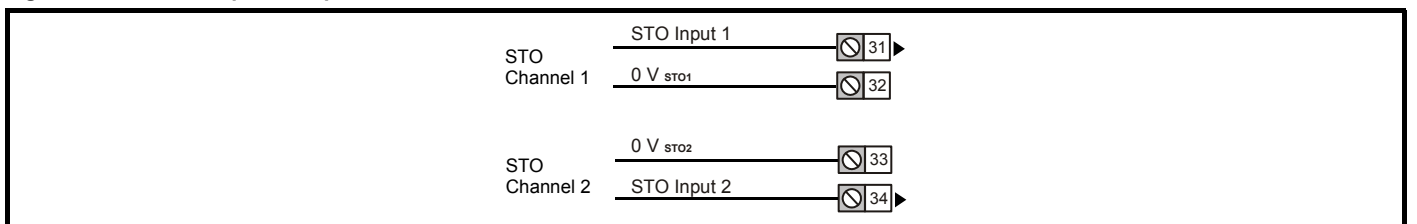

4.10.2 Control terminal specification

1	0V common
Function	Common connection for all external devices.

2	Analog input 1
Default function	Frequency reference.
Type of input	Bipolar single-ended analog voltage or unipolar differential current.
Mode controlled by...	Pr 07.007
Operating in voltage mode (default)	
Full scale voltage range	$\pm 10 \text{ V} \pm 3 \%$
Maximum offset	$\pm 30 \text{ mV}$
Absolute maximum voltage range	-18 V to +30 V relative to 0 V
Input resistance	100k Ω
Resolution	12 bits (11 bits plus sign)
Operating in current mode	
Current ranges	0 to 20 mA $\pm 5 \%$, 20 to 0 mA $\pm 5 \%$, 4 to 20mA $\pm 5 \%$, 20 to 4mA $\pm 5 \%$
Maximum offset	250 μA
Absolute maximum voltage (reverse bias)	-18 V to +30 V relative to 0 V
Resolution	11 bits
Common to all modes	
Sample / update	5 ms

3	Analog input 1 return
Function	Return terminal for shunt resistor (current mode)

4	+10 V user output
Function	Supply for external analog devices.
Nominal voltage	10.2 V
Voltage tolerance	$\pm 3 \%$
Maximum output current	5 mA

5	Analog input 2
Default function	
Type of input	Unipolar single-ended analog voltage, unipolar single-ended current or digital input (positive or negative logic).
Mode controlled by....	Pr 07.011
Operating in voltage mode (default)	
Full scale voltage range	0 V to +10 V $\pm 3\%$
Maximum offset	± 30 mV
Absolute maximum voltage range	-18 V to +30 V relative to 0 V
Input resistance	100 k Ω
Resolution	11 bits
Sample / update period	5 ms
Operating in current mode	
Current ranges	0 to 20 mA $\pm 4\%$, 20 to 0 mA $\pm 4\%$, 4 to 20 mA $\pm 4\%$, 20 to 4 mA $\pm 4\%$
Maximum offset	250 μ A
Absolute maximum applied voltage (reverse bias)	-18 V to +30 V relative to 0 V
Resolution	11 bits
Sample / update period	5 ms
Operating in digital mode	
Logic mode controlled by...	Pr 08.010
Absolute maximum applied voltage range	-18 V to +30 V relative to 0 V
Impedance	6.8 k Ω
Input threshold	10 V ± 0.8 V from IEC 61131-2
Sample / update period	2 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 6 ms.

6	0V common
Function	Common connection for all external devices

7	Analog output 1
8	Analog output 2
Terminal 7 default function	
Terminal 8 default function	
Type of output	Unipolar single-ended analog voltage, unipolar single-ended current or digital output.
Mode controlled by...	Pr 07.021 , Pr 07.024
Operating in voltage mode (default)	
Voltage range	0 to +10 V $\pm 5\%$
Maximum offset	15 mV
Minimum load resistance	500 Ω
Protection	Short circuit relative to 0 V
Operating in current mode	
Current ranges	0 to 20 mA $\pm 4\%$, 4 to 20 mA $\pm 4\%$
Maximum load resistance	500 Ω
Operating in digital output mode	
Nominal maximum output current	50 mA
Voltage range	0 V to +24 V
Common to all modes	
Resolution	0.1 %
Sample / update period	5 ms

9	+24 V user output
Function	Supply for external digital devices
Voltage tolerance	±20 %
Maximum output current	200 mA (total including all Digital Outputs)
Protection	Current limit and trip

10	Digital I/O 1
11	Digital I/O 2
Terminal 10 default function	AT ZERO FREQUENCY output
Terminal 11 default function	None
Type	Positive or negative logic digital inputs, positive logic voltage source outputs. PWM or frequency output modes can be selected on output 1.
Input / output mode controlled by ...	Pr 08.031 , Pr 08.032
Operating as in input	
Logic mode controlled by...	Pr 08.010
Absolute maximum applied voltage range	-8 V to +30 V relative to 0 V
Impedance	6.8 kΩ
Input threshold	10 V ±0.8 V from IEC 61131-2
Operating as an output	
Nominal maximum output current	50 mA
Maximum output current	200 mA (total including +24 Vout)
Common to all modes	
Voltage range	0 V to +24 V
Sample / update period	2 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 6ms.

12	Digital Input 3
13	Digital Input 4
Terminal 12 default function	RUN FORWARD input
Terminal 13 default function	RUN REVERSE input
Type	Negative or positive logic digital inputs
Logic mode controlled by...	Pr 08.010
Voltage range	0 V to +24 V
Absolute maximum applied voltage range	-18 V to +30 V relative to 0 V
Impedance	6.8 kΩ
Input threshold	10 V ±0.8 V from IEC 61131-2
Sample / update period	2 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 6 ms.


14	Digital Input 5
Terminal 14 default function	Analog INPUT 1 / INPUT 2 select
Type	Negative or positive logic digital input or motor thermistor input (bias for DIN44081 ptc, KTY84, PT1000, PT2000 and other types) mode can be selected.
Input mode controlled by...	Pr 08.035
Operating as digital input	
Logic mode controlled by...	Pr 08.010
Voltage range	0 V to +24 V
Absolute maximum applied voltage range	-18 V to +30 V relative to 0 V
Impedance	6.8 kΩ
Input threshold	10 V ±0.8 V from IEC 61131-2
Sample / update period	2 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 6 ms.

15	Digital Input 6
16	Digital Input 7
Terminal 15 default function	JOG SELECT input
Terminal 16 default function	None
Type	Negative or positive logic digital inputs, frequency input (digital input 6) or AB encoder input (digital input 6 and 7).
Input mode controlled by...	Pr 08.036
Operating as digital input	
Logic mode controlled by...	Pr 08.010
Voltage range	0 V to +24 V
Absolute maximum applied voltage range	-18 V to +30 V relative to 0 V
Impedance	6.8 kΩ
Input threshold	10 V ±0.8 V from IEC 61131-2
Sample / update period	2 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 6 ms.

17	+24 V user output
Function	Supply for external digital devices.
Voltage tolerance	±20 %
Maximum output current	200 mA (total including all Digital Outputs)
Protection	Current limit trip.

31	SAFE TORQUE OFF function (drive enable)
34	
Type	Positive logic only digital input
Voltage range	0 to +24 V
Absolute maximum applied voltage	30 V
Logic Threshold	10 V \pm 5 V
Low state maximum voltage for disable to SIL3 and PL e	5 V
Impedance	>4 mA @ 15 V, <15mA @30 V from IEC 61130-2, type 1
Low state maximum current for disable to SIL3 and PL e	0.5 mA
Response time	Nominal: 12 ms Maximum: 20 ms
The SAFE TORQUE OFF function may be used in a safety-related application in preventing the drive from generating torque in the motor to a high level of integrity. The system designer is responsible for ensuring that the complete system is safe and designed correctly according to the relevant safety standards. If the SAFE TORQUE OFF function is not required, these terminal are used for enabling the drive.	

41	Relay contacts
42	
Default function	Drive OK indicator
Contact voltage rating	240 Vac, Installation over-voltage category II
Contact maximum current rating	2 A AC 240 V 4 A DC 30 V resistive load 0.5 A DC 30 V inductive load (L/R = 40 ms)
Contact minimum recommended rating	12 V 100 mA
Contact type	Normally open
Default contact condition	Closed when power applied and drive OK
Update period	4 ms



To prevent the risk of a fire hazard in the event of a fault, a fuse or other over-current protection must be installed in the relay circuit.

WARNING

4.11 SAFE TORQUE OFF (STO)

The SAFE TORQUE OFF function provides a means for preventing the drive from generating torque in the motor with a very high level of integrity. It is suitable for incorporation into a safety system for a machine. It is also suitable for use as a conventional drive enable input.

The safety function is active when either one or both STO inputs are in the logic-low state as specified in the control terminal specification. The function is defined according to EN 61800-5-2 and IEC 61800-5-2 as follows. (In these standards a drive offering safety-related functions is referred to as a PDS(SR)):

'Power, that can cause rotation (or motion in the case of a linear motor), is not applied to the motor. The PDS(SR) will not provide energy to the motor which can generate torque (or force in the case of a linear motor)'.

This safety function corresponds to an uncontrolled stop in accordance with stop category 0 of IEC 60204-1. The SAFE TORQUE OFF function makes use of the special property of an inverter drive with an induction motor, which is that torque cannot be generated without the continuous correct active behavior of the inverter circuit. All credible faults in the inverter power circuit cause a loss of torque generation.

The SAFE TORQUE OFF function is fail-safe, so when the SAFE TORQUE OFF input is disconnected the drive will not operate the motor, even if a combination of components within the drive has failed. Most component failures are revealed by the drive failing to operate. SAFE TORQUE OFF is also independent of the drive firmware. This meets the requirements of the following standards, for the prevention of operation of the motor.

Data verification by TÜV Rheinland is pending.

SAFE TORQUE OFF can be used to eliminate electro-mechanical contactors, including special safety contactors, which would otherwise be required for safety applications.

The function can be used in safety-related machines or systems which have been designed according to IEC 62061 or IEC 61508, or other standards which are compatible with IEC 61508, since the analysis and the integrity metrics used in EN 61800-5-2 are the same.

Note on response time of SAFE TORQUE OFF, and use with safety controllers with self-testing outputs.

SAFE TORQUE OFF has been designed to have a response time of greater than 1 ms, so that it is compatible with safety controllers whose outputs are subject to a dynamic test with a pulse width not exceeding 1ms.

Two-channel SAFE TORQUE OFF

Two fully independent input channels are provided for the SAFE TORQUE OFF function. Each input separately meets the requirements of the standards as defined above, regardless of the state of the other input. If either or both inputs are set at a logic low state, there are no single faults in the drive which can permit the motor to be driven.

It is not necessary to use both channels in order for the drive to meet the requirements of the standards. The purpose of the two channels is to allow connection to machine safety systems where two channels are required, and to facilitate protection against wiring faults. For example, if each channel is connected to a safety-related digital output of a safety related controller, computer or PLC, then on detection of a fault in one output the drive can still be disabled safely through the other output. Consequently, there are no single wiring faults which can cause a loss of the safety function, i.e. inadvertent enabling of the drive.

In the event that the two-channel operation is not required, the two inputs can be connected together to form a single SAFE TORQUE OFF input. In this case it is important to note that a single short-circuit from the SAFE TORQUE OFF input to a DC supply of approximately +24 V would cause the drive to be enabled. This might occur through a fault in the wiring. This can be excluded according to EN ISO 13849-2 by the use of protected wiring. The wiring can be protected by either of the following methods:

- By placing the wiring in a segregated cable duct or other enclosure.
- or
- By providing the wiring with a grounded shield in a positive-logic grounded control circuit. The shield is provided to avoid a hazard from an electrical fault. It may be grounded by any convenient method; no special EMC precautions are required.

SAFE TORQUE OFF over-ride

The drive does not provide any facility to over-ride the SAFE TORQUE OFF function, for example for maintenance purposes. Because of the risk of human error, the installation must not provide any facility to override the function. The design of safety-related control systems must only be done by personnel with the required training and experience.


The SAFE TORQUE OFF function will only ensure the safety of a machine if it is correctly incorporated into a complete safety system. The system must be subject to a risk assessment to confirm that the residual risk of an unsafe event is at an acceptable level for the application.


SAFE TORQUE OFF does not provide electrical isolation. The supply to the drive must be disconnected by an approved isolation device before gaining access to power connections.


With SAFE TORQUE OFF there are no single faults in the drive which can permit the motor to be driven. Therefore it is not necessary to have a second channel to interrupt the power connection, nor a fault detection circuit. It is essential to observe the maximum permitted voltage of 5 V for a safe low (disabled) state of SAFE TORQUE OFF.

The connections to the drive must be arranged so that voltage drops in the 0 V wiring cannot exceed this value under any loading condition. It is strongly recommended that the SAFE TORQUE OFF circuits be provided with a dedicated 0 V conductors which should be connected to terminals 32 and 33 at the drive.

For more information regarding the SAFE TORQUE OFF input, please see the *Control Techniques Safe Torque Off Engineering Guide* available for download from www.controltechniques.com.

 WARNING	<p>The design of safety-related control systems must only be done by personnel with the required training and experience. The SAFE TORQUE OFF function will only ensure the safety of a machine if it is correctly incorporated into a complete safety system. The system must be subject to a risk assessment to confirm that the residual risk of an unsafe event is at an acceptable level for the application</p>
--	---

 WARNING	<p>SAFE TORQUE OFF does not provide electrical isolation. The supply to the drive must be disconnected by an approved isolation device before gaining access to power connections.</p>
--	--

 WARNING	<p>It is essential to observe the maximum permitted voltage of 5 V for a safe low (disabled) state of SAFE TORQUE OFF. The connections to the drive must be arranged so that voltage drops in the 0 V wiring cannot exceed this value under any loading condition. It is strongly recommended that the SAFE TORQUE OFF circuits be provided with a dedicated 0 V conductors which should be connected to terminals 32 and 33 at the drive.</p>
--	--

For more information regarding the SAFE TORQUE OFF input, please see the *Control Techniques Safe Torque Off Engineering Guide* available for download from www.controltechniques.com.

5 Getting started

This chapter introduces the user interfaces, menu structure and security levels of the drive.

5.1 Understanding the display

The keypad can only be mounted on the drive.

5.1.1 Keypad

The CI-Keypad display consists of up to four rows of text. The upper two rows show the drive status or the menu and parameter number currently being viewed. When in status mode, an area one character wide and four lines high on the right-hand side of the display, is reserved for displaying actions that are active on the drive. The possible active actions are given in Table 5-1.

When the drive is powered up, the lower two rows will show the status mode parameters defined by Status Mode Parameter 1 (11.018) and Status Mode Parameter 2 (11.019).

Figure 5-1 Keypad detail

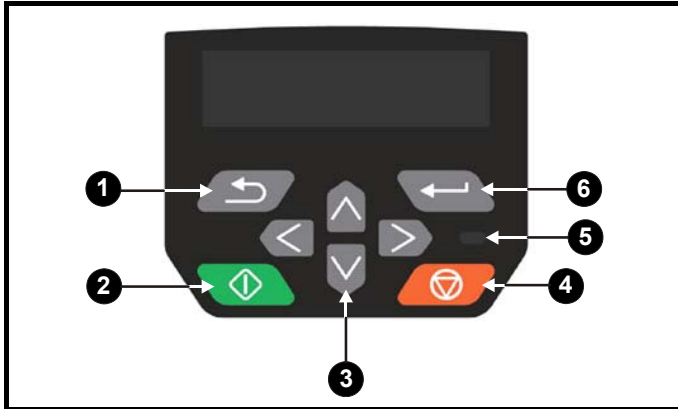



Table 5-1 Key to Figure 5-1

1 Escape button	4 Stop/Reset button (red)
2 Start button	5 Status LED
3 Navigation buttons (x4)	6 Enter button

NOTE








The red stop button  is also used to reset the drive.

The parameter value is correctly displayed on the keypad display as shown in Table 5-2 below.

Table 5-2 Keypad display formats

Display formats	Value
IP Address	127. 0. 0. 0
MAC Address	01ABCDEF2345
Time	12:34:56
Date	31-12-13 or 12-31-13
Version number	01.02.00.00
Character	ABCD
32 bit number with decimal point	21474836.47
16 bit binary number	0100001011100101

Table 5-3 Active action icon

Active action icon	Description
	Alarm active
	NV media card being accessed
	Drive security active
	User security unlocked
	Motor map 2 active
	User program running
	Keypad reference active

5.2 Keypad operation

5.2.1 Control buttons

The keypad consists of:





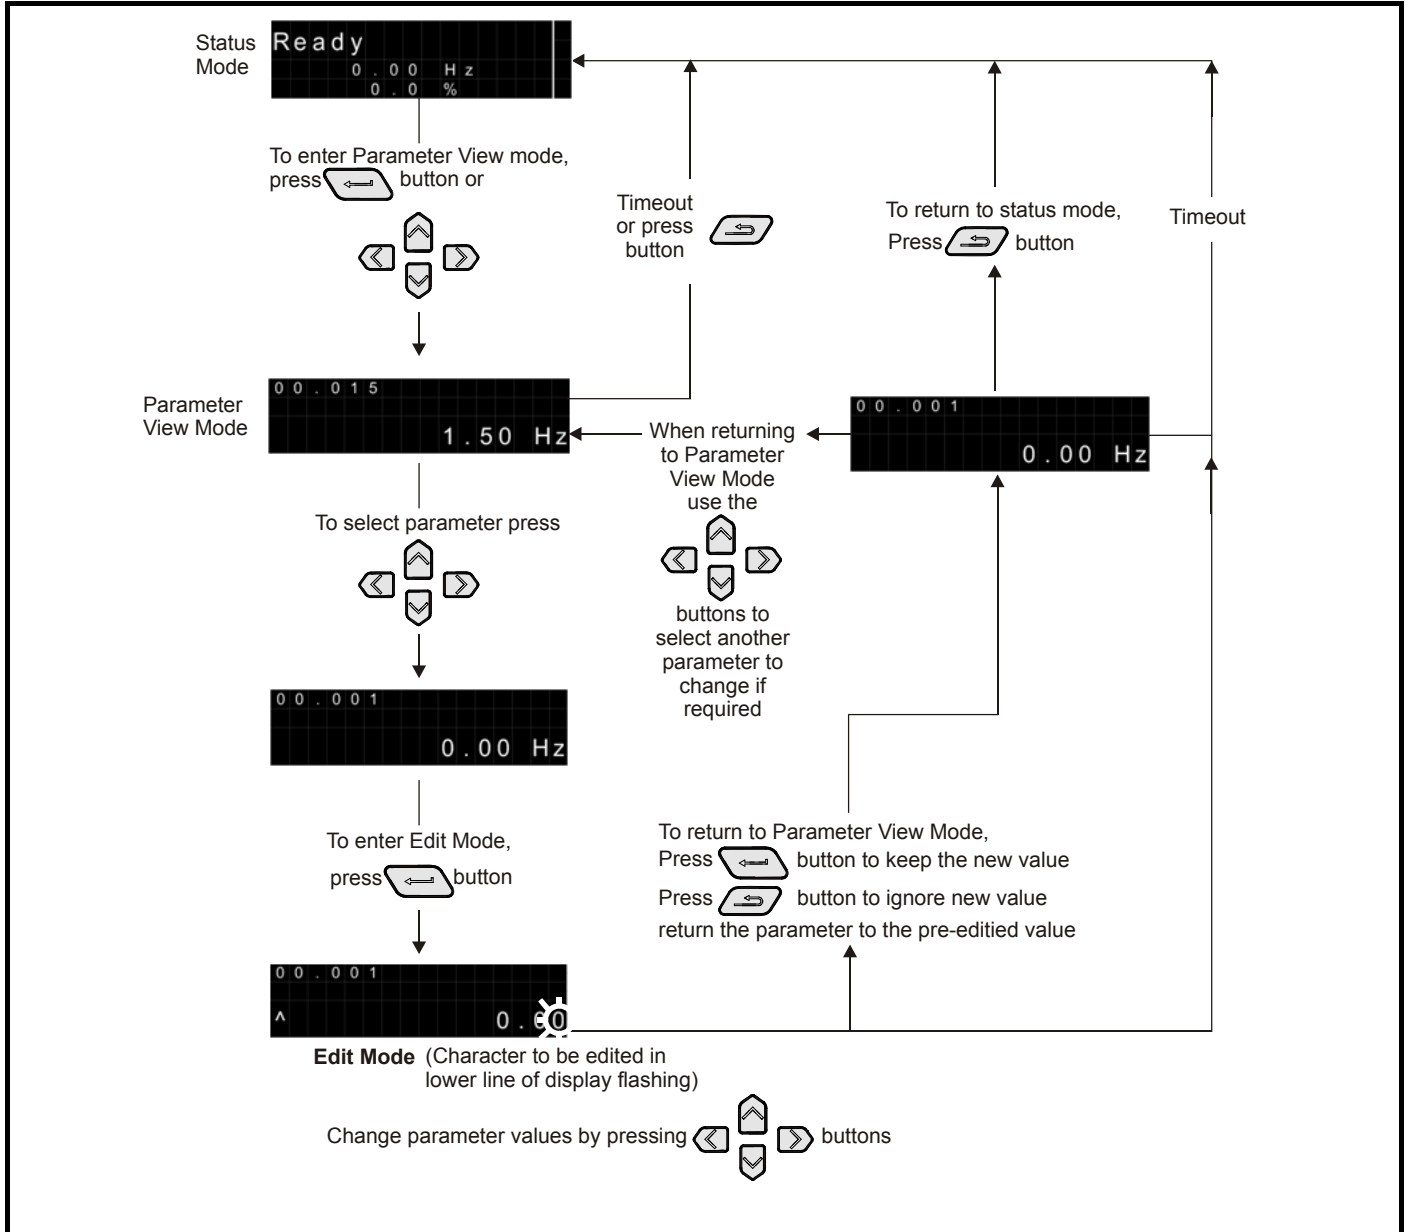
- Navigation buttons - Used to navigate the parameter structure and change parameter values.
- Enter / Mode button  Used to toggle between parameter edit and view mode.
- Escape / Exit button  Used to exit from parameter edit or view mode. In parameter edit mode, if parameter values are edited and the exit button pressed the parameter value will be restored to the value it had on entry to edit mode.
- Start button  Used to provide a 'Run' command if keypad mode is selected.
- Stop / Reset button  Used to reset the drive. In keypad mode can be used for 'Stop'.


Figure 5-2 Display modes



NOTE

The navigation buttons can only be used to move between menus if Pr 00.010 has been set to show 'All Menus'. Refer to section section 5.8 *Parameter access level and security* on page 64.

NOTE

If the Escape  button is held down for 1 second, the display returns to status mode.

5.2.2 Quick access mode

The quick access mode allows direct access to any parameter without scrolling through menus and parameters.

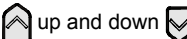
To enter the quick access mode, press and hold the  Enter button on the keypad while in 'parameter view mode'.


Figure 5-3 Quick access mode




5.2.3 Keypad shortcuts

In 'parameter view mode':

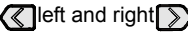If the  keypad buttons are pressed together, then the keypad display will jump to the start of the parameter menu being viewed, i.e. Pr **05.005** being viewed, when the above buttons pressed together will jump to Pr **05.000**.

If the  keypad buttons are pressed together, then the keypad display will jump to the last viewed parameter in Menu 0.

In 'parameter edit mode':

If the  keypad buttons are pressed together, then the parameter value of the parameter being edited will be set to 0.


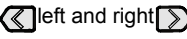
If the  keypad buttons are pressed together, the least significant digit (furthest right) will be selected on the keypad display for editing.

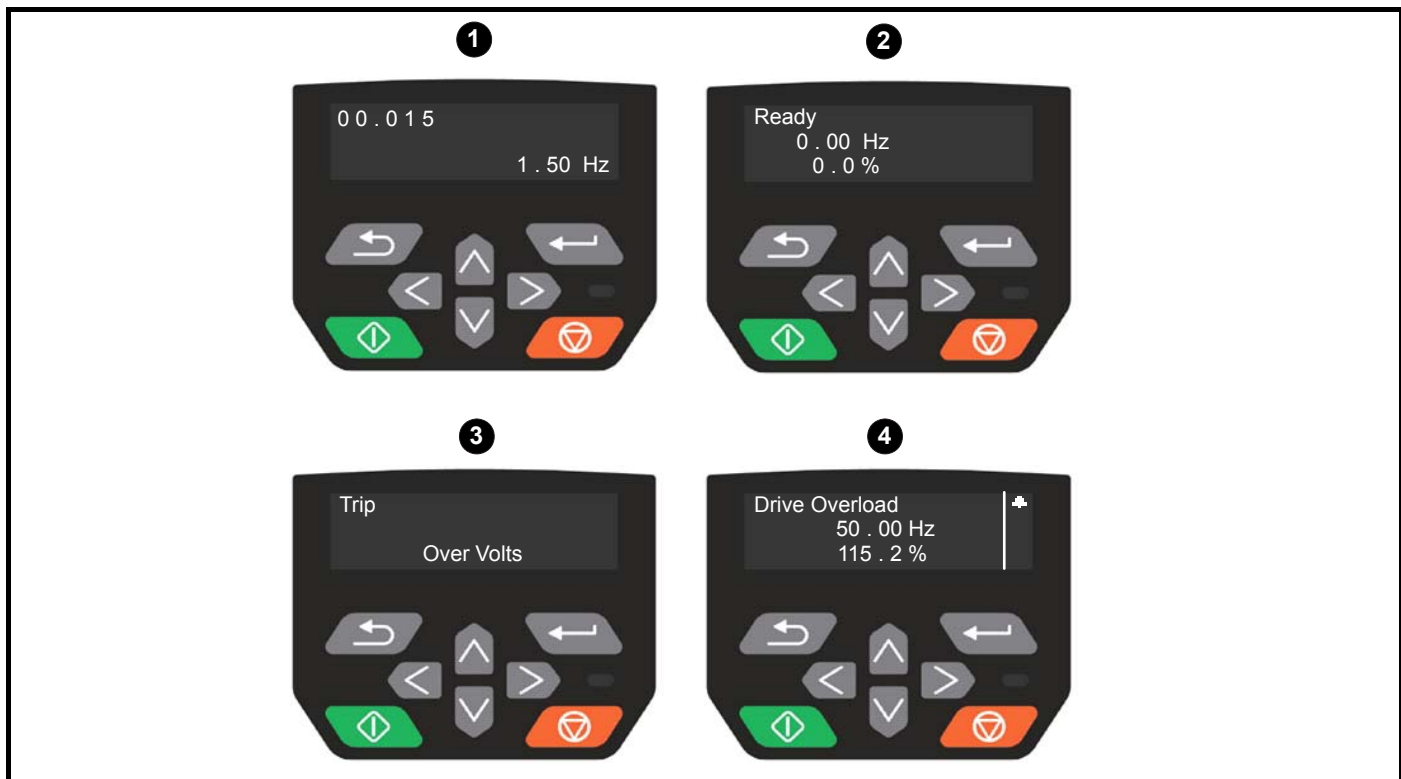Figure 5-4 Mode examples



1. Parameter view mode: Read write or Read only

2. Status mode: Drive OK status

If the drive is ok and the parameters are not being edited or viewed, the upper row of the display will show one of the following:

- Inhibit', 'Ready' or 'Run'.

3. Status mode: trip status


When the drive is in trip condition, the upper row of the display will indicate that the drive has tripped and the lower row of the display will show the trip code. For further information regarding trip codes, refer to Table 13-2 *Trip indications* on page 174.

4. Status mode: Alarm status

During an 'alarm' condition the upper row of the display alternates between the drive status (Inhibit, Ready or Run, depending on what is displayed) and the alarm.

NOTE

When changing the values of parameters, make a note of the new values in case they need to be entered again.



Do not change parameter values without careful consideration; incorrect values may cause damage or a safety hazard.

WARNING

NOTE



For new parameter values to apply after the line power supply to the drive is interrupted, new values must be saved. Refer to section 5.6 *Saving parameters* on page 64.

5.3 Menu structure

The drive parameter structure consists of menus and parameters.


The drive initially powers up so that only Menu 0 can be viewed. The up and down arrow buttons are used to navigate between parameters and once Pr **00.010** has been set to 'All Menus', the left and right buttons are used to navigate between menus. For further information, refer to section 5.8 *Parameter access level and security* on page 64.

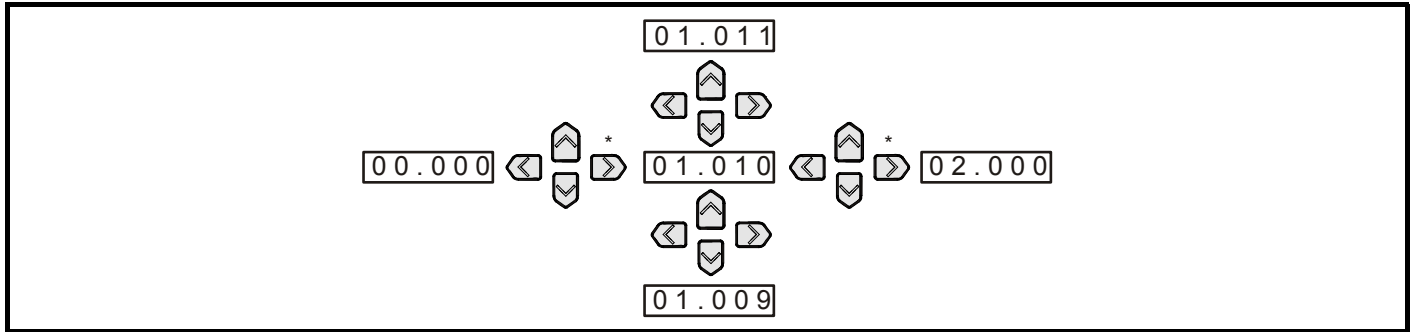Figure 5-5 Parameter navigation



* Can only be used to move between menus if all menus have been enabled (Pr **00.010**). Refer to section section 5.8 *Parameter access level and security* on page 64.

The menus and parameters roll over in both directions. i.e. if the last parameter is displayed, a further press will cause the display to rollover and show the first parameter. When changing between menus the drive remembers which parameter was last viewed in a particular menu and thus displays that parameter.



Do not change parameter values without careful consideration; incorrect values may cause damage or a safety hazard.

WARNING

NOTE

When changing the values of parameters, make a note of the new values in case they need to be entered again.

NOTE

For new parameter values to apply after the line power supply to the drive is interrupted, new values must be saved. Refer to section 5.6 *Saving parameters* on page 64.

5.3.1 CI-Keypad set-up menu





To enter the keypad set-up menu, press and hold the Escape  button on the keypad from status mode. All the keypad parameters are saved to the keypad non-volatile memory when exiting from the keypad set-up menu. To exit from the keypad set-up menu, press the Escape  or  or  button. Below are the keypad set-up parameters.

Table 5-4 CI-Keypad set-up parameters

Parameters		Range	Type
Keypad.00	Language	Classic English or English	RW
Keypad.01	Show Units	Off or On	RW
Keypad.02	Backlight Level	0 to 100 %	RW
Keypad.05	Show Raw Text Parameter Values	Off or On	RW
Keypad.06	Software Version	00.00.00.00 to 99.99.99.99	RO

NOTE

It is not possible to access the keypad parameters via any communications channel.

5.4 Advanced menus

The advanced menus consist of groups or parameters appropriate to a specific function or feature of the drive. Menus 0 to 24 can be viewed on the Keypad.

The option module menu (S.mm.ppp) is only displayed if the option module is installed. Where S signifies the option module slot number and the mm.ppp signifies the menu and parameter number of the option module's internal menus and parameter.

Table 5-5 Advanced menu descriptions

Menu	Description
0	Commonly used basic set up parameters for quick / easy programming
1	Frequency reference
2	Ramps
3	Frequency control
4	Torque and current control
5	Motor control
6	Sequencer and clock
7	Analog I/O
8	Digital I/O
9	Programmable logic, motorized pot, binary sum, timers
10	Status and trips
11	Drive set-up and identification, serial communications
12	Threshold detectors and variable selectors
14	User PID controller
15	Option module slot 1 set-up menu
18	General option module application menu 1
20	General option module application menu 2
21	Second motor parameters
22	Menu 0 set-up
Slot 1	Slot 1 option menus*

* Only displayed when the option module is installed.

5.4.1 Display messages

The following tables indicate the various possible mnemonics which can be displayed by the drive and their meaning.

Table 5-6 Status indications

Upper row string	Description	Drive output stage
Inhibit	The drive is inhibited and cannot be run. The SAFE TORQUE OFF signals are not applied to the SAFE TORQUE OFF terminals or Pr 06.015 is set to 0. The other conditions that can prevent the drive from enabling are shown as bits in Enable Conditions (06.010).	Disabled
Ready	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active.	Disabled
Stop	The drive is stopped / holding zero frequency.	Enabled
Run	The drive is active and running.	Enabled
Supply Loss	Supply loss condition has been detected	Enabled
Deceleration	The motor is being decelerated to zero frequency because the final drive run has been deactivated.	Enabled
dc Injection	The drive is applying dc injection braking.	Enabled
Trip	The drive has tripped and no longer controlling the motor. The trip code appears in the lower display.	Disabled
Under Voltage	The drive is in the under voltage state either in low voltage or high voltage mode.	Disabled

5.4.2 Alarm indications

An alarm is an indication given on the display by alternating the alarm string with the drive status string on the display. Alarms strings are not displayed when a parameter is being edited.

Table 5-7 Alarm indications



Alarm string	Description
Brake Resistor	Brake resistor overload. <i>Braking Resistor Thermal Accumulator</i> (10.039) in the drive has reached 75.0 % of the value at which the drive will trip.
Motor Overload	<i>Motor Protection Accumulator</i> (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
Drive overload	Drive over temperature. <i>Percentage Of Drive Thermal Trip Level</i> (07.036) in the drive is greater than 90 %.
Auto Tune	The autotune procedure has been initialized and an autotune in progress.
Limit Switch	Limit switch active. Indicates that a limit switch is active and that is causing the motor to be stopped.
Option Slot 1	Option slot alarm.
Low AC	Low voltage mode. See Low AC Alarm (10.107).
Current Limit	Current limit active. See Current Limit Active (10.009).

5.5 Changing the operating mode

Procedure

Use the following procedure only if a different operating mode is required:

1. Ensure the drive is not enabled, i.e. terminal 31 & 34 are open or Pr **06.015** is OFF (0)
2. Change the setting of Pr **00.079** as follows:

Pr 00.079 setting	Operating mode
	1 Open-loop
	2 RFC-A

The figures in the second column apply when serial communications are used.

NOTE

When the operating mode is changed, a parameter save is carried out.


3. Either:

Press the red  reset button

Carry out a drive reset through serial communications by setting Pr **10.038** to 100 (ensure that Pr **mm.000** returns to 0)


5.6 Saving parameters

When changing a parameter in Menu 0, the new value is saved when

pressing the Enter button  to return to parameter view mode from parameter edit mode.

If parameters have been changed in the advanced menus, then the change will not be saved automatically. A save function must be carried out.


Procedure

1. Select 'Save parameters*' in Pr **mm.000** (alternatively enter a value of 1000* in Pr **mm.000**)
2. Either:
 - Press the red  reset button
 - Carry out a drive reset through serial communications by setting Pr **10.038** to 100
 - If the drive is in the under voltage state (i.e. when the AI-485 adaptor terminals 1 & 2 are being supplied from a +24 V DC supply) a value of 1001 must be entered into Pr **mm.000** to perform a save function.

5.7 Restoring parameter defaults

Restoring parameter defaults by this method saves the default values in the drives memory. *User security status* (00.010) and *User security code* (00.025) are not affected by this procedure).

Procedure

1. Ensure the drive is not enabled, i.e. terminal 31 & 34 is open or Pr **06.015** is OFF (0)
2. Select 'Reset 50 Hz Defs' or 'Reset 60 Hz Defs' in Pr **mm.000**. (alternatively, enter 1233 (50 Hz settings) or 1244 (60 Hz settings) in Pr **mm.000**).
3. Either:
 - Press the red  reset button
 - Carry out a drive reset through serial communications by setting Pr **10.038** to 100

5.8 Parameter access level and security

The parameter access level determines whether the user has access to Menu 0 only or to all the advanced menus (Menus 1 to 24) in addition to Menu 0.

The User Security determines whether the access to the user is read only or read write.

Both the User Security and Parameter Access Level can operate independently of each other as shown in table Table 5-8.

Table 5-8 Parameter access level and security

User security status (11.044)	Access level	User security	Menu 0 status	Advanced menu status
0	Menu 0	Open	RW	Not visible
		Closed	RO	Not visible
1	All Menus	Open	RW	RW
		Closed	RO	RO
2	Read-only Menu 0	Open	RO	Not visible
		Closed	RO	Not visible
3	Read-only	Open	RO	RO
		Closed	RO	RO
4	Status only	Open	Not visible	Not visible
		Closed	Not visible	Not visible
5	No access	Open	Not visible	Not visible
		Closed	Not visible	Not visible

The default settings of the drive are Parameter Access Level Menu 0 and user Security Open i.e. read / write access to Menu 0 with the advanced menus not visible.

5.8.1 User Security Level / Access Level

The drive provides a number of different levels of security that can be set by the user via *User Security Status* (11.044); these are shown in the table below.

User Security Status (Pr 11.044)	Description
Menu 0 (0)	All writable parameters are available to be edited but only parameters in Menu 0 are visible
All menus (1)	All parameters are visible and all writable parameters are available to be edited
Read- only Menu 0 (2)	Access is limited to Menu 0 parameters only. All parameters are read-only
Read-only (3)	All parameters are read-only however all menus and parameters are visible
Status only (4)	The keypad remains in status mode and no parameters can be viewed or edited
No access (5)	The keypad remains in status mode and no parameters can be viewed or edited. Drive parameters cannot be accessed via a comms/ fieldbus interface in the drive or any option module



5.8.2 Changing the User Security Level /Access Level

The security level is determined by the setting of Pr **00.010** or Pr **11.044**. The Security Level can be changed through the keypad even if the User Security Code has been set.



5.8.3 User Security Code

The User Security Code, when set, prevents write access to any of the parameters in any menu.

Setting User Security Code


Enter a value between 1 and 9999 in Pr **00.025** and press the  button; the security code has now been set to this value. In order to activate the security, the Security level must be set to desired level in Pr **00.010**. When the drive is reset, the security code will have been activated and the drive returns to Menu 0 and the  symbol is displayed in the right hand corner of the keypad display. The value of Pr **00.025** will return to 0 in order to hide the security code.

Unlocking User Security Code

Select a parameter that need to be edited and press the  button, the display will now show 'security code'. Use the arrow buttons to set the security code and press the  button. With the correct security code entered, the display will revert to the parameter selected in edit mode.

If an incorrect security code is entered, the following message 'incorrect security code' is displayed, and the display will revert to parameter view mode.

Disabling User Security

Unlock the previously set security code as detailed above. Set Pr **00.025** to 0 and press the  button. The User Security has now been disabled, and will not have to be unlocked each time the drive is powered up to allow read / write access to the parameters.

5.9 Displaying parameters with non-default values only

By selecting 'Show non-default' in Pr **mm.000** (Alternatively, enter 12000 in Pr **mm.000**), the only parameters that will be visible to the user will be those containing a non-default value. This function does not require a drive reset to become active. In order to deactivate this function, return to Pr **mm.000** and select 'No action' (alternatively enter a value of 0). Please note that this function can be affected by the access level enabled, refer to section 5.8 *Parameter access level and security* on page 64 for further information regarding access level.

5.10 Displaying destination parameters only

By selecting 'Destinations' in Pr **mm.000** (Alternatively enter 12001 in Pr **mm.000**), the only parameters that will be visible to the user will be destination parameters. This function does not require a drive reset to become active. In order to deactivate this function, return to Pr **mm.000** and select 'No action' (alternatively enter a value of 0).

Please note that this function can be affected by the access level enabled, refer to section 5.8 *Parameter access level and security* on page 64 for further information regarding access level.

5.11 Communications

Fitting an AI-485 adaptor provides the drive with a 2 wire 485 serial communications interface. This enables the drive set-up, operation and monitoring to be carried out with a PC or controller as required.

5.11.1 485 Serial communications

Communication is via the RJ45 connector or screw terminals (parallel connection). The drive only supports Modbus RTU protocol.

The communications port applies a $\frac{1}{4}$ unit load to the communications network.

USB to EIA485 Communications

An external USB hardware interface such as a PC cannot be used directly with the 2-wire EIA485 interface of the drive. Therefore a suitable converter is required.

A suitable USB to EIA485 isolated converter is available from Control Techniques as follows:

- CT USB Comms cable (CT Part No. 4500-0096)

When using one of the above converters or any other suitable converter with the drive, it is recommended that no terminating resistors be connected on the network. It may be necessary to 'link out' the terminating resistor within the converter depending on which type is used. The information on how to link out the terminating resistor will normally be contained in the user information supplied with the converter.

Serial communications set-up parameters

The following parameters need to be set according to the system requirements.

Serial communications set-up parameters		
<i>Serial Mode</i> (11.024)	8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 1 EP (8), 7 1 OP (9), 7 1 EP M (10), 7 1 OP M (11)	The drive only supports the Modbus RTU protocol and is always a slave. This parameter defines the supported data formats used by the 485 comms port (if installed) on the drive. This parameter can be changed via the drive keypad, via a option module or via the comms interface itself.
<i>Serial Baud Rate</i> (11.025)	300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600(8), 76800(9), 115200 (10)	This parameter can be changed via the drive keypad, via a option module or via the comms interface itself. If it is changed via the comms interface, the response to the command uses the original baud rate. The master should wait at least 20 ms before sending a new message using the new baud rate.
<i>Serial Address</i> (11.023)	1 to 247	This parameter defines the serial address and an addresses between 1 and 247 are permitted.

6 Basic parameters

Menu 0 is used to bring together various commonly used parameters for basic easy set up of the drive. All the parameters in Menu 0 appear in other menus in the drive (denoted by {...}). Menus 22 can be used to configure the parameters in Menu 0.

6.1 Menu 0: Basic parameters


Parameter	Range(⌘)		Default(⇄)		Type					
	OL	RFC-A	OL	RFC-A						
00.001	Minimum Reference Clamp	±VM_NEGATIVE_REF_CLAMP Hz		0.00 Hz		RW	Num			US
00.002	Maximum Reference Clamp	±VM_POSITIVE_REF_CLAMP Hz		50Hz default: 50.00 Hz 60Hz default: 60.00 Hz		RW	Num			US
00.003	Acceleration Rate 1	±VM_ACCEL_RATE s		5.0 s		RW	Num			US
00.004	Deceleration Rate 1	±VM_ACCEL_RATE s		10.0 s		RW	Num			US
00.005	Drive Configuration	AV (0), AI (1), AV Preset (2), AI Preset (3), Preset (4), Keypad (5), Keypad Ref (6), Electronic Pot (7), Torque Control (8), Pid Control (9)		AV (0)		RW	Txt		PT	US
00.006	Motor Rated Current	±VM_RATED_CURRENT A		Maximum Heavy Duty Rating (11.032) A		RW	Num		RA	US
00.007	Motor Rated Speed	0.0 to 80000.0 rpm		50Hz default: 1500.0 rpm 60Hz default: 1800.0 rpm	50Hz default: 1450.0 rpm 60Hz default: 1750.0 rpm	RW	Num			US
00.008	Motor Rated Voltage	±VM_RATED_VOLTAGE V		110V drive: 230 V 200V drive: 230 V 400V drive 50 Hz: 400 V 400V drive 60 Hz: 460 V 575V drive: 575 V 690V drive: 690 V		RW	Num		RA	US
00.009	Motor Rated Power Factor	0.00 to 1.00		0.85		RW	Num		RA	US
00.010	User Security Status	Menu 0 (0), All Menus (1), Read only Menu 0 (2), Read only (3), Status Only (4), No Access (5)		Menu 0 (0)		RW	Txt	ND	NC	PT
00.012	Input Logic Polarity	Negative Logic (0) or Positive Logic (1)		Positive Logic (1)		RW	Txt			US
00.015	Jog Reference	0.00 to 300.00 Hz		1.50 Hz		RW	Num			US
00.016	Analog Input 1 Mode	4-20 mA Stop (-6), 20-4 mA Stop (-5), 4-20 mA Low (-4), 20-4 mA Low (-3), 4-20 mA Hold (-2), 20-4 mA Hold (-1), 0-20 mA (0), 20-0 mA (1), 4-20 mA Trp (2), 20-4 mA Trp (3), 4-20 mA (4), 20-4 mA (5), Voltage (6)		Voltage (6)		RW	Txt			US
00.017	Bipolar Reference Enable	Off (0) or On (1)		Off (0)		RW	Bit			US
00.018	Preset Reference 1	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num			US
00.025	User Security Code	0 to 9999		0		RW	Num	ND	NC	PT
00.027	Power-up Keypad Control Mode Reference	Reset (0), Last (1), Preset (2)		Reset (0)		RW	Txt			US
00.028	Ramp Mode Select	Fast (0), Standard (1), Std boost (2), Fast boost (3)		Standard (1)		RW	Txt			US
00.029	Ramp Enable		Off (0) or On (1)		On (1)	RW	Bit			US
00.030	Parameter Cloning	None (0), Read (1), Program (2), Auto (3), Boot (4)		None (0)		RW	Txt		NC	US
00.031	Stop Mode	Coast (0), Ramp (1), Ramp dc I (2), dc I (3), Timed dc I (4), Disable (5), No Ramp (6)		Ramp (1)		RW	Txt			US
00.032	Dynamic V to F Select / Flux Optimization Select	0 to 1		0		RW	Num			US


Parameter	Range(⇅)		Default(⇄)		Type								
	OL	RFC-A	OL	RFC-A									
00.033	Catch A Spinning Motor		Disable (0), Enable (1), Fwd Only (2), Rev Only (3)		Disable (0)		RW	Txt					US
00.034	Digital Input 5 Select		Input (0), Therm Short Cct (1), Thermistor (2), Therm No Trip (3)		Input (0)		RW	Txt					US
00.035	Digital Output 1 Control		0 to 21		0		RW						US
00.036	Analog Output 1 Control		0 to 15		0		RW						US
00.037	Maximum Switching Frequency		0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz	2(2), 3(3), 4(4), 6(5), 8(6), 12(7), 16(8)	3 (3) kHz		RW	Txt					US
00.038	Auto-tune		0 to 3		0		RW	Num		NC			US
00.039	Motor Rated Frequency		0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		50Hz: 50.00 Hz 60Hz: 60.00 Hz		RW	Num		RA			US
00.040	Number of Motor Poles*		Automatic (0) to 32 (16) Poles		Automatic (0) Poles		RW	Txt					US
00.041	Control Mode		Ur S (0), Ur (1), Fixed (2), Ur Auto (3), Ur I (4), Square (5)		Default is Ur I (4)		RW	Txt					US
00.042	Low Frequency Voltage Boost		0.0 to 25.0 %		3.0 %		RW	Num					US
00.043	Serial Baud Rate		300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 76800 (9), 115200 (10)		19200 (6)		RW	Txt					US
00.044	Serial Address		1 to 247		1		RW	Num					US
00.045	Reset Serial Communications		Off (0) or On (1)		Off (0)		RW		ND	NC			
00.046	Brake Release Current Threshold		0 to 200 %		50 %		RW	Num					US
00.047	Brake Apply Current Threshold		0 to 200 %		10 %		RW						US
00.048	BC Brake Release Frequency		0.00 to 20.00 Hz		1.00 Hz		RW	Num					US
00.049	BC Brake Apply Frequency		0.00 to 20.00 Hz		2.00 Hz		RW	Num					US
00.050	BC Brake Delay		0.0 to 25.0 s		1.0 s		RW	Num					US
00.051	BC Post-brake Release Delay		0.0 to 25.0 s		1.0 s		RW	Num					US
00.053	BC Initial Direction		Ref (0), Forward (1), Reverse (2)		Ref (0)		RW	Txt					US
00.054	BC Brake Apply Through Zero Threshold		0.00 to 25.00 Hz		0.00 Hz		RW	Num					US
00.055	BC Enable		Disable (0), Relay (1), Digital IO (2), User (3)		Disable (0)		RW	Txt					US
00.059	OUP Enable		Stop (0) or Run (1)		Run (1)		RW	Txt					US
00.065	Frequency Controller Proportional Gain Kp1			0.000 to 200.000 s/rad		0.100 s/rad	RW	Num					US
00.066	Frequency Controller Integral Gain Ki1			0.00 to 655.35 s ² /rad		0.10 s ² /rad	RW	Num					US
00.067	Sensorless Mode Filter			4 (0), 5 (1), 6 (2), 8 (3), 12 (4), 20 (5) ms		4 (0) ms	RW	Txt					US
00.069	Spin Start Boost		0.0 to 10.0		1.0		RW						US
00.076	Action on Trip Detection		0 to 31		0		RW						US
00.077	Maximum Heavy Duty Current Rating		0.00 to 9999.99 A				RO	Num	ND	NC	PT		
00.078	Software Version		00.00.00.00 to 99.99.99.99				RO		ND	NC	PT		
00.079	User Drive Mode		Open loop (1), RFC A (2)		Open-loop (1)		RW	Txt	ND	NC	PT	US	
00.080	User Security Status		Menu 0 (0), All Menus (1), Read only Menu 0 (2), Read only (3), Status Only (4), No Access (5)		Menu 0 (0)		RW	Txt	ND		PT		

* If this parameter is read via serial communications, it will show pole pairs.

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter						

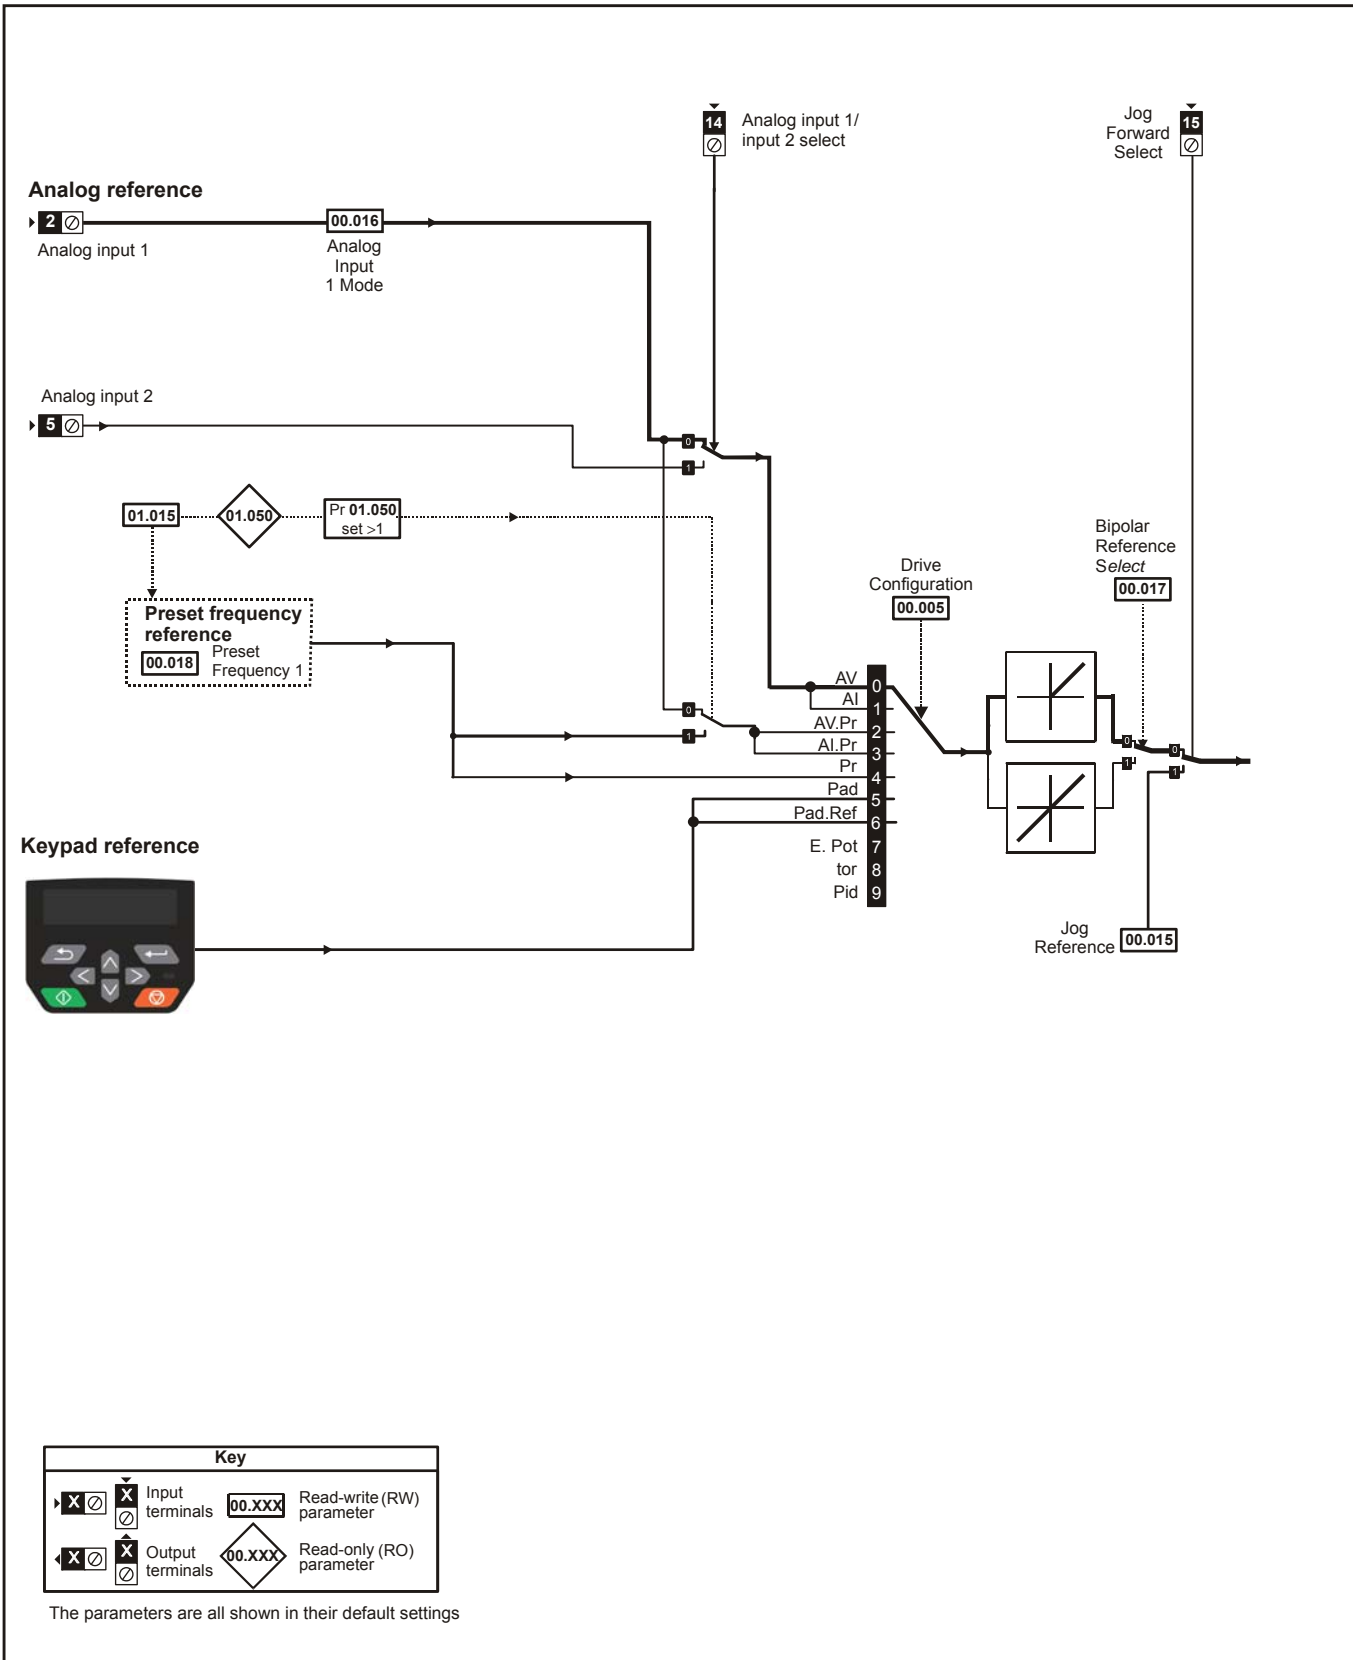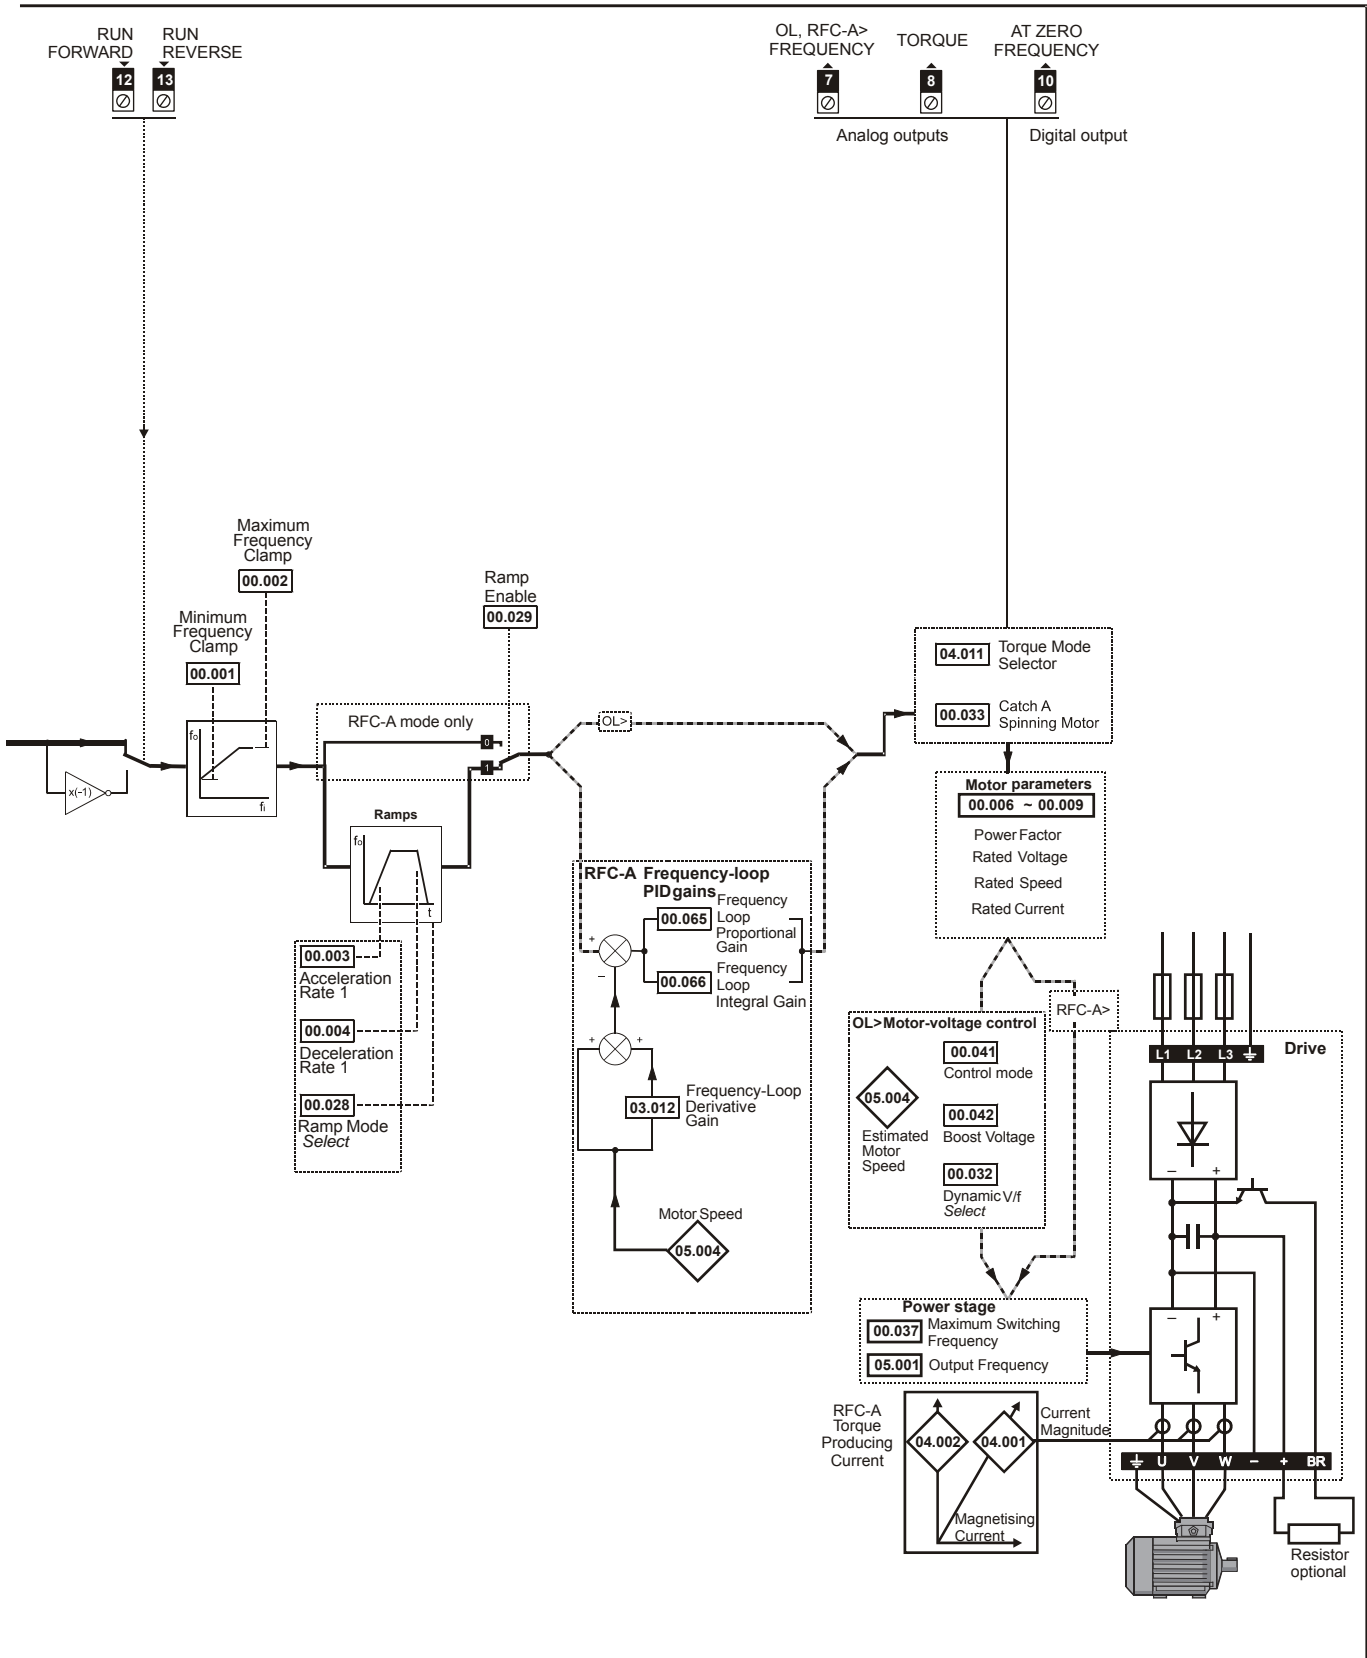Figure 6-1 Menu 0 logic diagram





6.2 Parameter descriptions

6.2.1 Pr mm.000

Pr **mm.000** is available in all menus, commonly used functions are provided as text strings in Pr **mm.000** shown in Table 6-1. The functions in Table 6-1 can also be selected by entering the appropriate numeric values (as shown in Table 6-2) in Pr **mm.000**. For example, enter 7001 in Pr **mm.000** to store drive parameters on an NV media card.

Table 6-1 Commonly used functions in xx.000

Value	Equivalent value	String	Action
0	0	No Action	No action
1000	1	Save Parameters	Save drive parameters to non-volatile memory
6001	2	Load file 1	Load the data from file 1 on a non-volatile media card into the drive provided it is a parameter file
4001	3	Save to file 1	Store the drive parameters in file 1 on a non-volatile media card
6002	4	Load file 2	Load the data from file 2 on a non-volatile media card into the drive provided it is a parameter file
4002	5	Save to file 2	Store the drive parameters in file 2 on a non-volatile media card
6003	6	Load file 3	Load the data from file 3 on a non-volatile media card into the drive provided it is a parameter file
4003	7	Save to file 3	Store the drive parameters in file 3 on a non-volatile media card
12000	8	Show non-default	Only display parameters that are different from their default value
12001	9	Destinations	Only display parameters that are used to set-up destinations
1233	10	Reset 50 Hz defs	Load 50 Hz defaults
1244	11	Reset 60 Hz defs	Load 60 Hz defaults
1070	12	Reset modules	Reset all option modules

Table 6-2 Functions in Pr mm.000

Value	Action
1000	Save parameters when <i>Under Voltage Active</i> (Pr 10.016) is not active.
1001	Save parameter under all conditions
1070	Reset option module
1233	Load standard (50 Hz) defaults
1234	Load standard (50 Hz) defaults to all menus except option module menu 15
1244	Load US (60 Hz) defaults
1245	Load US (60 Hz) defaults to all menus except option module menu 15
1299	Reset {Stored HF} trip.
2001*	Create a boot file on a non-volatile media card based on the present drive parameters including all Menu 20 parameters
4yyy*	NV media card: Transfer the drive parameters to parameter file YYY
5yyy*	NV media card: Transfer the onboard user program to onboard user program file YYY
6yyy*	NV media card: Load the drive parameters from parameter file YYY or the onboard user program from onboard user program file YYY
7yyy*	NV media card: Erase file YYY
8yyy*	NV Media card: Compare the data in the drive with file YYY
9555*	NV media card: Clear the warning suppression flag
9666*	NV media card: Clear the warning suppression flag
9777*	NV media card: Clear the read-only flag
9888*	NV media card: Set the read-only flag
12000**	Only display parameters that are different from their default value. This action does not require a drive reset.
12001**	Only display parameters that are used to set-up destinations (i.e. DE format bit is 1). This action does not require a drive reset.
40yyy	Backup all drive data (parameter differences from defaults, an onboard user program and miscellaneous option data), including the drive name; the store will occur to the </fs/MCDF/driveyyy/> folder; if it does not exist, it will be created. Since the name is stored, this is a backup, rather than a clone. The command code will be cleared when all drive and option data have been saved.
60yyy	Load all drive data (parameter differences from defaults, an onboard user program and miscellaneous option data); the load will come from the </fs/MCDF/driveyyy/> folder. The command code will not be cleared until the drive and all option data have been loaded.

* See Chapter 9 *NV Media Card Operation* on page 83 for more information on these functions.


** These functions do not require a drive reset to become active.

All other functions require a drive reset to initiate the function. To allow easy access to some commonly used functions, refer to the table overleaf. Equivalent values and strings are also provided in the table above.

7 Running the motor


This chapter takes the new user through all the essential steps to running a motor for the first time, in each of the possible operating modes.

For information on tuning the drive for the best performance, see *Chapter 8 Optimization on page 75*.




Ensure that no damage or safety hazard could arise from the motor starting unexpectedly.

WARNING




The values of the motor parameters affect the protection of the motor. The default values in the drive should not be relied upon. It is essential that the correct value is entered in Pr **00.006 Motor Rated Current**. This affects the thermal protection of the motor.

CAUTION



If the drive is started using the keypad it will run to the speed defined by the keypad reference (Pr **01.017**). This may not be acceptable depending on the application. The user must check in Pr **01.017** and ensure that the keypad reference has been set to 0.

CAUTION



If the intended maximum speed affects the safety of the machinery, additional independent over-speed protection must be used.

WARNING

7.1 Quick start connections

7.1.1 Basic requirements

This section shows the basic connections which must be made for the drive to run in the required mode. For minimal parameter settings to run in each mode please see the relevant part of section 7.3 *Quick start commissioning / start-up* on page 73.

Table 7-1 Minimum control connection requirements for each control mode

Drive control method	Requirements
Terminal mode	Drive enable Speed / Torque reference Run forward / Run reverse
Keypad mode	Drive enable
Serial communications	Drive enable Serial communications link

Table 7-2 Minimum control connection requirements for each mode of operation

Operating mode	Requirements
Open loop mode	Induction motor
RFC – A mode (without speed feedback)	Induction motor without speed feedback

7.2 Changing the operating mode

Procedure

Use the following procedure only if a different operating mode is required:

1. Ensure the drive is not enabled, i.e. terminal 31 & 34 are open or Pr **06.015** is OFF (0)
2. Change the setting of Pr **00.079** as follows:

Pr 00.079 setting	Operating mode
00.079 ^ Open-loop	1 Open-loop
00.079 v RFC-A	2 RFC-A

The figures in the second column apply when serial communications are used.

3. Either:

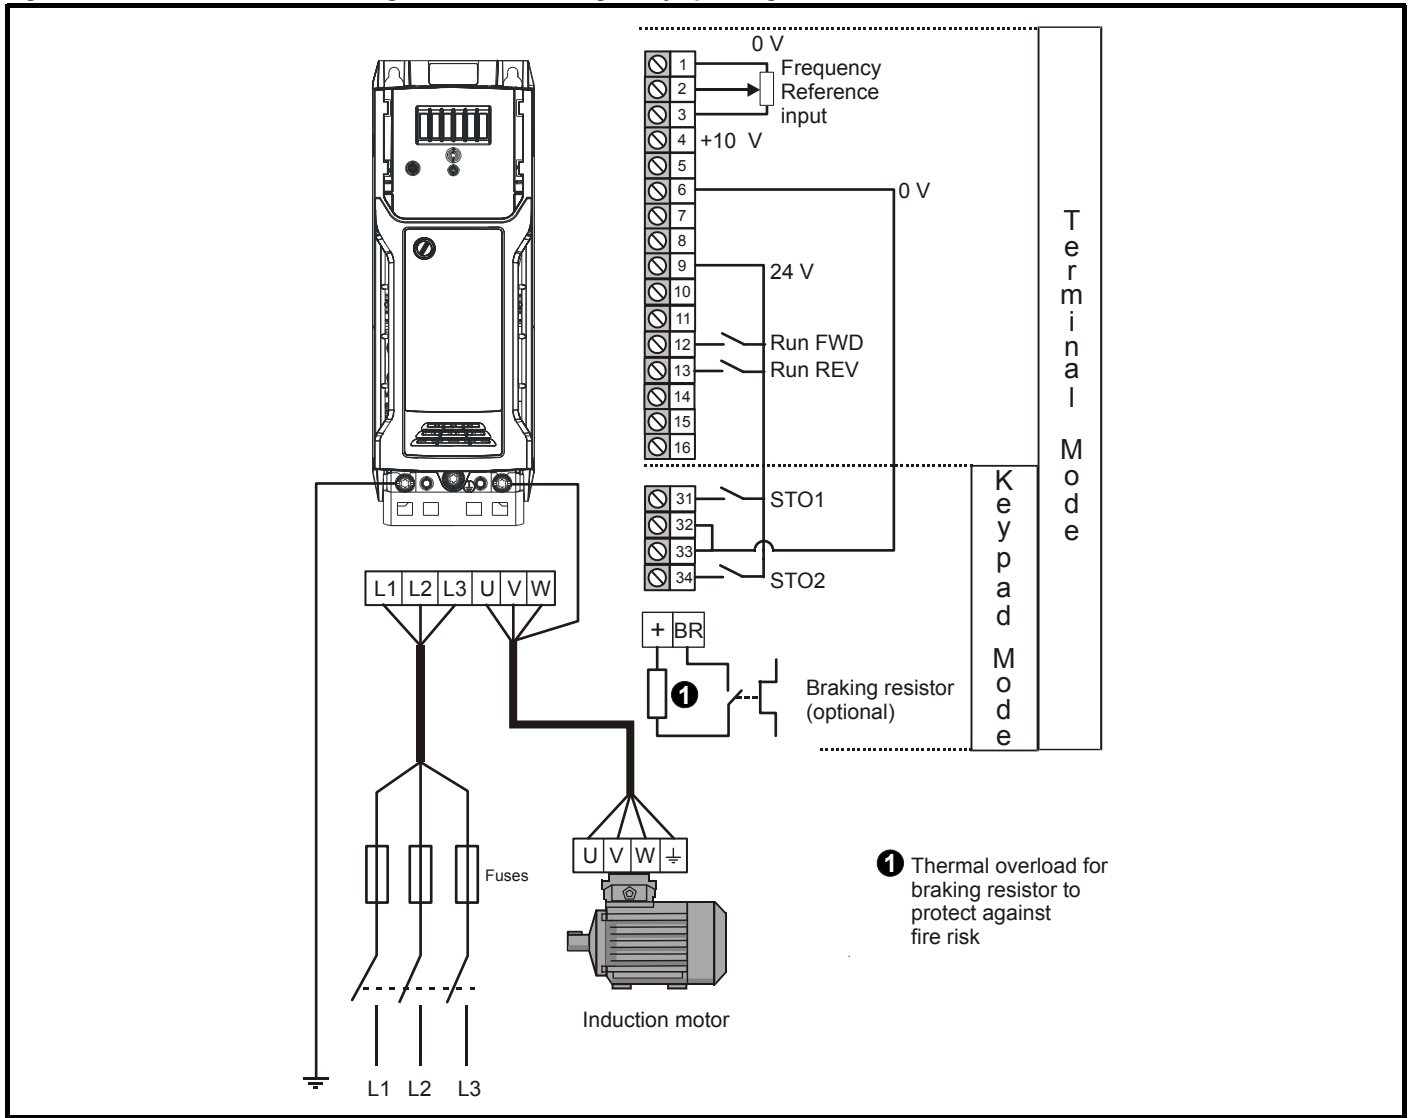
Press the red  reset button

Carry out a drive reset through serial communications by setting Pr **10.038** to 100 (ensure that Pr **mm.000** returns to 0).

NOTE



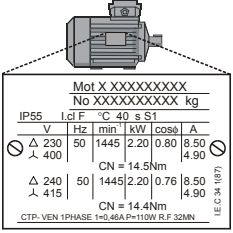
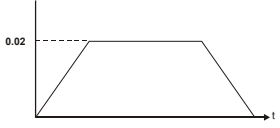
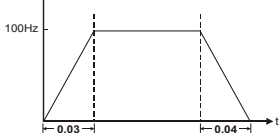

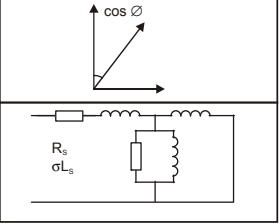
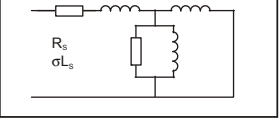


When the operating mode is changed, a parameter save is carried out.

Figure 7-1 Minimum connections to get the motor running in any operating mode





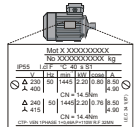
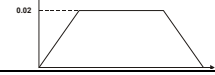
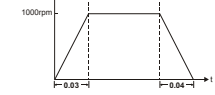

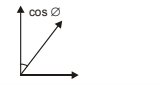
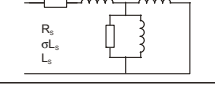
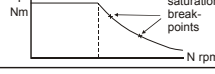


7.3 Quick start commissioning / start-up

7.3.1 Open loop

Action	Detail	
Before power-up	Ensure: <ul style="list-style-type: none"> The drive enable signal is not given (terminals 31 & 34) Run signal is not given Motor is connected 	
Power-up the drive	If the mode is incorrect see section 5.5 <i>Changing the operating mode</i> on page 64. Ensure: <ul style="list-style-type: none"> Drive displays 'Inhibit' If the drive trips, see section 13 <i>Diagnostics</i> on page 172.	
Enter motor nameplate details	Enter: <ul style="list-style-type: none"> Motor rated frequency in Pr 00.039 (Hz) Motor rated current in Pr 00.006 (A) Motor rated speed in Pr 00.007 (rpm) Motor rated voltage in Pr 00.008 (V) - check if Δ or λ connection 	
Set maximum frequency	Enter: <ul style="list-style-type: none"> Maximum frequency in Pr 00.002 (Hz) 	
Set acceleration / deceleration rates	Enter: <ul style="list-style-type: none"> Acceleration rate in Pr 00.003 (s/100 Hz) Deceleration rate in Pr 00.004 (s/100 Hz) (If braking resistor installed, set Pr 00.028 = FAST. Also ensure Pr 10.030 and Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen). 	
Autotune	<p>The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">  <p>WARNING A rotating autotune will cause the motor to accelerate up to $\frac{2}{3}$ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference. The drive can be stopped at any time by removing the run signal or removing the drive enable.</p> </div> <ul style="list-style-type: none"> A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. A stationary autotune measures the stator resistance of the motor and the dead time compensation for the drive. These are required for good performance in vector control modes. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.009. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at $\frac{2}{3}$ base speed in the direction selected. The rotating autotune measures the power factor of the motor. <p>To perform an autotune:</p> <ul style="list-style-type: none"> Set Pr 00.038 = 1 for a stationary autotune or set Pr 00.038 = 2 for a rotating autotune Close the Drive Enable signal (terminal 31 & 34). The drive will display 'ready'. Close the run signal (terminal 12 or 13). The display will flash 'Auto Tune' while the drive is performing the autotune. Wait for the drive to display 'inhibit' and for the motor to come to a standstill. <p>If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 172.</p> <ul style="list-style-type: none"> Remove the drive enable and run signal from the drive. 	 
Save parameters	Select 'Save parameters' in Pr mm.000 (alternatively enter a value of 1000 in Pr mm.000) and press the red  reset button.	
Run	Drive is now ready to run	

7.3.2 RFC - A mode (without position feedback)

Induction motor without position feedback

Action	Detail	
Before power-up	Ensure: <ul style="list-style-type: none"> The drive enable signal is not given (terminal 31 & 34) Run signal is not given 	
Power-up the drive	If the mode is incorrect see section 5.5 <i>Changing the operating mode</i> on page 64. Ensure: <ul style="list-style-type: none"> Drive displays 'inhibit' If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 172.	
Enter motor nameplate details	Enter: <ul style="list-style-type: none"> Motor rated frequency in Pr 00.039 (Hz) Motor rated current in Pr 00.006 (A) Motor rated speed in Pr 00.007 (rpm) Motor rated voltage in Pr 00.008 (V) - check if Δ or Δ connection 	
Set maximum frequency	Enter: <ul style="list-style-type: none"> Maximum frequency in Pr 00.002 (Hz) 	
Set acceleration / deceleration rates	Enter: <ul style="list-style-type: none"> Acceleration rate in Pr 00.003 (s/100 Hz) Deceleration rate in Pr 00.004 (s/100 Hz) (if braking resistor installed, set Pr 00.028 = FAST. Also ensure Pr 10.030, Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen). 	
Autotune	<p>The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive.</p> <div style="border: 1px solid black; padding: 5px;">  <p>WARNING A rotating autotune will cause the motor to accelerate up to $2/3$ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference.</p> <p>The drive can be stopped at any time by removing the run signal or removing the drive enable.</p> </div> <ul style="list-style-type: none"> A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. The stationary autotune measures the stator resistance and transient inductance of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr 04.013 and Pr 04.014 are updated. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.009. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at $2/3$ base speed in the direction selected. The rotating autotune measures the stator inductance of the motor and calculates the power factor. <p>To perform an autotune:</p> <ul style="list-style-type: none"> Set Pr 00.038 = 1 for a stationary autotune or set Pr 00.038 = 2 for a rotating autotune Close the drive enable signal (terminal 31 & 34). The drive will display 'ready'. Close the run signal (terminal 12 or 13). The display will flash 'Auto Tune' while the drive is performing the autotune. Wait for the drive to display 'Inhibit' and for the motor to come to a standstill <p>If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 172.</p> <ul style="list-style-type: none"> Remove the drive enable and run signal from the drive. 	  
Save parameters	Select 'Save Parameters' in Pr mm.000 (alternatively enter a value of 1000 in Pr mm.000) and press red 	
Run	The drive is now ready to run	

8 Optimization

This chapter takes the user through methods of optimizing the drive set-up and maximize the performance. The auto-tuning features of the drive simplify the optimization tasks.

8.1 Motor map parameters

8.1.1 Open loop motor control

Pr 00.006 {05.007} Motor Rated Current

Defines the maximum continuous motor current

- The rated current parameter must be set to the maximum continuous current of the motor. The motor rated current is used in the following:
- Current limits (see section section 8.3 *Current limits* on page 81, for more information)
- Motor thermal overload protection (see section section 8.4 *Motor thermal protection* on page 81, for more information)
- Vector mode voltage control (see *Control Mode* later in this table)
- Slip compensation (see *Enable Slip Compensation* (05.027), later in this table)
- Dynamic V/F control


Pr 00.008 {05.009} Motor Rated Voltage

Defines the voltage applied to the motor at rated frequency

Pr 00.039 {05.006} Motor Rated Frequency

Defines the frequency at which rated voltage is applied

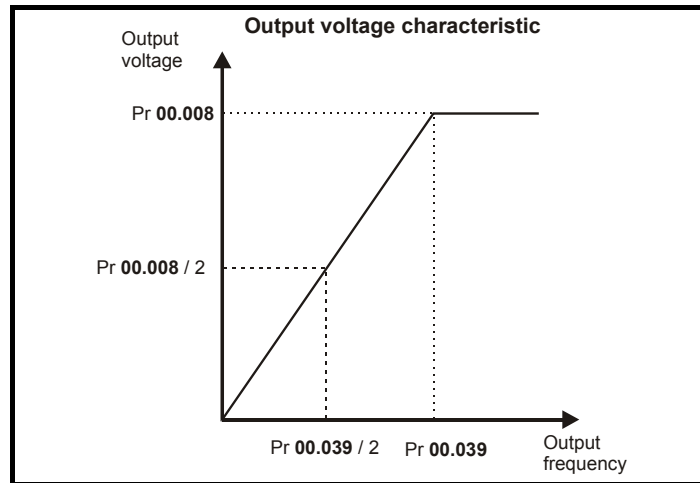The *Motor Rated Voltage* (00.008) and the *Motor Rated Frequency* (00.039) are used to define the voltage to frequency characteristic applied to the motor (see *Control Mode*, later in this table). The *Motor Rated Frequency* is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see *Motor Rated Speed*, later in this table).



Pr 00.007 {05.008} Motor Rated Speed

Defines the full load rated speed of the motor

Pr 00.040 {05.011} Number of Motor Poles

Defines the number of motor poles

The motor rated speed and the number of poles are used with the motor rated frequency to calculate the rated slip of induction machines in Hz.

$$\text{Rated slip (Hz)} = \text{Motor rated frequency} - (\text{Number of pole pairs} \times [\text{Motor rated speed} / 60]) = 00.039 = \left(\frac{00.040}{2} \times \frac{00.007}{60} \right)$$

If Pr 00.007 is set to 0 or to synchronous speed, slip compensation is disabled. If slip compensation is required this parameter should be set to the nameplate value, which should give the correct rpm for a hot machine. Sometimes it will be necessary to adjust this when the drive is commissioned because the nameplate value may be inaccurate. Slip compensation will operate correctly both below base speed and within the field-weakening region. Slip compensation is normally used to correct for the motor speed to prevent speed variation with load. The rated load rpm can be set higher than synchronous speed to deliberately introduce speed droop. This can be useful to aid load sharing with mechanically coupled motors.

Pr 00.040 is also used in the calculation of the motor speed display by the drive for a given output frequency. When Pr 00.040 is set to 'Automatic', the number of motor poles is automatically calculated from the rated frequency Pr 00.039, and the motor rated speed Pr 00.007.

$$\text{Number of poles} = 120 \times (\text{Rated Frequency} (00.039) / \text{Rated Speed} (00.007)) \text{ rounded to the nearest even number.}$$

Pr 00.043 {05.010} Motor Rated Power Factor

Defines the angle between the motor voltage and current

The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. The power factor is used in conjunction with the *Motor Rated Current* (00.006), to calculate the rated active current and magnetising current of the motor. The rated active current is used extensively to control the drive, and the magnetising current is used in vector mode stator resistance compensation. It is important that this parameter is set up correctly. The drive can measure the motor rated power factor by performing a rotating autotune (see *Autotune* (Pr 00.038), below).

Pr 00.038 {05.012} Auto-tune

There are two autotune tests available in open loop mode, a stationary and a rotating test. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive.

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary test measures the *Stator Resistance* (05.017), *Transient Inductance* (05.024), *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060) which are required for good performance in vector control modes (see *Control Mode* later in this table). The stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr **00.009**. To perform a Stationary autotune, set Pr **00.038** to 1, and provide the drive with both an enable signal (on terminals 31 & 34) and a run signal (on terminals 12 or 13).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, as above, then a rotating test is performed in which the motor is accelerated with currently selected ramps up to a frequency of *Motor Rated Frequency* (05.006) x 2/3, and the frequency is maintained at that level for 4 seconds. *Stator Inductance* (05.025) is measured and this value is used in conjunction with other motor parameters to calculate *Motor Rated Power Factor* (05.010). To perform a Rotating autotune, set Pr **00.038** to 2, and provide the drive with both an enable signal (on terminals 31 & 34) and a run signal (on terminals 12 or 13).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminals 31 & 34, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the *Control Word* (06.042) and *Control Word Enable* (06.043).

Pr 00.041 {05.014} Control Mode

There are several voltage modes available which fall into two categories, vector control and fixed boost.

Vector control

Vector control mode provides the motor with a linear voltage characteristic from 0 Hz to *Motor Rated Frequency*, and then a constant voltage above motor rated frequency. When the drive operates between motor rated frequency/50 and motor rated frequency/4, full vector based stator resistance compensation is applied. When the drive operates between motor rated frequency/4 and motor rated frequency/2 the stator resistance compensation is gradually reduced to zero as the frequency increases. For the vector modes to operate correctly the *Motor Rated Power Factor*, *Stator Resistance* (05.017), *Maximum Deadtime Compensation* (05.059) and current at *Maximum Deadtime Compensation* (05.060) are all required to be set up accurately. The drive can be made to measure these by performing an autotune (see Pr **00.038** *Autotune*). The drive can also be made to measure the stator resistance automatically every time the drive is enabled or the first time the drive is enabled after it is powered up, by selecting one of the vector control voltage modes.

(0) **Ur S** = The stator resistance is measured and the parameters for the selected motor map are over-written each time the drive is made to run. This test can only be done with a stationary motor where the flux has decayed to zero. Therefore this mode should only be used if the motor is guaranteed to be stationary each time the drive is made to run. To prevent the test from being done before the flux has decayed there is a period of 1 second after the drive has been in the ready state during which the test is not done if the drive is made to run again. In this case, previously measured values are used. Ur S mode ensures that the drive compensates for any change in motor parameters due to changes in temperature. The new value of stator resistance is not automatically saved to the drive's EEPROM.

(4) **Ur I** = The stator resistance is measured when the drive is first made to run after each power-up. This test can only be done with a stationary motor. Therefore this mode should only be used if the motor is guaranteed to be stationary the first time the drive is made to run after each power-up. The new value of stator resistance is not automatically saved to the drive's EEPROM.

(1) **Ur** = The stator resistance and voltage offset are not measured. The user can enter the motor and cabling resistance into the *Stator Resistance* (05.017). However this will not include resistance effects within the drive inverter. Therefore if this mode is to be used, it is best to use an autotune test initially to measure the stator resistance.

(3) **Ur_Auto** = The stator resistance is measured once, the first time the drive is made to run. After the test has been completed successfully the *Control Mode* (00.041) is changed to Ur mode. The *Stator Resistance* (05.017) parameter is written to, and along with the *Control Mode* (00.041), are saved in the drive's EEPROM. If the test fails, the voltage mode will stay set to Ur Auto and the test will be repeated next time the drive is made to run.

Fixed boost



The stator resistance is not used in the control of the motor, instead a fixed characteristic with low frequency voltage boost as defined by Pr **00.042**, is used. Fixed boost mode should be used when the drive is controlling multiple motors. There are two settings of fixed boost available:

(2) **Fixed** = This mode provides the motor with a linear voltage characteristic from 0 Hz to *Motor Rated Frequency* (00.039), and then a constant voltage above rated frequency.

(5) **Square** = This mode provides the motor with a square law voltage characteristic from 0 Hz to *Motor Rated Frequency* (00.039), and then a constant voltage above rated frequency. This mode is suitable for variable torque applications like fans and pumps where the load is proportional to the square of the speed of the motor shaft. This mode should not be used if a high starting torque is required.


Pr 00.041 {05.014} Control Mode (cont)

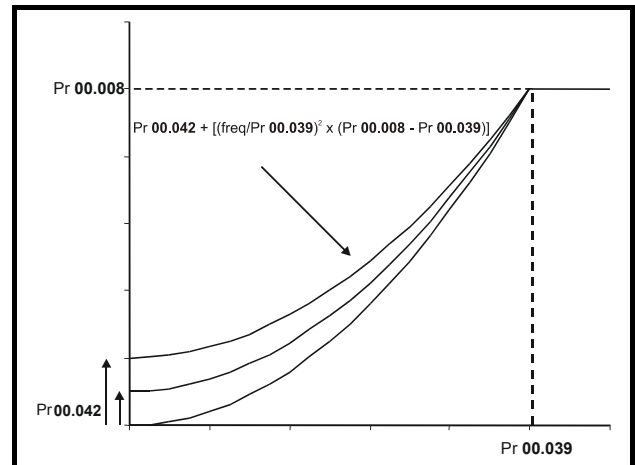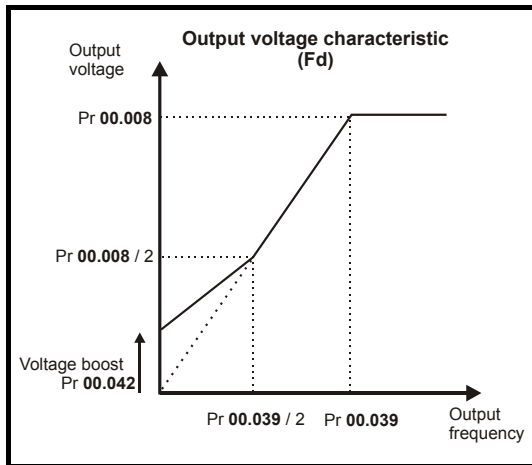For both these modes, at low frequencies (from 0 Hz to $\frac{1}{2} \times \text{Pr } 00.039$) a voltage boost is applied as defined by Pr 00.042 as shown below:



Pr 05.027 Enable Slip Compensation

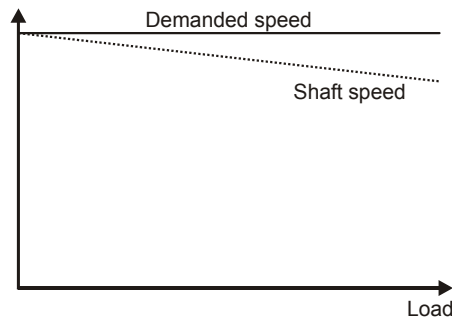When a motor, being controlled in open loop mode, has load applied a characteristic of the motor is that the output speed droops in proportion to the load applied as shown:



In order to prevent the speed droop shown above slip compensation should be enabled. To enable slip compensation Pr 05.027 must be set to a 1 (this is the default setting), and the motor rated speed must be entered in Pr 00.007 (Pr 05.008).

The motor rated speed parameter should be set to the synchronous speed of the motor minus the slip speed. This is normally displayed on the motor nameplate, i.e. for a typical 18.5 kW, 50 Hz, 4 pole motor, the motor rated speed would be approximately 1465 rpm. The synchronous speed for a 50 Hz, 4 pole motor is 1500 rpm, so therefore the slip speed would be 35 rpm. If the synchronous speed is entered in Pr 00.007, slip compensation will be disabled. If too small a value is entered in Pr 00.007, the motor will run faster than the demanded frequency. The synchronous speeds for 50 Hz motors with different numbers of poles are as follows:

2 pole = 3000 rpm, 4 pole = 1500 rpm, 6pole =1000 rpm, 8 pole = 750 rpm

8.1.2 RFC-A mode

Induction motor without Position feedback

Pr 00.006 {05.007} Motor Rated Current	Defines the maximum motor continuous current
<p>The motor rated current parameter must be set to the maximum continuous current of the motor. The motor rated current is used in the following:</p> <ul style="list-style-type: none"> • Current limits (see section 8.3 <i>Current limits</i> on page 81, for more information). • Motor thermal overload protection (see section 8.4 <i>Motor thermal protection</i> on page 81, for more information) • Vector control algorithm 	
Pr 00.008 {05.009} Motor Rated Voltage	Defines the voltage applied to the motor at rated frequency
Pr 00.039 {05.006} Motor Rated Frequency	Defines the frequency at which rated voltage is applied
<p>The <i>Motor Rated Voltage</i> (00.008) and the <i>Motor Rated Frequency</i> (Pr 00.039) are used to define the voltage to frequency characteristic applied to the motor (see <i>Control Mode</i> (00.041), later in this table). The motor rated frequency is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see <i>Motor Rated Speed</i> (00.007), later in this table).</p>	
<p>The graph, titled "Output voltage characteristic", plots Output voltage on the vertical axis against Output frequency on the horizontal axis. The curve starts at the origin (0,0) and rises linearly to a point where the frequency is Pr 00.039 and the voltage is Pr 00.008. From this point, the curve becomes horizontal, indicating constant voltage. A dashed line from the point (Pr 00.039 / 2, Pr 00.008 / 2) shows that the voltage is proportional to the frequency in the linear region.</p>	
Pr 00.007 {05.008} Motor Rated Speed	Defines the full load rated speed of the motor
Pr 00.040 {05.011} Number of Motor Poles	Defines the number of motor poles
<p>The motor rated speed and motor rated frequency are used to determine the full load slip of the motor which is used by the vector control algorithm. Incorrect setting of this parameter has the following effects:</p> <ul style="list-style-type: none"> • Reduced efficiency of motor operation • Reduction of maximum torque available from the motor • Reduced transient performance • Inaccurate control of absolute torque in torque control modes <p>The nameplate value is normally the value for a hot motor; however, some adjustment may be required when the drive is commissioned if the nameplate value is inaccurate. A fixed value can be entered in this parameter.</p> <p>When Pr 00.040 is set to 'Automatic', the number of motor poles is automatically calculated from the <i>Motor Rated Frequency</i> (00.039), and the <i>Motor Rated Speed</i> (00.007).</p> <p>Number of poles = $120 \times (\text{Motor Rated Frequency (00.039)} / \text{Motor Rated Speed (00.007)})$ rounded to the nearest even number.</p>	
Pr 00.009 {5.10} Motor Rated Power Factor	Defines the angle between the motor voltage and current
<p>The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. If the <i>Stator Inductance</i> (05.025) is set to zero then the power factor is used in conjunction with the <i>Motor Rated Current</i> (00.006) and other motor parameters to calculate the rated active and magnetising currents of the motor, which are used in the vector control algorithm. If the stator inductance has a non-zero value this parameter is not used by the drive, but is continuously written with a calculated value of power factor. The stator inductance can be measured by the drive by performing a rotating autotune (see <i>Autotune</i> (Pr 00.038), later in this table).</p>	

Pr 00.038 {05.012} Autotune

There are three autotune tests available in RFC-A mode, a stationary test, a rotating test and an inertia measurement test. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive. An inertia measurement test should be performed separately to a stationary or rotating autotune.

NOTE

It is highly recommended that a rotating autotune is performed (Pr 00.038 set to 2).

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary autotune measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr 04.013 and Pr 04.014 are updated. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.009. To perform a Stationary autotune, set Pr 00.038 to 1, and provide the drive with both an enable signal (on terminal 31 & 34) and a run signal (on terminal 12 or 13).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, a rotating test is then performed which the motor is accelerated with currently selected ramps up to a frequency of *Motor Rated Frequency* (05.006) x 2/3, and the frequency is maintained at the level for up to 40 s. During the rotating autotune the *Stator Inductance* (05.025), and the motor saturation breakpoints (Pr 05.029, Pr 05.030, Pr 05.062 and Pr 05.063) are modified by the drive. The power factor is also modified for user information only, but is not used after this point as the stator inductance is used in the vector control algorithm instead. To perform a Rotating autotune, set Pr 00.038 to 2, and provide the drive with both an enable signal (on terminal 31 & 32) and a run signal (on terminal 12 or 13).
- The inertia measurement test can measure the total inertia of the load and the motor. This is used to set the frequency loop gains (see Frequency loop gains) and to provide torque feed-forwards when required during acceleration. During the inertia measurement test motor is accelerated with the currently selected ramps up to a speed of *Motor Rated Speed* (05.008) / 4, and this speed is maintained at this level for 60 seconds. The *Motor And Load Inertia* (03.018) is measured. If the required speed is not achieved on the final attempt the test is aborted and an Autotune trip is initiated. To perform an Inertia measurement autotune, set Pr 00.038 to 3, and provide the drive with both an enable signal (on terminal 31 & 34) and a run signal (on terminal 12 or 13). Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31 & 34, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the control word (Pr 06.042 & Pr 06.043).

{04.013} / {04.014} Current Loop Gains

The current loop gains proportional (Kp) and integral (Ki) gains control the response of the current loop to a change in current (torque) demand. The default values give satisfactory operation with most motors. However, for optimal performance in dynamic applications it may be necessary to change the gains to improve the performance. The *Current Controller Kp Gain* (04.013) is the most critical value in controlling the performance. The values for the current loop gains can be calculated by performing a stationary or rotating autotune (see *Autotune* Pr 00.038, earlier in this table) the drive measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor and calculates the current loop gains.

This will give a step response with minimum overshoot after a step change of current reference. The proportional gain can be increased by a factor of 1.5 giving a similar increase in bandwidth; however, this gives a step response with approximately 12.5 % overshoot. The equation for the integral gain gives a conservative value. In some applications where it is necessary for the reference frame used by the drive to dynamically follow the flux very closely (i.e. high speed Sensorless RFC-A induction motor applications) the integral gain may need to have a significantly higher value.

Frequency Loop Gains

(00.065 {03.010}, Pr 00.066 {03.011})

The frequency loop gains control the response of the frequency controller to a change in frequency demand. The frequency controller includes proportional (Kp) and integral (Ki) feed forward terms, and a differential (Kd) feedback term. The drive holds two sets of these gains and either set may be selected for use by the frequency controller with Pr **03.016**. If Pr **03.016** = 0, gains Kp1, Ki1 and Kd1 (Pr **03.010** to Pr **03.012**) are used, and if Pr **03.016** = 1, gains Kp2, Ki2 and Kd2 (Pr **03.013** to Pr **03.015**) are used. Pr **03.016** may be changed when the drive is enabled or disabled.

Frequency Controller Proportional Gain (Kp), Pr **00.007** {03.010} and Pr **03.013**

If the proportional gain has a value and the integral gain is set to zero the controller will only have a proportional term, and there must be a frequency error to produce a torque reference. Therefore as the motor load increases there will be a difference between the reference and actual frequencies. This effect, called regulation, depends on the level of the proportional gain, the higher the gain the smaller the frequency error for a given load. If the proportional gain is too high either the acoustic noise produced by numerical quantization becomes unacceptable, or the stability limit is reached.

Frequency Controller Integral Gain (Ki), Pr **00.008** {03.011} and Pr **03.014**

The integral gain is provided to prevent frequency regulation. The error is accumulated over a period of time and used to produce the necessary torque demand without any frequency error. Increasing the integral gain reduces the time taken for the frequency to reach the correct level and increases the stiffness of the system, i.e. it reduces the positional displacement produced by applying a load torque to the motor. Unfortunately increasing the integral gain also reduces the system damping giving overshoot after a transient. For a given integral gain the damping can be improved by increasing the proportional gain. A compromise must be reached where the system response, stiffness and damping are all adequate for the application. For RFC-A Sensorless mode, it is unlikely that the integral gain can be increased much above 0.50.

Differential Gain (Kd), Pr **03.012** and Pr **03.015**

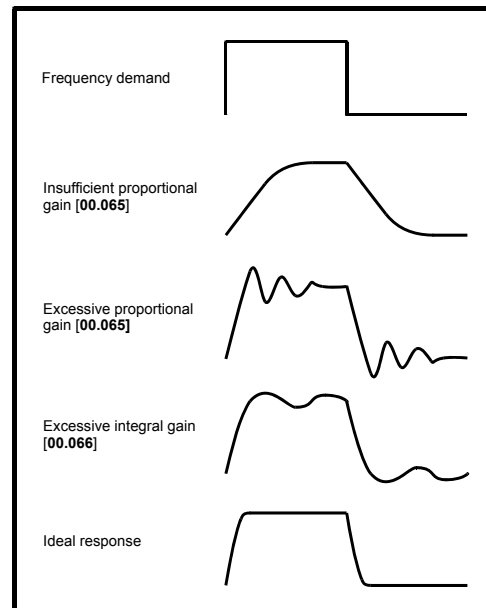
The differential gain is provided in the feedback of the frequency controller to give additional damping. The differential term is implemented in a way that does not introduce excessive noise normally associated with this type of function. Increasing the differential term reduces the overshoot produced by under-damping, however, for most applications the proportional and integral gains alone are sufficient.

Gain Change Threshold, Pr **03.017**

If the Frequency Controller Gain Select (03.016) = 2, gains Kp1, Ki1 and Kd1 (Pr **03.010** to Pr **03.012**) are used while the modulus of the frequency demand is less than the value held by Gain Change Threshold (**03.017**), else gains Kp2, Ki2 and Kd2 (Pr **03.013** to Pr **03.015**) will be used.

Tuning the frequency loop gains:

This involves the connecting of an oscilloscope to analog output 1 to monitor the frequency feedback. Give the drive a step change in frequency reference and monitor the response of the drive on the oscilloscope. The proportional gain (Kp) should be set up initially. The value should be increased up to the point where the frequency overshoots and then reduced slightly. The integral gain (Ki) should then be increased up to the point where the frequency becomes unstable and then reduced slightly. It may now be possible to increase the proportional gain to a higher value and the process should be repeated until the system response approaches the ideal response as shown. The diagram shows the effect of incorrect P and I gain settings as well as the ideal response.



8.2 Maximum motor rated current

The maximum motor rated current is the *Maximum Heavy Duty Current Rating* (11.032).

The values for the Heavy Duty rating can be found in section 2.2 *Ratings* on page 10.

8.3 Current limits

The default setting for the current limit parameters for size 1 to 4 is:

- 165 % x motor rated current for open loop mode
- 175 % x motor rated current for RFC-A

There are three parameters which control the current limits:

- Motoring current limit: power flowing from the drive to the motor
- Regen current limit: power flowing from the motor to the drive
- Symmetrical current limit: current limit for both motoring and regen operation

The lowest of either the motoring and regen current limit, or the symmetrical current limit applies.

The maximum setting of these parameters depends on the values of motor rated current, drive rated current and the power factor.

The drive can be oversized to permit a higher current limit setting to provide higher accelerating torque as required up to a maximum of 1000 %.

8.4 Motor thermal protection

A time constant thermal model is provided to estimate the motor temperature as a percentage of its maximum allowed temperature.

The motor thermal protection is modelled using losses in the motor. The losses in the motor are calculated as a percentage value, so that under these conditions the *Motor Protection Accumulator* (04.019) would eventually reach 100 %.

Percentage losses = 100 % x [Load related losses]

Where:

$$\text{Load related losses} = (1 - K_{fe}) \times (I / (K_1 \times I_{\text{Rated}}))^2$$


Where:

I = *Current Magnitude* (04.001)

I_{Rated} = *Motor Rated Current* (05.007)

If *Motor Rated Current* (05.007) \leq *Maximum Heavy Duty Current* (11.032)

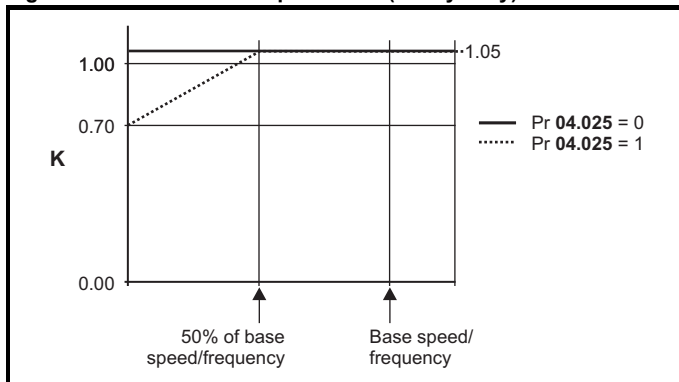Figure 8-1 Motor thermal protection (Heavy Duty)



If Pr **04.025** is 0 the characteristic is for a motor which can operate at rated current over the whole speed range. Induction motors with this type of characteristic normally have forced cooling. If Pr **04.025** is 1 the characteristic is intended for motors where the cooling effect of motor fan reduces with reduced motor speed below 50 % of base speed/frequency. The maximum value for K_1 is 1.05, so that above the knee of the characteristics the motor can operate continuously up to 105 % current.

When the estimated temperature in Pr **04.019** reaches 100 % the drive takes some action depending on the setting of Pr **04.016**. If Pr **04.016** is 0, the drive trips when Pr **04.019** reaches 100 %. If Pr **04.016** is 1, the current limit is reduced to $(K - 0.05) \times 100 \%$ when Pr **04.019** reaches 100 %.

The current limit is set back to the user defined level when Pr **04.019** falls below 95 %. The thermal model temperature accumulator is reset to zero at power-up and accumulates the temperature of the motor while the drive remains powered-up. If the rated current defined by Pr **05.007** is altered, the accumulator is reset to zero.

The default setting of the thermal time constant (Pr **04.015**) is 179 s which is equivalent to an overload of 150 % for 120 s from cold.

8.5 Switching frequency

The default switching frequency is 3 kHz, however this can be increased up to a maximum of 16 kHz by Pr **05.018** (dependent on drive size). The available switching frequencies are shown below.

Table 8-1 Available switching frequencies

Drive size	Model	0.667	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
1	All	✓	✓	✓	✓	✓	✓	✓	✓	✓
2										
3										
4										

If switching frequency is increased from 3 kHz the following apply:

1. Increased heat loss in the drive, which means that derating to the output current must be applied.
See the derating tables for switching frequency and ambient temperature in section 12.1.1 *Power and current ratings (Derating for switching frequency and temperature)* on page 159.
2. Reduced heating of the motor - due to improved output waveform quality.
3. Reduced acoustic noise generated by the motor.
4. Increased sample rate on the speed and current controllers. A trade off must be made between motor heating, drive heating and the demands of the application with respect to the sample time required.

Table 8-2 Sample rates for various control tasks at each switching frequency


	0.667 1 kHz	3, 6, 12 kHz	2, 4, 8, 16 kHz	Open loop	RFC-A
Level 1	250 μ s	167 μ s	2 kHz = 250 μ s 4 kHz = 125 μ s 8 kHz = 125 μ s 16 kHz = 125 μ s	Peak limit	Current controllers
Level 2	250 μ s			Current limit and ramps	Speed controller and ramps
Level 3	1 ms			Voltage controller	
Level 4	4 ms			Time critical user interface	
Background				Non-time critical user interface	

8.5.1 Field weakening (constant power) operation

(Open loop and RFC-A mode only)

The drive can be used to run an induction machine above synchronous speed into the constant power region. The speed continues to increase and the available shaft torque reduces. The characteristics below show the torque and output voltage characteristics as the speed is increased above the rated value.

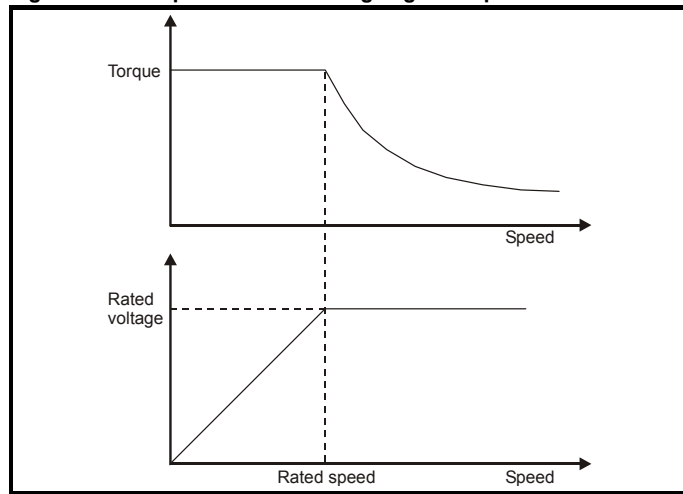Figure 8-2 Torque and rated voltage against speed



Care must be taken to ensure the torque available above base speed is sufficient for the application to run satisfactorily.

The saturation breakpoint parameters (Pr **05.029**, Pr **05.030**, Pr **05.062** and Pr **05.063**) found during the autotune in RFC-A mode ensure the magnetizing current is reduced in the correct proportion for the specific motor. (In open loop mode the magnetizing current is not actively controlled).

8.5.2 Maximum frequency

In all operating modes the maximum output frequency is limited to 550 Hz.

8.5.3 Over-modulation (open-loop only)

The maximum output voltage level of the drive is normally limited to an equivalent of the drive input voltage minus voltage drops within the drive (the drive will also retain a few percent of the voltage in order to maintain current control). If the motor rated voltage is set at the same level as the supply voltage, some pulse deletion will occur as the drive output voltage approaches the rated voltage level. If Pr **05.020** (Over-modulation enable) is set to 1 the modulator will allow over modulation, so that as the output frequency increases beyond the rated frequency the voltage continues to increase above the rated voltage. The modulation depth will increase beyond unity; first producing trapezoidal and then quasi-square waveforms.

This can be used for example:

- To obtain high output frequencies with a low switching frequency which would not be possible with space vector modulation limited to unity modulation depth,

or

- In order to maintain a higher output voltage with a low supply voltage.

The disadvantage is that the machine current will be distorted as the modulation depth increases above unity, and will contain a significant amount of low order odd harmonics of the fundamental output frequency. The additional low order harmonics cause increased losses and heating in the motor.

9 NV Media Card Operation

9.1 Introduction

The Non-Volatile Media Card feature enables simple configuration of parameters, parameter back-up and drive cloning using an SD card.


The SD card can be used for:

- Parameter copying between drives
- Saving drive parameter sets

The NV Media Card (SD card) is located in the AI-Backup Adaptor.

The drive only communicates with the NV Media Card when commanded to read or write, meaning the card may be "hot swapped".

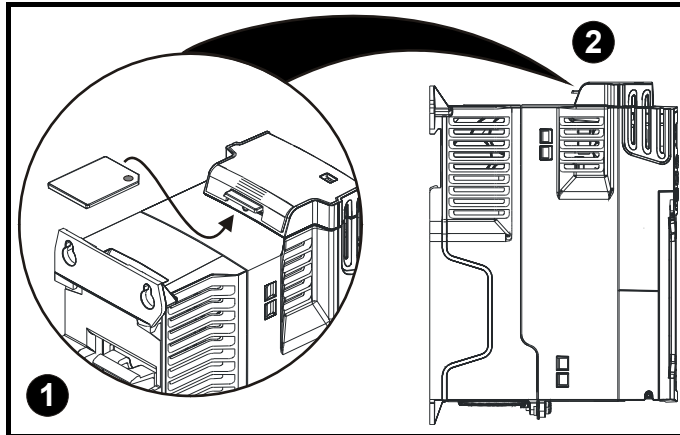Figure 9-1 Installation of the SD card



1. Installing the SD card
2. SD card installed

NOTE

Before the SD card can be removed from the AI-Backup adaptor, the AI-Backup adaptor needs to be removed from the host drive.

NOTE

A flat bladed screwdriver or similar tool is required in order to insert the SD card fully into the AI-Backup adaptor when the AI-Backup adaptor is installed on the drive.

9.2 SD card support

An SD memory card can be inserted in the AI-Backup adaptor in order to transfer data to the drive, however the following limitations should be noted:

If a parameter from the source drive does not exist in the target drive then no data is transferred for that parameter.

If the data for the parameter in the target drive is out of range then the data is limited to the range of the target parameter.

If the target drive has a different rating to the source drive then the normal rules for this type of transfer apply as described later.

No checking is possible to determine if the source and target product types are the same, and so no warning is given if they are different.

If an SD card is used then the drive will recognise the following file types through the drive parameter interface.

File Type	Description
Parameter file	A file that contains all clonable user save parameters from the drive menus (1 to 30) in difference from default format
Macro file	The same as a parameter file, but defaults are not loaded before the data is transferred from the card

These files can be created on a card by the drive and then transferred to any other drive including derivatives. If the Drive Derivative (11.028) is different between the source and target drives then the data is transferred but a {Card Product} trip is initiated.

A user defined data file can be created by an option module via the drive.

It is possible for other data to be stored on the card, but this should not be stored in the <MCDF> folder and it will not be visible via the drive parameter interface.

9.2.1 Changing the drive mode

If the source drive mode is different from the target drive mode then the mode will be changed to the source drive mode before the parameters are transferred. If the required drive mode is outside the allowed range for the target then a {Card Drive Mode} trip is initiated and no data is transferred.

9.2.2 Different voltage ratings

If the voltage rating of the source and target drives is different then all parameters except those that are rating dependent (i.e. attribute RA=1) are transferred to the target drive. The rating dependent parameters are left at their default values. After the parameters have been transferred and saved to non-volatile memory a {Card Rating} trip is given as a warning. The table below gives a list of the rating dependent parameters.

Parameters
Standard Ramp Voltage (02.008)
Motoring Current Limit (04.005)
M2 Motoring Current Limit (21.027)
Regenerating Current Limit (04.006)
M2 Regenerating Current Limit (21.028)
Symmetrical Current Limit (04.007)
M2 Symmetrical Current Limit (21.029)
User Current Maximum Scaling (04.024)
Motor Rated Current (05.007)
M2 Motor Rated Current (21.007)
Motor Rated Voltage (05.009)
M2 Motor Rated Voltage (21.009)
Motor Rated Power Factor (05.010)
M2 Motor Rated Power Factor (21.010)
Stator Resistance (05.017)
M2 Stator Resistance (21.012)
Maximum Switching Frequency (05.018)
Transient Inductance /Ld (05.024)
M2 Transient Inductance /Ld (21.014)
Stator Inductance (05.025)
M2 Stator Inductance (21.024)
Injection Braking Level (06.006)
Supply Loss Detection Level (06.048)

9.2.3 Different option modules fitted

If the Option ID Code (15.001) is different for any option module installed to the source drive compared to the destination drive then the parameters for the set-up for that option module are not transferred, but the parameters are set to their default values. After the parameters have been transferred and saved to non-volatile memory a {Card Option} trip is given as a warning.

9.2.4 Different current ratings

If any of the current rating parameters (Maximum Heavy Duty Rating (11.032), Maximum Rated Current (11.060) or Full Scale Current Kc (11.061)) are different between the source and target then all parameters are still written to the target drive, but some may be limited by their allowed range. To give similar performance in the target compared to the source drive the frequency and current controller gains are modified as shown below. Note that this does not apply if the file identification number is larger than 500.

Gains	Multiplier
Frequency Controller Proportional Gain Kp1 (03.010) Frequency Controller Integral Gain Ki1 (03.011) Frequency Controller Proportional Gain Kp2 (03.013) Frequency Controller Integral Gain Ki2 (03.014) M2 Frequency Controller Proportional Gain Kp (21.017) M2 Frequency Controller Integral Gain Ki (21.018)	[Source Full Scale Current Kc (11.061)] / [Target Full Scale Current Kc (11.061)]
Current Controller Kp Gain (04.013) Current Controller Ki Gain (04.014) M2 Current Controller Kp Gain (21.022) M2 Current Controller Ki Gain (21.023)	[Source Full Scale Current Kc (11.061)] / [Target Full Scale Current Kc (11.061)]

9.2.5 Different variable maximums

It should be noted that if ratings of the source and target drives are different, or the option module installed to the source and target drives are different, it is possible that some parameters with variable maximums may be limited and not have the same values as in the source drive.

9.2.6 Macro files

Macro files are created in the same way as parameter files except that *NV Media Card Create Special File* (11.072) must be set to 1 before the file is created on the NV media card. *NV Media Card Create Special File* (11.072) is set to zero after the file has been created or the transfer fails. When a macro file is transferred to a drive, the drive mode is not changed even if the actual mode is different to that in the file, and defaults are not loaded before the parameters are copied from the file to the drive.

Functions in Pr **mm.000**

The table below gives a summary of the values used in Parameters mm.000 (mm.000) for NV media card operations. The yyy represents the file identification number.

Value	Action
2001	Transfer the drive parameters to parameter file 001 and sets the block as bootable. This will include the parameters from the attached option module.
4yyy	Transfer the drive parameters to parameter file yyy. This will include the parameters from attached option module.
5yyy	Transfer the onboard user program to onboard user program file yyy.
6yyy	Load the drive parameters from parameter file yyy or the onboard user program from onboard user program file yyy.
7yyy	Erase file yyy.
8yyy	Compare the data in the drive with the file yyy. The data in the drive is compared to the data in the file yyy. If the files are the same then <i>Parameter mm.000</i> (mm.000) is simply reset to 0 when the compare is complete. If the files are different a {Card Compare} trip is initiated. All other NV media card trips also apply.
9555	Clear the warning suppression flag.
9666	Set the warning suppression flag.
9777	Clear the read-only flag.
9888	Set the read-only flag.
40yyy	Backup all drive data (parameter differences from defaults, an onboard user program and miscellaneous option data), including the drive name; the store will occur to the </fs/MCDF/driveyyy/> folder; if it does not exist, it will be created. Since the name is stored, this is a backup, rather than a clone. The command value will be cleared when all drive and option data has been saved.
60yyy	Load all drive data (parameter differences from defaults, an onboard user program and miscellaneous option data); the load will come from the </fs/MCDF/driveyyy/> folder. The command value will not be cleared until the drive and all option data have been loaded.

9.3 NV Media Card parameters

Table 9-1 Key to parameter table coding

RW	Read / Write	ND	No default value
RO	Read only	NC	Not copied
Num	Number parameter	PT	Protected parameter
Bit	Bit parameter	RA	Rating dependant
Txt	Text string	US	User save
Bin	Binary parameter	PS	Power-down save
Fl	Filtered	DE	Destination

9.4 NV Media Card trips

After an attempt to read, write or erase data from a NV Media Card a trip is initiated if there has been a problem with the command.

See Chapter 13 *Diagnostics* on page 172 for more information on NV Media Card trips.

11.036		NV Media Card File Previously Loaded			
RO	Num	NC	PT		
⇅	0 to 999	⇒			0

This parameter shows the number of the data block last transferred from an SD card to the drive. If defaults are subsequently reloaded this parameter is set to 0.

11.037		NV Media Card File Number			
RW	Num				
⇅	0 to 999	⇒			0

This parameter should have the data block number which the user would like the information displayed in Pr 11.038 and Pr 11.039.

11.038		NV Media Card File Type			
RO	Txt	ND	NC	PT	
⇅	0 to 3	⇒			0

Displays the type of data block selected with Pr 11.037.

Pr 11.038	String	Type
0	None	No file selected
1	Open-loop	Open-loop mode parameter file
2	RFC-A	RFC-A mode parameter file
3	Reserved	Reserved
4	Reserved	Reserved
5	User Program	Onboard user program file

11.039		NV Media Card File Version			
RO	Num	ND	NC	PT	
⇅	0 to 9999	⇒			0

Displays the version number of the file selected in Pr 11.037.

11.042		Parameter Cloning			
RW	Txt	NC			US*
⇅	None (0), Read (1), Program (2), Auto (3), Boot (4)	⇒			0

10 Onboard PLC

10.1 Onboard PLC and Machine Control Studio

The drive has the ability to store and execute a 16 kB Onboard PLC user program without the need for additional hardware in the form of an option module.

Machine Control Studio is an IEC61131-3 development environment designed for use with Unidrive M and compatible application modules. Machine Control Studio is based on CoDeSys from 3S-Smart Software Solutions.

All of the programming languages defined in the IEC standard IEC 61131-3 are supported in the Machine Control Studio development environment.

- ST (Structured text)
- LD (Ladder diagram)
- FBD (Function block diagram)
- IL (Instruction list)
- SFC (Sequential function chart)
- CFC (Continuous Function Chart). CFC is an extension to the standard IEC programming languages

Machine Control Studio provides a complete environment for the development of user programs. Programs can be created, compiled and downloaded to a Unidrive M for execution via the communications port on the front of the drive. The run-time operation of the compiled program on the target can also be monitored using Machine Control Studio and facilities are provided to interact with the program on the target by setting new values for target variables and parameters.

The Onboard PLC and Machine Control Studio form the first level of functionality in a range of programmable options for Unidrive M.

Machine Control Studio can be downloaded from www.controltechniques.com.

See the Machine Control Studio help file for more information regarding using Machine Control Studio, creating user programs and downloading user programs to the drive.

10.2 Benefits

The combination of the Onboard PLC and Machine Control Studio, means that the drive can replace nano and some micro PLCs in many applications

Machine Control Studio benefits from access to the standard CoDeSys function and function block libraries as well as those from third parties. Functions and function blocks available as standard in Machine Control Studio include, but not limited to, the following:

- Arithmetic blocks
- Comparison blocks
- Timers
- Counters
- Multiplexers
- Latches
- Bit manipulation

Typical applications for the Onboard PLC include:

- Ancillary pumps
- Fans and control valves
- Interlocking logic
- Sequences routines
- Custom control words.

10.3 Features

The Unidrive M Onboard PLC user program has the following features:

10.3.1 Tasks

The Onboard PLC allows use of two tasks.

- **Clock:** A high priority real time task. The clock task interval can be set from 16 ms to 262 s in multiples of 16 ms. The parameter *Onboard User Program: Clock Task Time Used* (11.051) shows the percentage of the available time used by clock task. A read or write of a drive parameter by the user program takes a finite period of time. It is possible to select up to 10 parameters as fast access parameter which reduced the amount of time it takes for the user program to read from or write to a drive parameter. This is useful when using a clock task with a fast update rate as selecting a parameter for fast access reduces the amount of the clock task resource required to access parameters.
- **Freewheeling:** A non-real time background task. The freewheeling task is scheduled for a short period once every 256 ms. The time for which the task is scheduled will vary depending on the loading of the drive's processor. When scheduled, several scans of the user program may be performed. Some scans may execute in microseconds. However, when the main drive functions are scheduled there will be a pause in the execution of the program causing some scans to take many milliseconds. The parameter *Onboard User Program: Freewheeling Tasks Per Second* (11.050) shows the number of times the freewheeling task has started per second.

10.3.2 Variables

The Onboard PLC supports the use of variables with the data types of Boolean, integer (8 bit, 16 bit and 32 bit, signed and unsigned), floating point (64 bit only), strings and time.

10.3.3 Custom menu

Machine Control Studio can construct a custom drive menu to reside in menu 30 on the drive. The following properties of each parameter can be defined using Machine Control Studio:

- Parameter name
- Number of decimal places
- The units for the parameter to be display on the keypad.
- The minimum, maximum and default values
- Memory handling (i.e. power down save, user save or volatile)
- Data type. The drive provides a limited set of 1 bit, 8 bit, 16 bit and 32 bit integer parameters to create the customer menu.

Parameters in this customer menu can be accessed by the user program and will appear on the keypad.

10.3.4 Limitations

The Onboard PLC user program has the following limitations:

- The flash memory allocated to the Onboard PLC is 16 kB which includes the user program and its header which results in a maximum user program size of about 12 kB
- The Onboard PLC is provided with 2 kB of RAM.
- The drive is rated for 100 program downloads. This limitation is imposed by the flash memory used to store the program within the drive.
- There is only one real-time task with a minimum period of 16 ms.
- The freewheeling background task runs at a low priority. The drive is prioritized to perform the clock task and its major functions first, e.g. motor control, and will use any remaining processing time to execute the freewheeling task as a background activity. As the drive's processor becomes more heavily loaded, less time is spent executing the freewheeling task.
- Breakpoints, single stepping and online program changes are not possible.
- The Graphing tool is not supported.
- The variable data types REAL (32 bit floating point), LWORD (64 bit integer) and WSTRING (Unicode string), and retained variables are not supported.

10.4 Onboard PLC parameters

The following parameters are associated with the Onboard PLC user program.

11.047		Onboard User Program: Enable			
RW	Txt			US	
↕	Stop (0) or Run (1)		⇒	Run (1)	

This parameter stops and starts the user program.

0 - Stop the User Program

The onboard user program is stopped. If it is restarted by setting *Onboard User Program: Enable* (11.047) to a non-zero value the background task starts from the beginning.

1 - Run the User Program

The user program will execute.

11.048		Onboard User Program: Status			
RO	Txt	NC	PT		
↕	-2147483648 to 2147483647		⇒		

This parameter is read-only and indicates the status of the user program in the drive. The user program writes the value to this parameter.

0: Stopped

1: Running

2: Exception

3: No user program present

11.049		Onboard User Program: Programming Events			
RO	Uni	NC	PT	PS	
↕	0 to 65535		⇒		

This parameter holds the number of times an Onboard PLC user program download has taken place and is 0 on dispatch from the factory. The drive is rated for one hundred ladder program downloads. This parameter is not altered when defaults are loaded.

11.050		Onboard User Program: Freewheeling Tasks Per Second			
RO	Uni	NC	PT		
↕	0 to 65535		⇒		

This parameter shows the number of times the freewheeling task has started per second.

11.051		Onboard User Program: Clock Task Time Used			
RO		NC	PT		
↕	0.0 to 100.0 %		⇒		

This parameter shows the percentage of the available time used by the user program clock task.

11.055		Onboard User Program: Clock Task Scheduled Interval			
RO		NC	PT		
↕	0 to 262128 ms		⇒		

This parameter shows the interval at which the clock task is scheduled to run at in ms.


10.5 Onboard PLC trips

If the drive detects an error in the user program it will initiate a User Program trip. The sub-trip number for the User Program trip details the reason for the error. See section 13 *Diagnostics* on page 172 for more information on the User Program trip.

11 Advanced parameters

This is a quick reference to all parameters in the drive showing units, ranges limits etc, with block diagrams to illustrate their function. Full descriptions of the parameters can be found in the *Parameter Reference Guide*.

This guide can be viewed at: <http://www.controltechniques.com>.



These advanced parameters are listed for reference purposes only. The lists in this chapter do not include sufficient information for adjusting these parameters. Incorrect adjustment can affect the safety of the system, and damage the drive and or external equipment. Before attempting to adjust any of these parameters, refer to the *Parameter reference guide*.

Operation mode abbreviations:

Open-loop: Sensorless control for induction motors

RFC-A: Asynchronous Rotor Flux Control for induction motors

Default abbreviations:

Standard default value (50 Hz AC supply frequency)

USA default value (60 Hz AC supply frequency)

NOTE

Parameter numbers shown in brackets {...} are the equivalent Menu 0 parameters. Some Menu 0 parameters appear twice since their function depends on the operating mode.

In some cases, the function or range of a parameter is affected by the setting of another parameter. The information in the lists relates to the default condition of any parameters affected in this way.

Table 11-2 Key to parameter table coding

Table 11-1 Menu descriptions

Menu	Description
0	Commonly used basic set up parameters for quick / easy programming
1	Frequency reference
2	Ramps
3	Frequency control
4	Torque and current control
5	Motor control
6	Sequencer and clock
7	Analog I/O
8	Digital I/O
9	Programmable logic, motorized pot, binary sum, timers
10	Status and trips
11	Drive set-up and identification, serial communications
12	Threshold detectors and variable selectors
14	User PID controller
15	Option module slot 1 set-up menu
18	General option module application menu 1
20	General option module application menu 2
21	Second motor parameters
22	Menu 0 set-up
Slot 1	Slot 1 option menus**

** Only displayed when the option module is installed.

Coding	Attribute
RW	Read/Write: can be written by the user
RO	Read only: can only be read by the user
Bit	1 bit parameter. 'On' or 'Off' on the display
Num	Number: can be uni-polar or bi-polar
Txt	Text: the parameter uses text strings instead of numbers.
Bin	Binary parameter
FI	Filtered: some parameters which can have rapidly changing values are filtered when displayed on the drive keypad for easy viewing.
DE	Destination: This parameter selects the destination of an input or logic function.
RA	Rating dependent: this parameter is likely to have different values and ranges with drives of different voltage and current ratings. Parameters with this attribute will be transferred to the destination drive by non-volatile storage media when the rating of the destination drive is different from the source drive and the file is a parameter file. However, the values will be transferred if only the current rating is different and the file is a difference from default type file.
ND	No default: The parameter is not modified when defaults are loaded
NC	Not copied: not transferred to or from non-volatile media during copying.
PT	Protected: cannot be used as a destination.
US	User save: parameter saved in drive EEPROM when the user initiates a parameter save.
PS	Power-down save: parameter automatically saved in drive EEPROM when the under volts (UV) trip occurs.

Table 11-3 Feature look-up table

Feature	Related parameters (Pr)												
Acceleration rates	02.010	02.011 to 02.019		02.032	02.033	02.034	02.002						
Analog reference 1	01.036	07.010	07.001	07.007	07.008	07.009	07.028	07.051	07.030	07.061	07.062	07.063	07.064
Analog reference 2	01.037	07.014	01.041	07.002	07.011	07.012	07.013	07.032	07.031	07.065	07.066	07.067	07.068
Analog I/O	Menu 7												
Analog input 1	07.001	07.007	07.008	07.009	07.010	07.028	07.051	07.030	07.061	07.062	07.063	07.064	
Analog input 2	07.002	07.011	07.012	07.013	07.014	07.028	07.031	07.052	07.065	07.066	07.067	07.068	
Analog output 1	07.019	07.020			07.055	07.099							
Analog output 2	07.022	07.023	07.024	07.056	07.102								
Application menu	Menu 18			Menu 20									
At frequency indicator bit	03.006	03.007	03.009	10.006	10.005	10.007							
Auto reset	10.034	10.035	10.036	10.001									
Autotune	05.012		05.017		05.024	05.025	05.010	05.029	05.030	05.062	05.063	05.059	05.060
Binary sum	09.029	09.030	09.031	09.032	09.033	09.034							
Bipolar reference	01.010												
Brake control	12.040 to 12.048			12.050	12.051								
Braking	10.011	10.010	10.030	10.031	06.001	02.004	02.002	10.012	10.039	10.040			
Catch a spinning motor	06.009	05.040											
Coast to stop	06.001												
Comms	11.023 to 11.027												
Copying	11.042	11.036 to 11.040											
Cost - per kWh electricity	06.016	06.017	06.024	06.025	06.026		06.027						
Current controller	04.013	04.014											
Current feedback	04.001	04.002	04.017	04.004		04.020		04.024	04.026	10.008	10.009	10.017	
Current limits	04.005	04.006	04.007	04.018	04.015	04.019	04.016	05.007	05.010	10.008	10.009	10.017	
DC bus voltage	05.005	02.008											
DC injection braking	06.006	06.007	06.001										
Deceleration rates	02.020	02.021 to 02.029		02.004	02.035 to 02.037		02.002	02.008	06.001	10.030	10.031	10.039	02.009
Defaults	11.043	11.046											
Digital I/O	Menu 8												
Digital I/O read word	08.020												
Digital I/O T10	08.001	08.011	08.021	08.031	08.081	08.091	08.121						
Digital I/O T11	08.002	08.012	08.022		08.082	08.122							
Digital I/O T12	08.003	08.013	08.023		08.083	08.123							
Digital input T13	08.004	08.014	08.024	08.084	08.124								
Digital input T14	08.005	08.015	08.025		08.035	08.085	08.125						
Digital input T15	08.006	08.016	08.026	08.036	08.086	08.126							
Digital input T16	08.007	08.017	08.027	08.036	08.087	08.127							
Direction	10.013	06.030	06.031	01.003	10.014	02.001	03.002	08.003	08.004	10.040			
Drive active	10.002	10.040											
Drive derivative	11.028												
Drive OK	10.001	08.028	08.008	08.018	10.036	10.040							
Dynamic performance	05.026												
Dynamic V/F	05.013												
Enable	06.015	08.039		08.040	06.038								
External trip	10.032												
Fan speed	06.045												
Field weakening - induction motor	05.029	05.030	01.006	05.028	05.062	05.063							
Filter change	06.019	06.018	06.021	06.022	06.023								
Frequency reference selection	01.014	01.015											
Frequency slaving	03.001	03.013	03.014	03.015	03.016	03.017	03.018						
Hard speed reference	03.022	03.023											
Heavy duty rating	05.007	11.032											
High stability space vector modulation	05.019												
I/O sequencer	06.004	06.030	06.031	06.032	06.033	06.034	06.042	06.043	06.041				
Inertia compensation	02.038	05.012	04.022	03.018									
Jog reference	01.005	02.019	02.029										
Keypad reference	01.017	01.014	01.043	01.051	06.012	06.013							
Limit switches	06.035	06.036											
Line power supply loss	06.003	10.015	10.016	05.005									
Logic function 1	09.001	09.004	09.005	09.006	09.007	09.008	09.009	09.010					
Logic function 2	09.002	09.014	09.015	09.016	09.017	09.018	09.019	09.020					

Feature	Related parameters (Pr)												
Maximum frequency	01.006												
Menu 0 set-up						Menu 22							
Minimum frequency	01.007	10.004											
Motor map	05.006	05.007	05.008	05.009	05.010	05.011							
Motor map 2	Menu 21		11.45										
Motorized potentiometer	09.021	09.022	09.023	09.024	09.025	09.026	09.027	09.028	09.003				
Offset reference	01.004	01.038	01.009										
Onboard PLC	11.047 to 11.051			11.055									
Open loop vector mode	05.014	05.017											
Operating mode		11.031		05.014									
Output	05.001	05.002	05.003	05.004									
Over frequency threshold	03.008												
Over modulation enable	05.020												
PID controller	Menu 14												
Positive logic	08.010												
Power up parameter	11.022												
Preset speeds	01.015	01.021 to 01.028				01.014	01.042	01.045 to 01.047			01.050		
Programmable logic	Menu 9												
Ramp (accel / decel) mode	02.004	02.008	06.001	02.002	02.003	10.030	10.031	10.039					
Regenerating	10.010	10.011	10.030	10.031	06.001	02.004	02.002	10.012	10.039	10.040			
Relay output	08.008	08.018	08.028										
Reset	10.033			10.034	10.035	10.036	10.001						
RFC mode (encoder less CLV mode)				05.040									
Scope	09.055 to 09.073												
S ramp	02.006	02.007											
Sample rates	05.018												
SAFE TORQUE OFF input			08.039	08.040									
Security code	11.030	11.044											
Serial comms	11.023 to 11.027												
Skip speeds	01.029	01.030	01.031	01.032	01.033	01.034	01.035						
Slip compensation	05.027	05.008											
NV media card	11.036 to 11.040			11.042									
Firmware version	11.029	11.035											
Frequency controller	03.010 to 03.017												
Estimated frequency	03.002	03.003	03.004										
Reference selection	01.014	01.015	01.049	01.050	01.001								
Status word	10.040												
Supply		05.005	06.046										
Switching frequency	05.018	05.035	07.034	07.035									
Thermal protection - drive	05.018	05.035	07.004	07.005			07.035	10.018					
Thermal protection - motor	04.015	05.007	04.019	04.016	04.025		08.035						
Thermistor input			08.035	07.047	07.050								
Threshold detector 1	12.001	12.003 to 12.007											
Threshold detector 2	12.002	12.023 to 12.027											
Time - filter change	06.019	06.018	06.021	06.022	06.023								
Time - powered up log	06.020			06.019	06.017	06.018							
Time - run log				06.019	06.017	06.018							
Torque	04.003	04.026	05.032										
Torque mode	04.008	04.011											
Trip detection	10.037	10.038	10.020 to 10.029										
Trip log	10.020 to 10.029			10.041 to 10.060			10.070 to 10.079						
Under voltage	05.005	10.016	10.015										
V/F mode	05.015	05.014											
Variable selector 1	12.008 to 12.016												
Variable selector 2	12.028 to 12.036												
Voltage controller	05.031												
Voltage mode	05.014	05.017		05.015									
Voltage rating	11.033	05.009	05.005										
Voltage supply		06.046	05.005										
Warning	10.019	10.012	10.017	10.018	10.040								
Zero frequency indicator bit	03.005	10.003											

11.0.1 Parameter ranges and Variable minimum/maximums:

Some parameters in the drive have a variable range with a variable minimum and a variable maximum values which is dependent on one of the following:

- The settings of other parameters
- The drive rating
- The drive mode
- Combination of any of the above

The tables below give the definition of variable minimum/maximum and the maximum range of these.

VM_AC_VOLTAGE		Range applied to parameters showing AC voltage
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	VM_AC_VOLTAGE[MAX] is drive voltage rating dependent. See Table 11-4 VM_AC_VOLTAGE[MIN] = 0	

VM_AC_VOLTAGE_SET		Range applied to the AC voltage set-up parameters
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	VM_AC_VOLTAGE_SET[MAX] is drive voltage rating dependent. See Table 11-4 VM_AC_VOLTAGE_SET[MIN] = 0	

VM_ACCEL_RATE		Maximum applied to the ramp rate parameters
Units	s / 100 Hz	
Range of [MIN]	Open-loop: 0.0 RFC-A: 0.0	
Range of [MAX]	Open-loop: 0.0 to 3200.0 RFC-A: 0.0 to 3200.0	
Definition	If Ramp Rate Units (02.039) = 0: VM_ACCEL_RATE[MAX] = 3200.0 If Ramp Rate Units (02.039) = 1: VM_ACCEL_RATE[MAX] = 3200.0 x Pr 01.006 / 100.00 VM_ACCEL_RATE[MIN] = 0.0 If the second motor map is selected (Pr 11.045 = 1) Pr 21.001 is used instead of Pr 01.006	

VM_DC_VOLTAGE		Range applied to parameters showing DC voltage
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	VM_DC_VOLTAGE[MAX] is the full scale d.c. link voltage feedback (over voltage trip level) for the drive. This level is drive voltage rating dependent. See Table 11-4 VM_DC_VOLTAGE[MIN] = 0	

VM_DC_VOLTAGE_SET		Range applied to DC voltage reference parameters
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	VM_DC_VOLTAGE_SET[MAX] is drive voltage rating dependent. See Table 11-4 VM_DC_VOLTAGE_SET[MIN] = 0	

VM_DRIVE_CURRENT		Range applied to parameters showing current in A
Units	A	
Range of [MIN]	-9999.99 to 0.00	
Range of [MAX]	0.00 to 9999.99	
Definition	VM_DRIVE_CURRENT[MAX] is equivalent to the full scale (over current trip level) for the drive and is given by <i>Full Scale Current Kc</i> (11.061). VM_DRIVE_CURRENT[MIN] = - VM_DRIVE_CURRENT[MAX]	

VM_DRIVE_CURRENT_UNIPOLAR		Unipolar version of VM_DRIVE_CURRENT
Units	A	
Range of [MIN]	0.00	
Range of [MAX]	0.00 to 9999.99	
Definition	VM_DRIVE_CURRENT_UNIPOLAR[MAX] = VM_DRIVE_CURRENT[MAX] VM_DRIVE_CURRENT_UNIPOLAR[MIN] = 0.00	

VM_HIGH_DC_VOLTAGE		Range applied to parameters showing high DC voltage
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to 1500	
Definition	VM_HIGH_DC_VOLTAGE[MAX] is the full scale d.c. link voltage feedback for the high d.c. link voltage measurement which can measure the voltage if it goes above the normal full scale value. This level is drive voltage rating dependent. See Table 11-4 VM_HIGH_DC_VOLTAGE[MIN] = 0	

VM_LOW_UNDER_VOLTS		Range applied the low under-voltage threshold
Units	V	
Range of [MIN]	205	
Range of [MAX]	205 to 1150	
Definition		

VM_MOTOR1_CURRENT_LIMIT VM_MOTOR2_CURRENT_LIMIT		Range applied to current limit parameters
Units	%	
Range of [MIN]	0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	<p>VM_MOTOR1_CURRENT_LIMIT[MIN] = 0.0</p> <p>Open-loop VM_MOTOR1_CURRENT_LIMIT[MAX] = $(I_{Tlimit} / I_{Trated}) \times 100 \%$ Where: $I_{Tlimit} = I_{MaxRef} \times \cos(\sin^{-1}(I_{Mrated} / I_{MaxRef}))$ $I_{Mrated} = Pr \ 05.007 \sin \phi$ $I_{Trated} = Pr \ 05.007 \times \cos \phi$ $\cos \phi = Pr \ 05.010$ I_{MaxRef} is 0.7 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty).</p> <p>RFC-A VM_MOTOR1_CURRENT_LIMIT[MAX] = $(I_{Tlimit} / I_{Trated}) \times 100 \%$ Where: $I_{Tlimit} = I_{MaxRef} \times \cos(\sin^{-1}(I_{Mrated} / I_{MaxRef}))$ $I_{Mrated} = Pr \ 05.007 \times \cos \phi_1$ $I_{Trated} = Pr \ 05.007 \times \sin \phi_1$ $\phi_1 = \cos^{-1}(Pr \ 05.010) + \phi_2$. ϕ_1 is calculated during an autotune. See the variable minimum / maximum calculations in the <i>Parameter Reference Guide</i> for more information regarding ϕ_2. I_{MaxRef} is 0.9 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty).</p> <p>For VM_MOTOR2_CURRENT_LIMIT[MAX] use Pr 21.007 instead of Pr 05.007 and Pr 21.010 instead of Pr 05.010.</p>	

VM_NEGATIVE_REF_CLAMP1 VM_NEGATIVE_REF_CLAMP2		Limits applied to the negative frequency or speed clamp																	
Units	Hz																		
Range of [MIN]	Open-loop: -550.00 to 0.00 RFC-A: -550.00 to 0.00																		
Range of [MAX]	Open-loop: 0.00 to 550.00 RFC-A: 0.00 to 50000.00																		
Definition	<table border="1"> <thead> <tr> <th>Negative Reference Clamp Enable (01.008)</th> <th>Bipolar Reference Enable (01.010)</th> <th>VM_NEGATIVE_REF_CLAMP1[MIN]</th> <th>VM_NEGATIVE_REF_CLAMP1[MAX]</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0.00</td> <td>Pr 01.006</td> </tr> <tr> <td>0</td> <td>1</td> <td>0.00</td> <td>0.00</td> </tr> <tr> <td>1</td> <td>X</td> <td>-VM_POSITIVE_REF_CLAMP[MAX]</td> <td>0.00</td> </tr> </tbody> </table> <p>VM_NEGATIVE_REF_CLAMP2 is defined in the same way except that Pr 21.001 is used instead of Pr 01.006</p>			Negative Reference Clamp Enable (01.008)	Bipolar Reference Enable (01.010)	VM_NEGATIVE_REF_CLAMP1[MIN]	VM_NEGATIVE_REF_CLAMP1[MAX]	0	0	0.00	Pr 01.006	0	1	0.00	0.00	1	X	-VM_POSITIVE_REF_CLAMP[MAX]	0.00
Negative Reference Clamp Enable (01.008)	Bipolar Reference Enable (01.010)	VM_NEGATIVE_REF_CLAMP1[MIN]	VM_NEGATIVE_REF_CLAMP1[MAX]																
0	0	0.00	Pr 01.006																
0	1	0.00	0.00																
1	X	-VM_POSITIVE_REF_CLAMP[MAX]	0.00																

VM_POSITIVE_REF_CLAMP		Limits applied to the positive frequency or speed reference clamp
Units	Hz	
Range of [MIN]	Open-loop: 0.00 RFC-A: 0.00	
Range of [MAX]	Open-loop: 550.00 RFC-A: 550.00	
Definition	<p>In all modes VM_POSITIVE_REF_CLAMP[MAX] is fixed at 550.00</p> <p>In all modes VM_POSITIVE_REF_CLAMP[MIN] is fixed at 0.0</p>	

VM_POWER		Range applied to parameters that either set or display power
Units	kW	
Range of [MIN]	-999.99 to 0.00	
Range of [MAX]	0.00 to 999.99	
Definition	<p>VM_POWER[MAX] is rating dependent and is chosen to allow for the maximum power that can be output by the drive with maximum a.c. output voltage, at maximum controlled current and unity power factor.</p> <p>$VM_POWER[MAX] = \sqrt{3} \times VM_AC_VOLTAGE[MAX] \times VM_DRIVE_CURRENT[MAX] / 1000$</p> <p>$VM_POWER[MIN] = -VM_POWER[MAX]$</p>	

VM_RATED_CURRENT		Range applied to rated current parameters
Units	A	
Range of [MIN]	0.00	
Range of [MAX]	0.00 to 9999.99	
Definition	<p>VM_RATED_CURRENT [MAX] = <i>Maximum Rated Current</i> (11.060) and is dependent on the drive rating.</p> <p>VM_RATED_CURRENT [MIN] = 0.00</p>	

VM_FREQ		Range applied to parameters showing frequency
Units	Hz	
Range of [MIN]	Open-loop, RFC-A: -550.00 to 0.00	
Range of [MAX]	Open-loop, RFC-A: 0.00 to 550.00	
Definition	<p>This variable minimum/maximum defines the range of frequency monitoring parameters. To allow headroom for overshoot the range is set to twice the range of the frequency references.</p> <p>$VM_FREQ[MAX] = 2 \times VM_SPEED_FREQ_REF[MAX]$</p> <p>$VM_FREQ[MIN] = 2 \times VM_SPEED_FREQ_REF[MIN]$</p>	

VM_SPEED_FREQ_REF		Range applied to the frequency or speed reference parameters
Units	Hz	
Range of [MIN]	Open-loop: -550.00 to 0.00 RFC-A: -550.00.0 to 0.00	
Range of [MAX]	Open-loop: 0.00 to 550.00 RFC-A: 0.00 to 550.00	
Definition	<p>If Pr 01.008 = 0: VM_SPEED_FREQ_REF[MAX] = Pr 01.006</p> <p>If Pr 01.008 = 1: VM_SPEED_FREQ_REF[MAX] = Pr 01.006 or Pr 01.007 , whichever is larger.</p> <p>If the second motor map is selected (Pr 11.045 = 1) Pr 21.001 is used instead of Pr 01.006 and Pr 21.002 instead of Pr 01.007.</p> <p>$VM_SPEED_FREQ_REF[MIN] = -VM_SPEED_FREQ_REF[MAX]$.</p>	

VM_SPEED_FREQ_REF_UNIPOLAR		Unipolar version of VM_SPEED_FREQ_REF
Units	Hz	
Range of [MIN]	Open-loop: 0.00 RFC-A: 0.00	
Range of [MAX]	Open-loop: 0.00 to 550.00 RFC-A: 0.00 to 550.00	
Definition	<p>$VM_SPEED_FREQ_REF_UNIPOLAR[MAX] = VM_SPEED_FREQ_REF[MAX]$</p> <p>$VM_SPEED_FREQ_REF_UNIPOLAR[MIN] = 0.00$</p>	

VM_SPEED_FREQ_USER_REFS		Range applied to some Menu 1 reference parameters	
Units	Hz		
Range of [MIN]	Open-loop: -550.00 to 0.00 RFC-A: -550.00 to 0.00		
Range of [MAX]	Open-loop: 0.00 to 550.00 RFC-A: 0.00 to 550.00		
Definition	VM_SPEED_FREQ_USER_REFS[MAX] = VM_SPEED_FREQ_REF[MAX]		
	<i>Negative Reference Clamp Enable (01.008)</i>	<i>Bipolar Reference Enable (01.010)</i>	VM_SPEED_FREQ_USER_REFS [MIN]
	0	0	Pr 01.007
	0	1	-VM_SPEED_FREQ_REF[MAX]
	1	0	0.00
	1	1	-VM_SPEED_FREQ_REF[MAX]
If the second motor map is selected (Pr 11.045 = 1) Pr 21.002 is used instead of Pr 01.007.			

VM_STD_UNDER_VOLTS		Range applied the standard under-voltage threshold	
Units	V		
Range of [MIN]	0 to 1150		
Range of [MAX]	0 to 1150		
Definition	VM_STD_UNDER_VOLTS[MAX] = VM_DC_VOLTAGE_SET VM_STD_UNDER_VOLTS[MIN] is voltage rating dependent. See Table 11-4		

VM_SUPPLY_LOSS_LEVEL		Range applied to the supply loss threshold	
Units	V		
Range of [MIN]	Open-loop: 0 to 1150 RFC-A: 0 to 1150		
Range of [MAX]	Open-loop: 0 to 1150 RFC-A: 0 to 1150		
Definition	VM_SUPPLY_LOSS_LEVEL[MAX] = VM_DC_VOLTAGE_SET[MAX] VM_SUPPLY_LOSS_LEVEL[MIN] is drive voltage rating dependent. See Table 11-4		

VM_TORQUE_CURRENT		Range applied to torque and torque producing current parameters	
Units	%		
Range of [MIN]	-1000.0 to 0.0		
Range of [MAX]	0.0 to 1000.0		
Definition	<i>Select Motor 2 Parameters (11.045)</i>		VM_TORQUE_CURRENT [MAX]
	0		VM_MOTOR1_CURRENT_LIMIT[MAX]
	1		VM_MOTOR2_CURRENT_LIMIT[MAX]
	VM_TORQUE_CURRENT[MIN] = -VM_TORQUE_CURRENT[MAX]		

VM_TORQUE_CURRENT_UNIPOLAR		Unipolar version of VM_TORQUE_CURRENT	
Units	%		
Range of [MIN]	0.0		
Range of [MAX]	0.0 to 1000.0		
Definition	VM_TORQUE_CURRENT_UNIPOLAR[MAX] = VM_TORQUE_CURRENT[MAX] VM_TORQUE_CURRENT_UNIPOLAR[MIN] = 0.0		


VM_USER_CURRENT		Range applied to torque reference and percentage load parameters with one decimal place
Units	%	
Range of [MIN]	-1000.0 to 0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	VM_USER_CURRENT[MAX] = <i>User Current Maximum Scaling</i> (04.024) VM_USER_CURRENT[MIN] = -VM_USER_CURRENT[MAX]	


Table 11-4 Voltage ratings dependant values

Variable min/max	Voltage level (V)				
	100V	200 V	400 V	575 V	690 V
VM_DC_VOLTAGE_SET(MAX)	410		800	955	1150
VM_DC_VOLTAGE(MAX)	415		830	990	1190
VM_AC_VOLTAGE_SET(MAX)	240		480	575	690
VM_AC_VOLTAGE(MAX)	325		650	780	930
VM_STD_UNDER_VOLTS[MIN]	175		330	435	435
VM_SUPPLY_LOSS_LEVEL{MIN]	205		410	540	540
VM_HIGH_DC_VOLTAGE	1500			1500	

11.1 Menu 1: Frequency reference

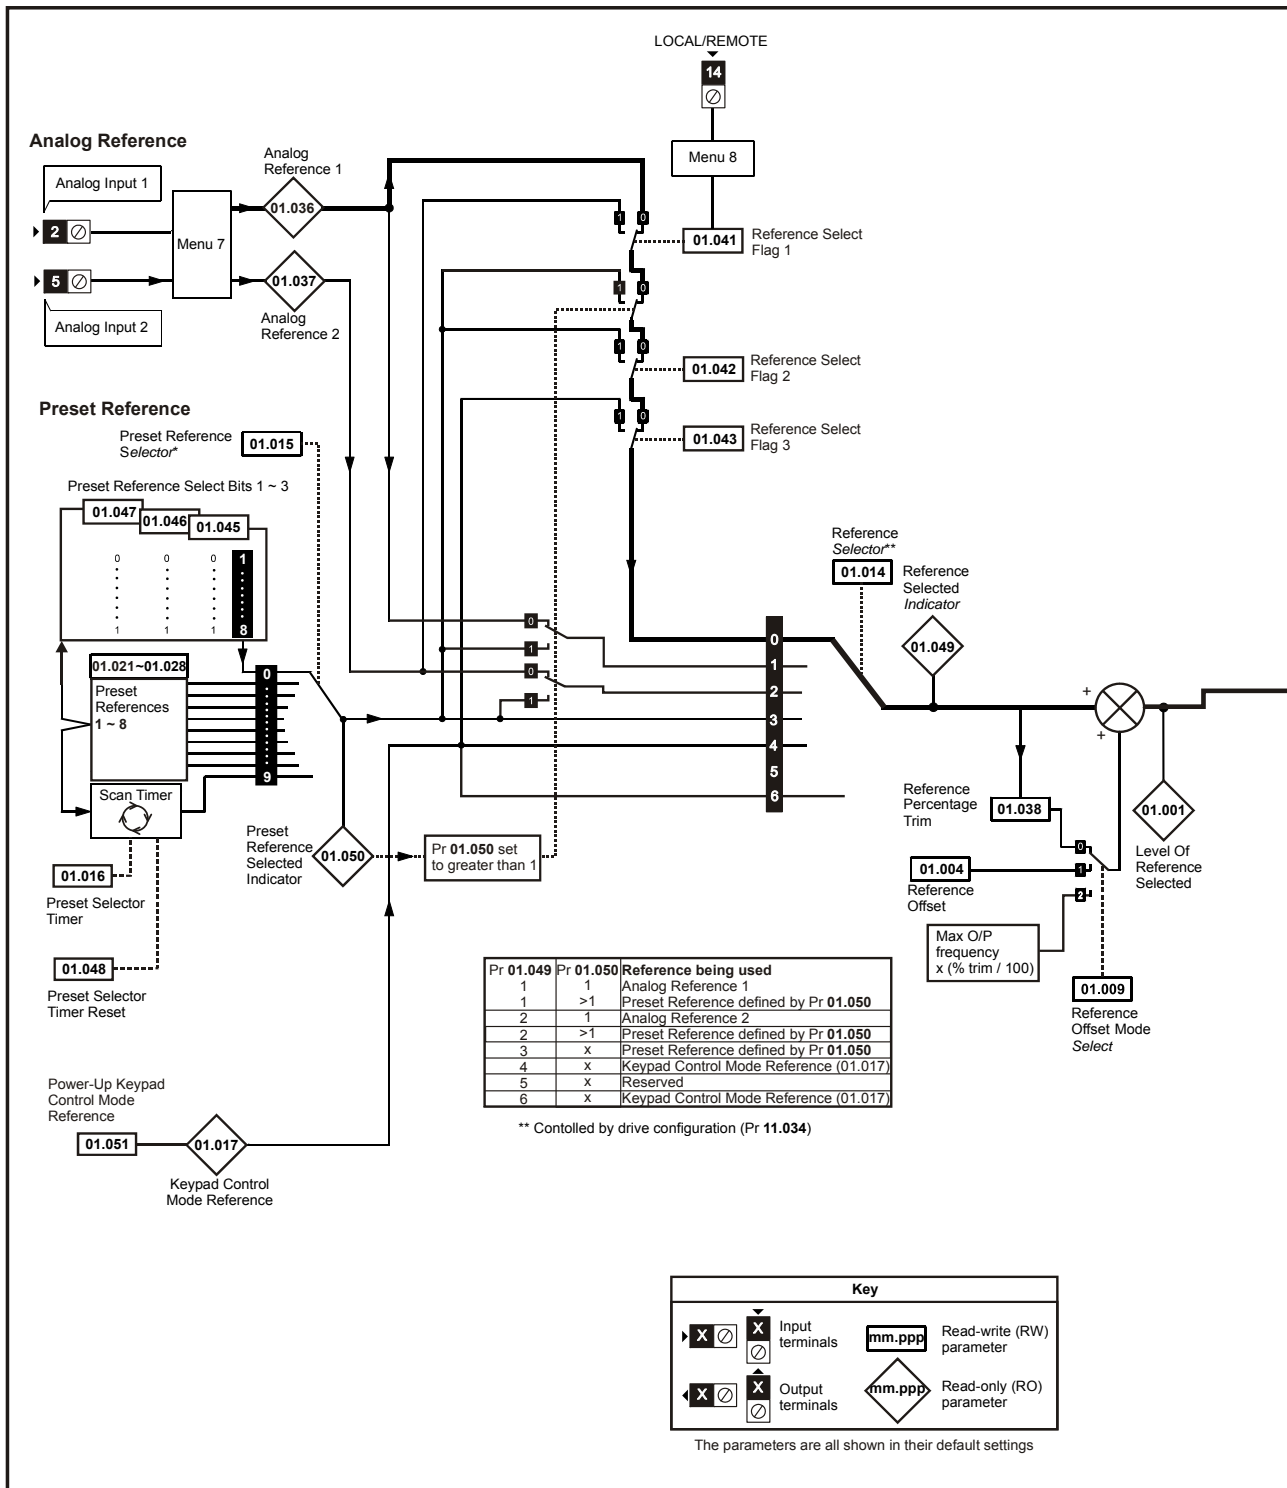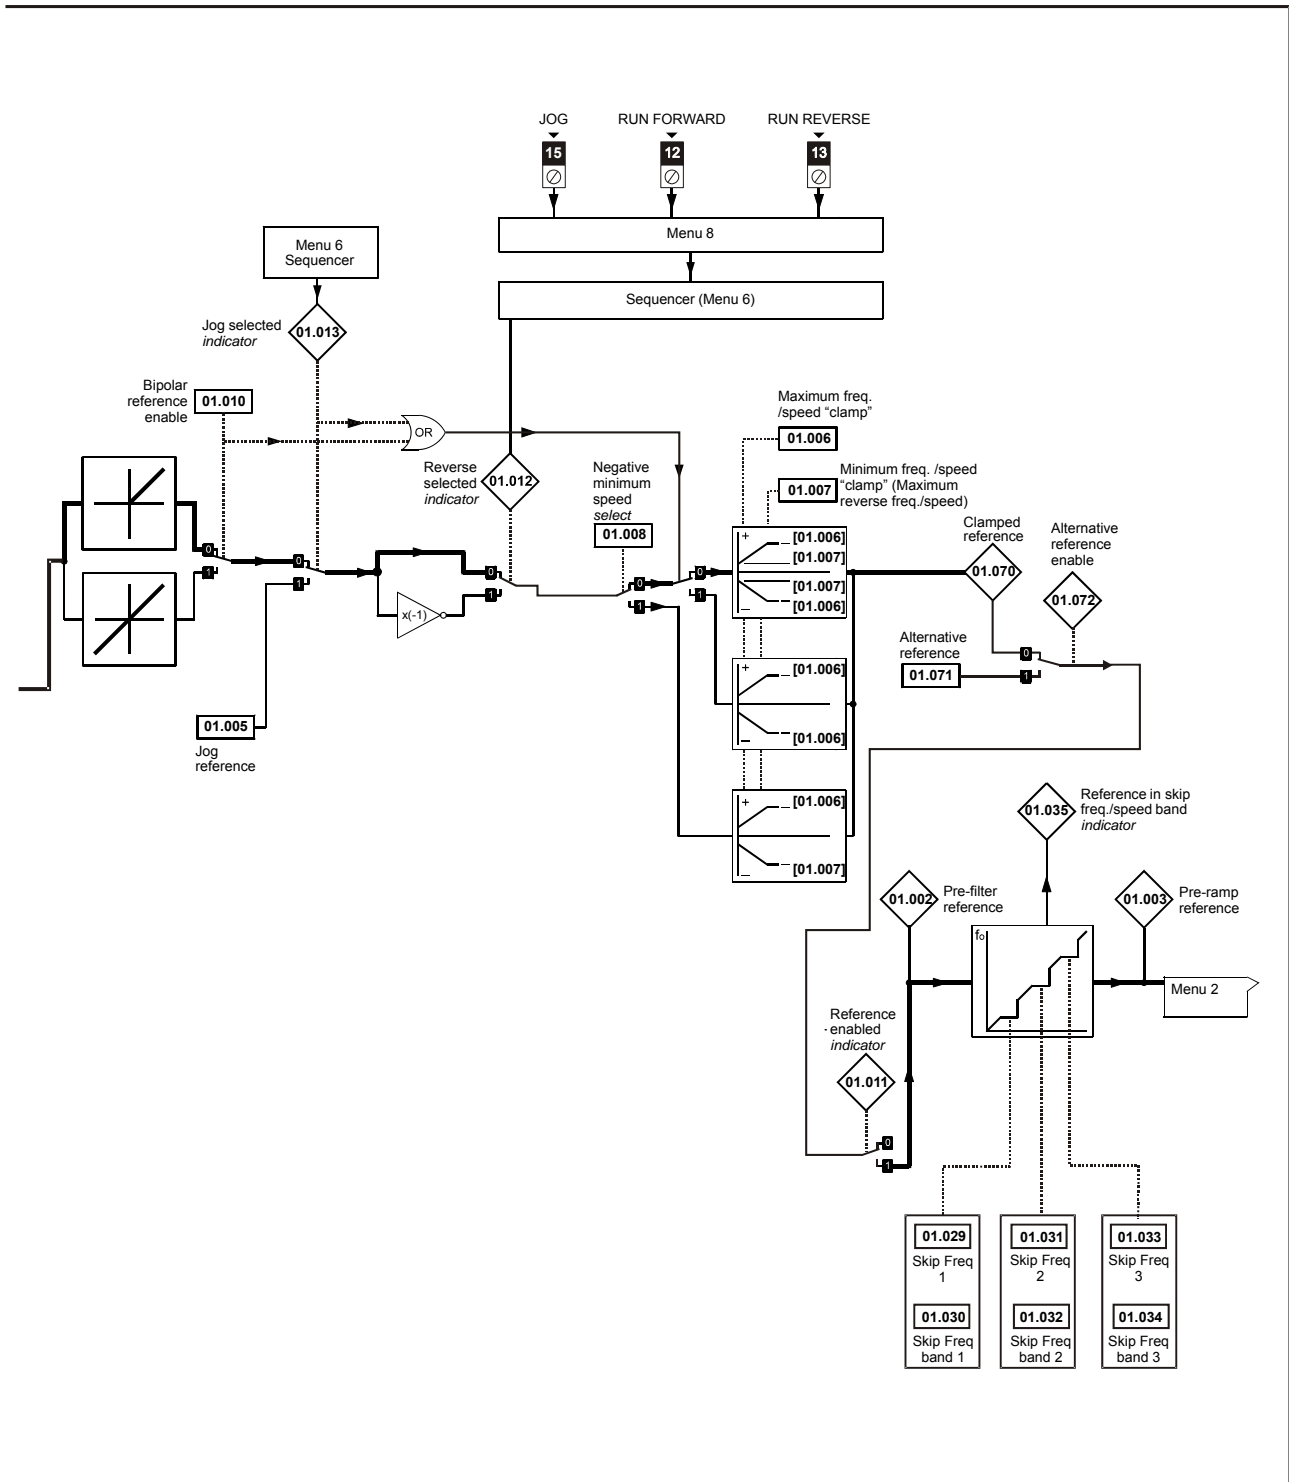Figure 11-1 Menu 1 logic diagram






Parameter		Range (±)		Default (⇒)		Type						
		OL	RFC-A	OL	RFC-A							
01.001	Reference Selected	±VM_SPEED_FREQ_REF Hz				RO	Num	ND	NC	PT		
01.002	Pre-skip Filter Reference	±VM_SPEED_FREQ_REF Hz				RO	Num	ND	NC	PT		
01.003	Pre-ramp Reference	±VM_SPEED_FREQ_REF Hz				RO	Num	ND	NC	PT		
01.004	Reference Offset	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.005	Jog Reference	0.00 to 300.00 Hz		1.50 Hz		RW	Num					US
01.006	Maximum Reference Clamp	±VM_POSITIVE_REF_CLAMP Hz		50Hz: 50.00 Hz 60Hz: 60.00 Hz		RW	Num					US
01.007	Minimum Reference Clamp	±VM_NEGATIVE_REF_CLAMP1 Hz		0.00 Hz		RW	Num					US
01.008	Negative Reference Clamp Enable	Off (0) or On (1)		Off (0)		RW	Bit					US
01.009	Reference Offset Select	0 to 2		0		RW	Num					US
01.010	Bipolar Reference Enable	Off (0) or On (1)		Off (0)		RW	Bit					US
01.011	Reference On	Off (0) or On (1)				RO	Bit	ND	NC	PT		
01.012	Reverse Select	Off (0) or On (1)				RO	Bit	ND	NC	PT		
01.013	Jog Select	Off (0) or On (1)				RO	Bit	ND	NC	PT		
01.014	Reference Selector	A1 A2 (0), A1 Preset (1), A2 Preset (2), Preset (3), Keypad (4), Reserved (5), Keypad Ref (6)		A1 A2 (0)		RW	Txt					US
01.015	Preset Selector	0 to 9		0		RW	Num					US
01.016	Preset Selector Timer	0.0 to 400.0 s		10.0 s		RW	Num					US
01.017	Keypad Control Mode Reference	±VM_SPEED_FREQ_USER_REFS Hz		0.00 Hz		RO	Num		NC	PT		PS
01.021	Preset Reference 1	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.022	Preset Reference 2	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.023	Preset Reference 3	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.024	Preset Reference 4	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.025	Preset Reference 5	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.026	Preset Reference 6	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.027	Preset Reference 7	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.028	Preset Reference 8	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num					US
01.029	Skip Reference 1	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		0.00 Hz		RW	Num					US
01.030	Skip Reference Band 1	0.00 to 25.00 Hz		0.50 Hz		RW	Num					US
01.031	Skip Reference 2	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		0.00 Hz		RW	Num					US
01.032	Skip Reference Band 2	0.00 to 25.00 Hz		0.50 Hz		RW	Num					US
01.033	Skip Reference 3	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		0.00 Hz		RW	Num					US
01.034	Skip Reference Band 3	0.00 to 25.00 Hz		0.50 Hz		RW	Num					US
01.035	Reference In Rejection Zone	Off (0) or On (1)				RO	Bit	ND	NC	PT		
01.036	Analog Reference 1	±VM_SPEED_FREQ_USER_REFS Hz		0.00 Hz		RO	Num		NC			
01.037	Analog Reference 2	±VM_SPEED_FREQ_USER_REFS Hz		0.00 Hz		RO	Num		NC			
01.038	Percentage Trim	±100.00 %		0.00 %		RW	Num		NC			
01.041	Reference Select Flag 1	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.042	Reference Select Flag 2	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.043	Reference Select Flag 3	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.045	Preset Select Flag 1	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.046	Preset Select Flag 2	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.047	Preset Select Flag 3	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.048	Preset Selector Timer Reset	Off (0) or On (1)		Off (0)		RW	Bit		NC			
01.049	Reference Selected Indicator	1 to 6				RO	Num	ND	NC	PT		


Parameter		Range (↕)		Default (⇒)		Type						
		OL	RFC-A	OL	RFC-A							
01.050	Preset Selected Indicator	1 to 8				RO	Num	ND	NC	PT		
01.051	Power-up Keypad Control Mode Reference	Reset (0), Last (1), Preset (2)		Reset (0)		RW	Txt					US
01.057	Force Reference Direction	None (0), Forward (1), Reverse (2)		None (0)		RW	Txt					
01.069	Reference in rpm	±VM_SPEED_FREQ_REF rpm				RO	Num	ND	NC	PT		
01.070	Clamped Reference	±VM_SPEED_FREQ_REF Hz				RO	Num	ND	NC	PT		
01.071	Alternative Reference	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RO	Num		NC			
01.072	Alternative Reference Enable	Off (0) or On (1)				RO	Bit	ND	NC	PT		

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter						

11.2 Menu 2: Ramps

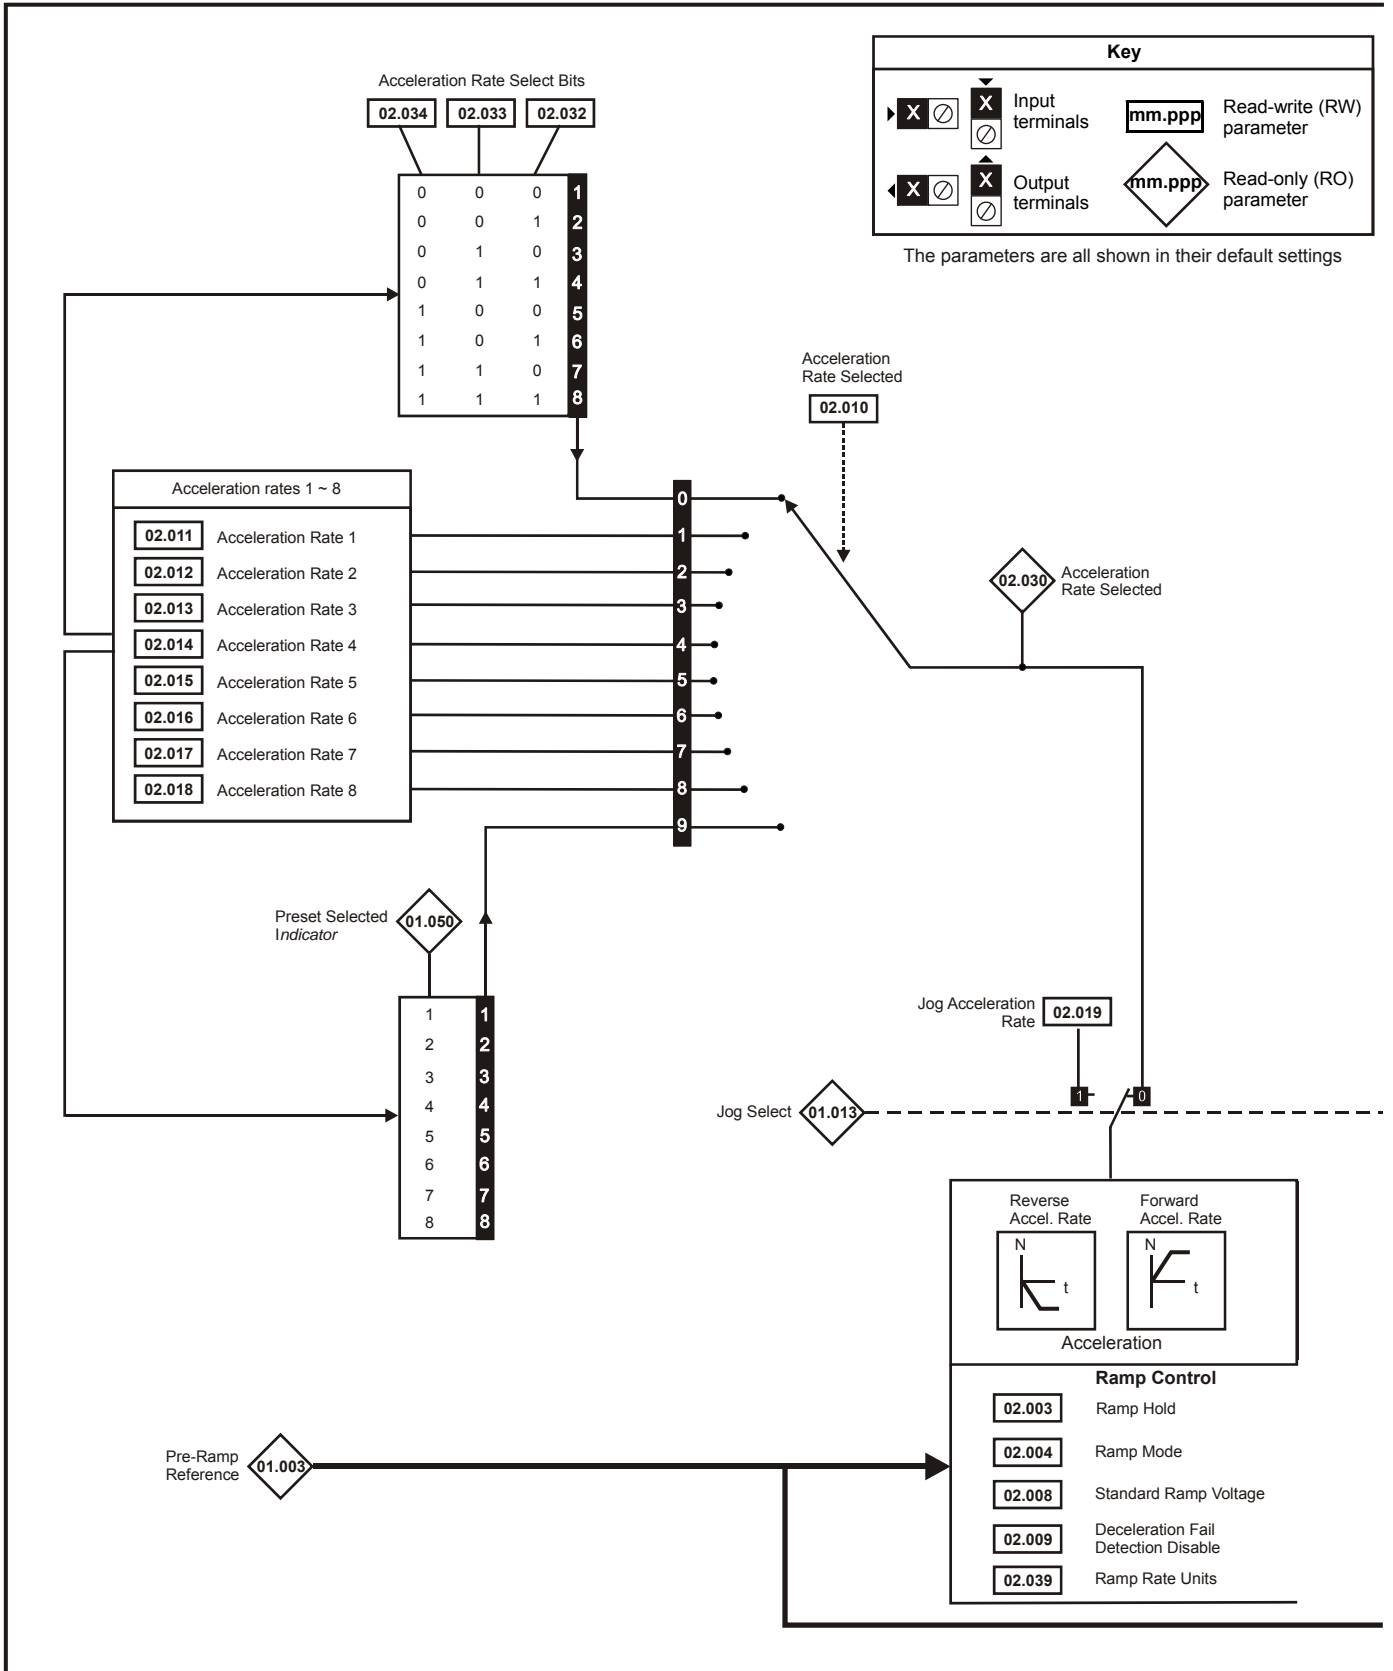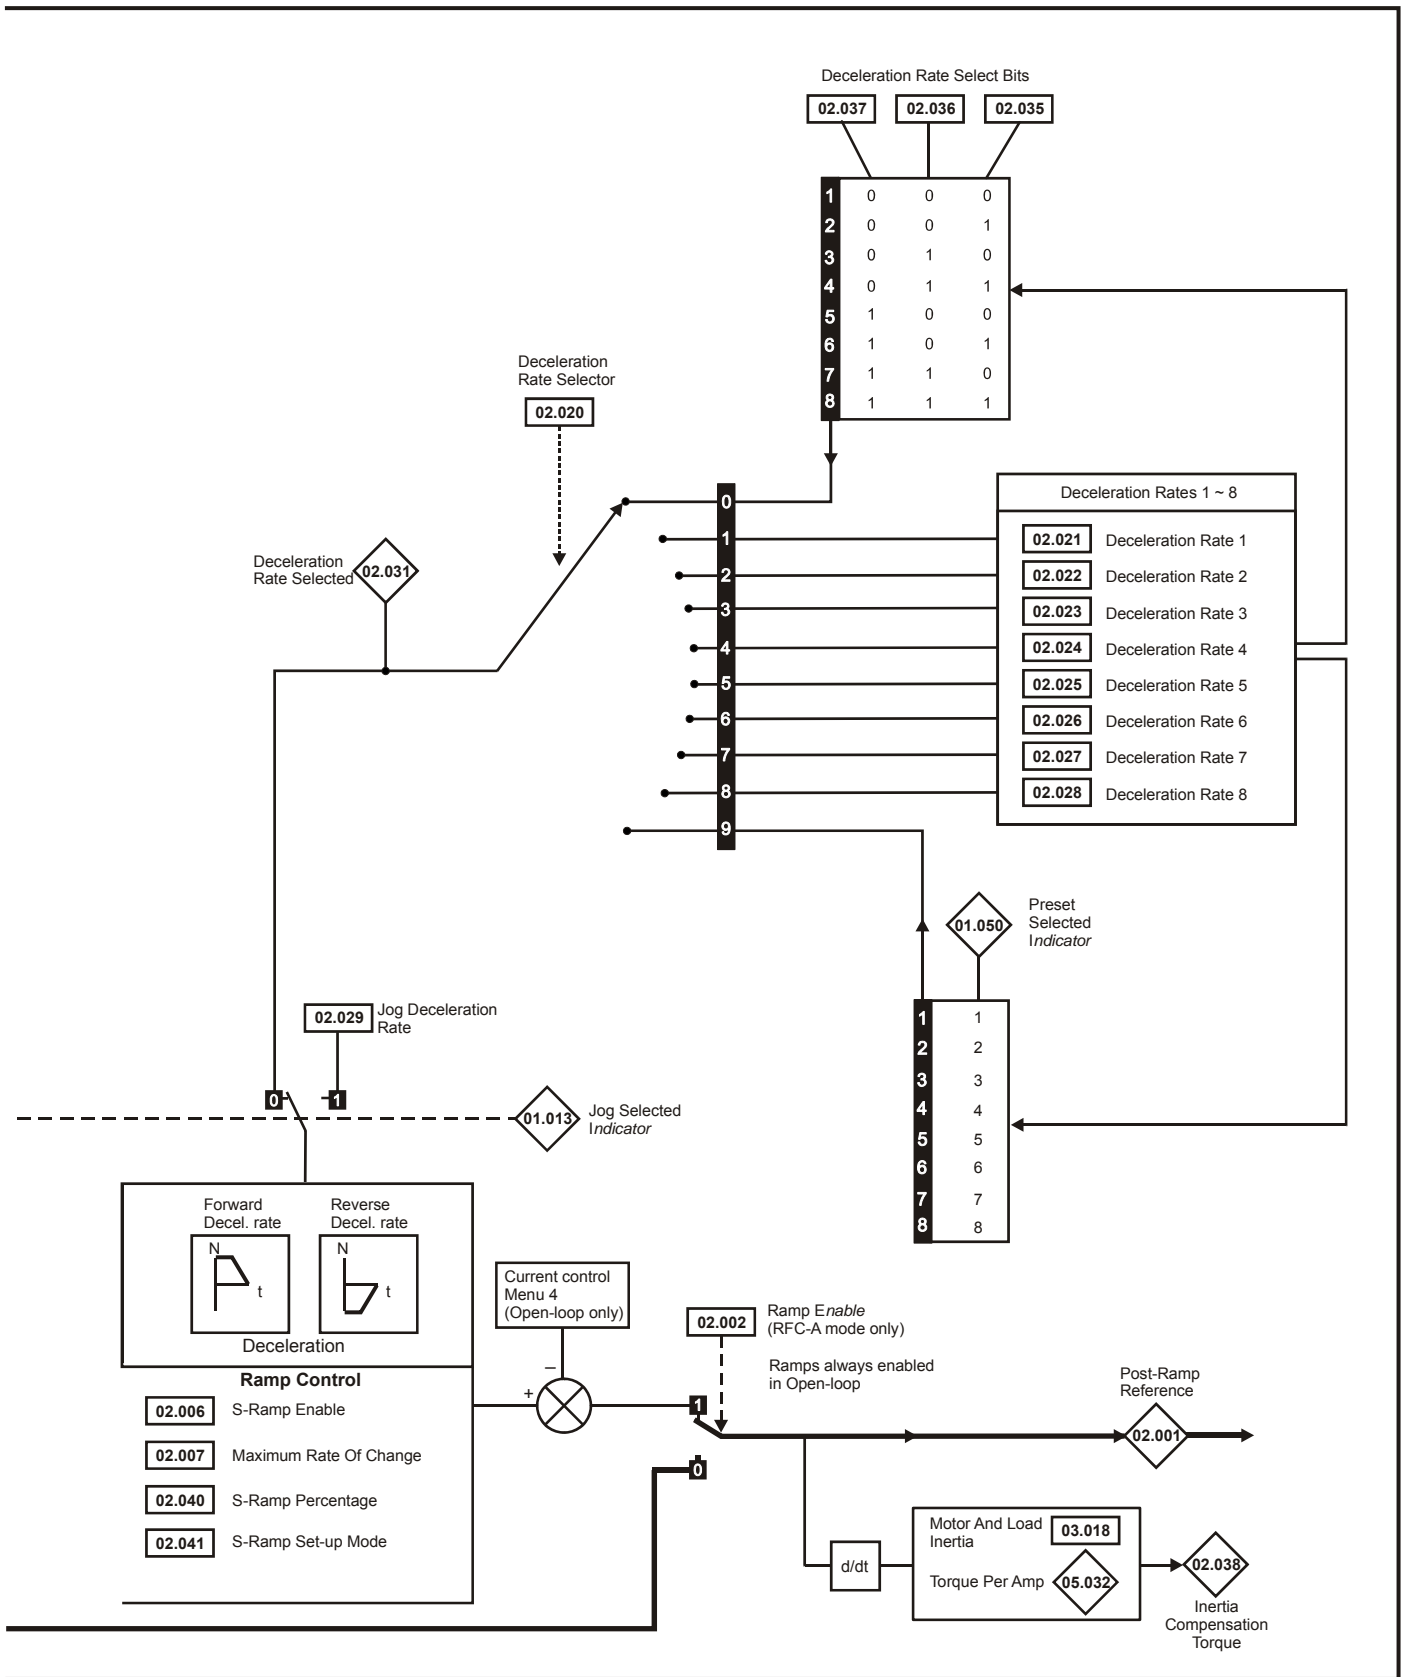Figure 11-2 Menu 2 logic diagram





Parameter		Range (⇧)		Default (⇨)		Type						
		OL	RFC-A	OL	RFC-A							
02.001	Post Ramp Reference	±VM_SPEED_FREQ_REF Hz				RO	Num	ND	NC	PT		
02.002	Ramp Enable		Off (0) or On (1)		On (1)	RW	Bit					US
02.003	Ramp Hold	Off (0) or On (1)		Off (0)		RW	Bit					US
02.004	Ramp Mode Select	Fast (0), Standard (1), Std boost (2), Fast boost (3)		Standard (1)		RW	Txt					US
02.005	Disable Ramp Output		Off (0) or On (1)		Off (0)	RW	Bit					US
02.006	S Ramp Enable	Off (0) or On (1)		Off (0)		RW	Bit					US
02.007	Max Rate Of Change Of Acceleration	0.0 to 300.0 s ² /100Hz		3.1 s ² /100Hz		RW	Num					US
02.008	Standard Ramp Voltage	±VM_DC_VOLTAGE_SET V		110V drive: 375 V 200V drive: 375 V 400V drive 50Hz: 750 V 400V drive 60Hz: 775 V 575V drive: 895 V 690V drive: 1075 V		RW	Num		RA			US
02.009	Deceleration Fail Detection Disable	Off (0) or On (1)		Off (0)		RW	Bit					US
02.010	Acceleration Rate Selector	0 to 9		0		RW	Num					US
02.011	Acceleration Rate 1	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.012	Acceleration Rate 2	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.013	Acceleration Rate 3	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.014	Acceleration Rate 4	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.015	Acceleration Rate 5	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.016	Acceleration Rate 6	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.017	Acceleration Rate 7	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.018	Acceleration Rate 8	±VM_ACCEL_RATE s		5.0 s		RW	Num					US
02.019	Jog Acceleration Rate	±VM_ACCEL_RATE s		0.2 s		RW	Num					US
02.020	Deceleration Rate Selector	0 to 9		0		RW	Num					US
02.021	Deceleration Rate 1	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.022	Deceleration Rate 2	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.023	Deceleration Rate 3	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.024	Deceleration Rate 4	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.025	Deceleration Rate 5	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.026	Deceleration Rate 6	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.027	Deceleration Rate 7	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.028	Deceleration Rate 8	±VM_ACCEL_RATE s		10.0 s		RW	Num					US
02.029	Jog Deceleration Rate	±VM_ACCEL_RATE s		0.2 s		RW	Num					US
02.030	Acceleration Rate Selected	0 to 8				RO	Num	ND	NC	PT		
02.031	Deceleration Rate Selected	0 to 8				RO	Num	ND	NC	PT		
02.032	Acceleration Rate Select Bit 0	Off (0) or On (1)		Off (0)		RW	Bit		NC			
02.033	Acceleration Rate Select Bit 1	Off (0) or On (1)		Off (0)		RW	Bit		NC			
02.034	Acceleration Rate Select Bit 2	Off (0) or On (1)		Off (0)		RW	Bit		NC			
02.035	Deceleration Rate Select Bit 0	Off (0) or On (1)		Off (0)		RW	Bit		NC			
02.036	Deceleration Rate Select Bit 1	Off (0) or On (1)		Off (0)		RW	Bit		NC			
02.037	Deceleration Rate Select Bit 2	Off (0) or On (1)		Off (0)		RW	Bit		NC			
02.038	Inertia Compensation Torque		±1000.0 %			RO	Num	ND	NC	PT		
02.039	Ramp Rate Units	0 to 1		0		RW	Num					US
02.040	S Ramp Percentage	0.0 to 50.0 %		0.0 %		RW	Num					US
02.041	S Ramp Set-up Mode	0 to 2		0		RW	Num					US
02.042	Maximum Rate Of Change Of Acceleration 1	0.0 to 300.0 s ² /100Hz		0.0 s ² /100Hz		RW	Num					US
02.043	Maximum Rate Of Change Of Acceleration 2	0.0 to 300.0 s ² /100Hz		0.0 s ² /100Hz		RW	Num					US
02.044	Maximum Rate Of Change Of Acceleration 3	0.0 to 300.0 s ² /100Hz		0.0 s ² /100Hz		RW	Num					US

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card Operation	Onboard PLC	Advanced parameters	Technical data	Diagnostics	UL listing information
--------------------	---------------------	-------------------------	-------------------------	-----------------	------------------	-------------------	--------------	-------------------------	-------------	----------------------------	----------------	-------------	------------------------

Parameter		Range (⇅)		Default (⇒)		Type							
		OL	RFC-A	OL	RFC-A								
02.045	Maximum Rate Of Change Of Acceleration 4	0.0 to 300.0 s ² /100Hz		0.0 s ² /100Hz		RW	Num						US
02.048	Start Frequency	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num						US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.3 Menu 3: Frequency control

Figure 11-3 Menu 3 Open-loop logic diagram



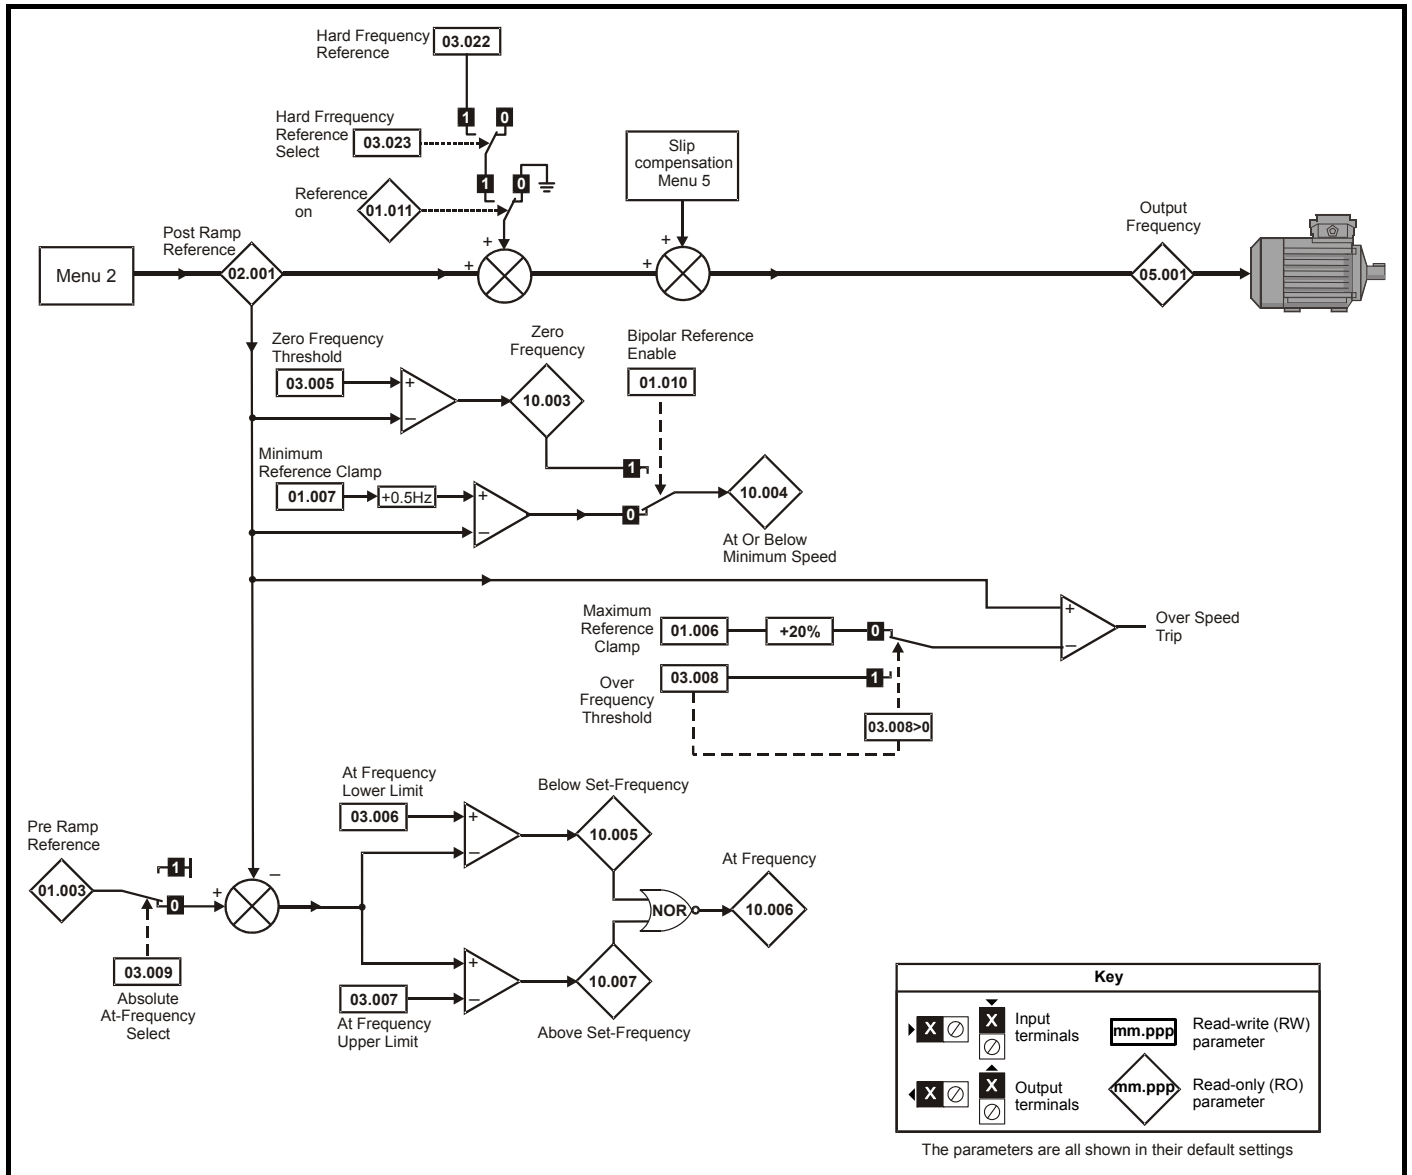


Figure 11-4 Menu 3 RFC-A logic diagram

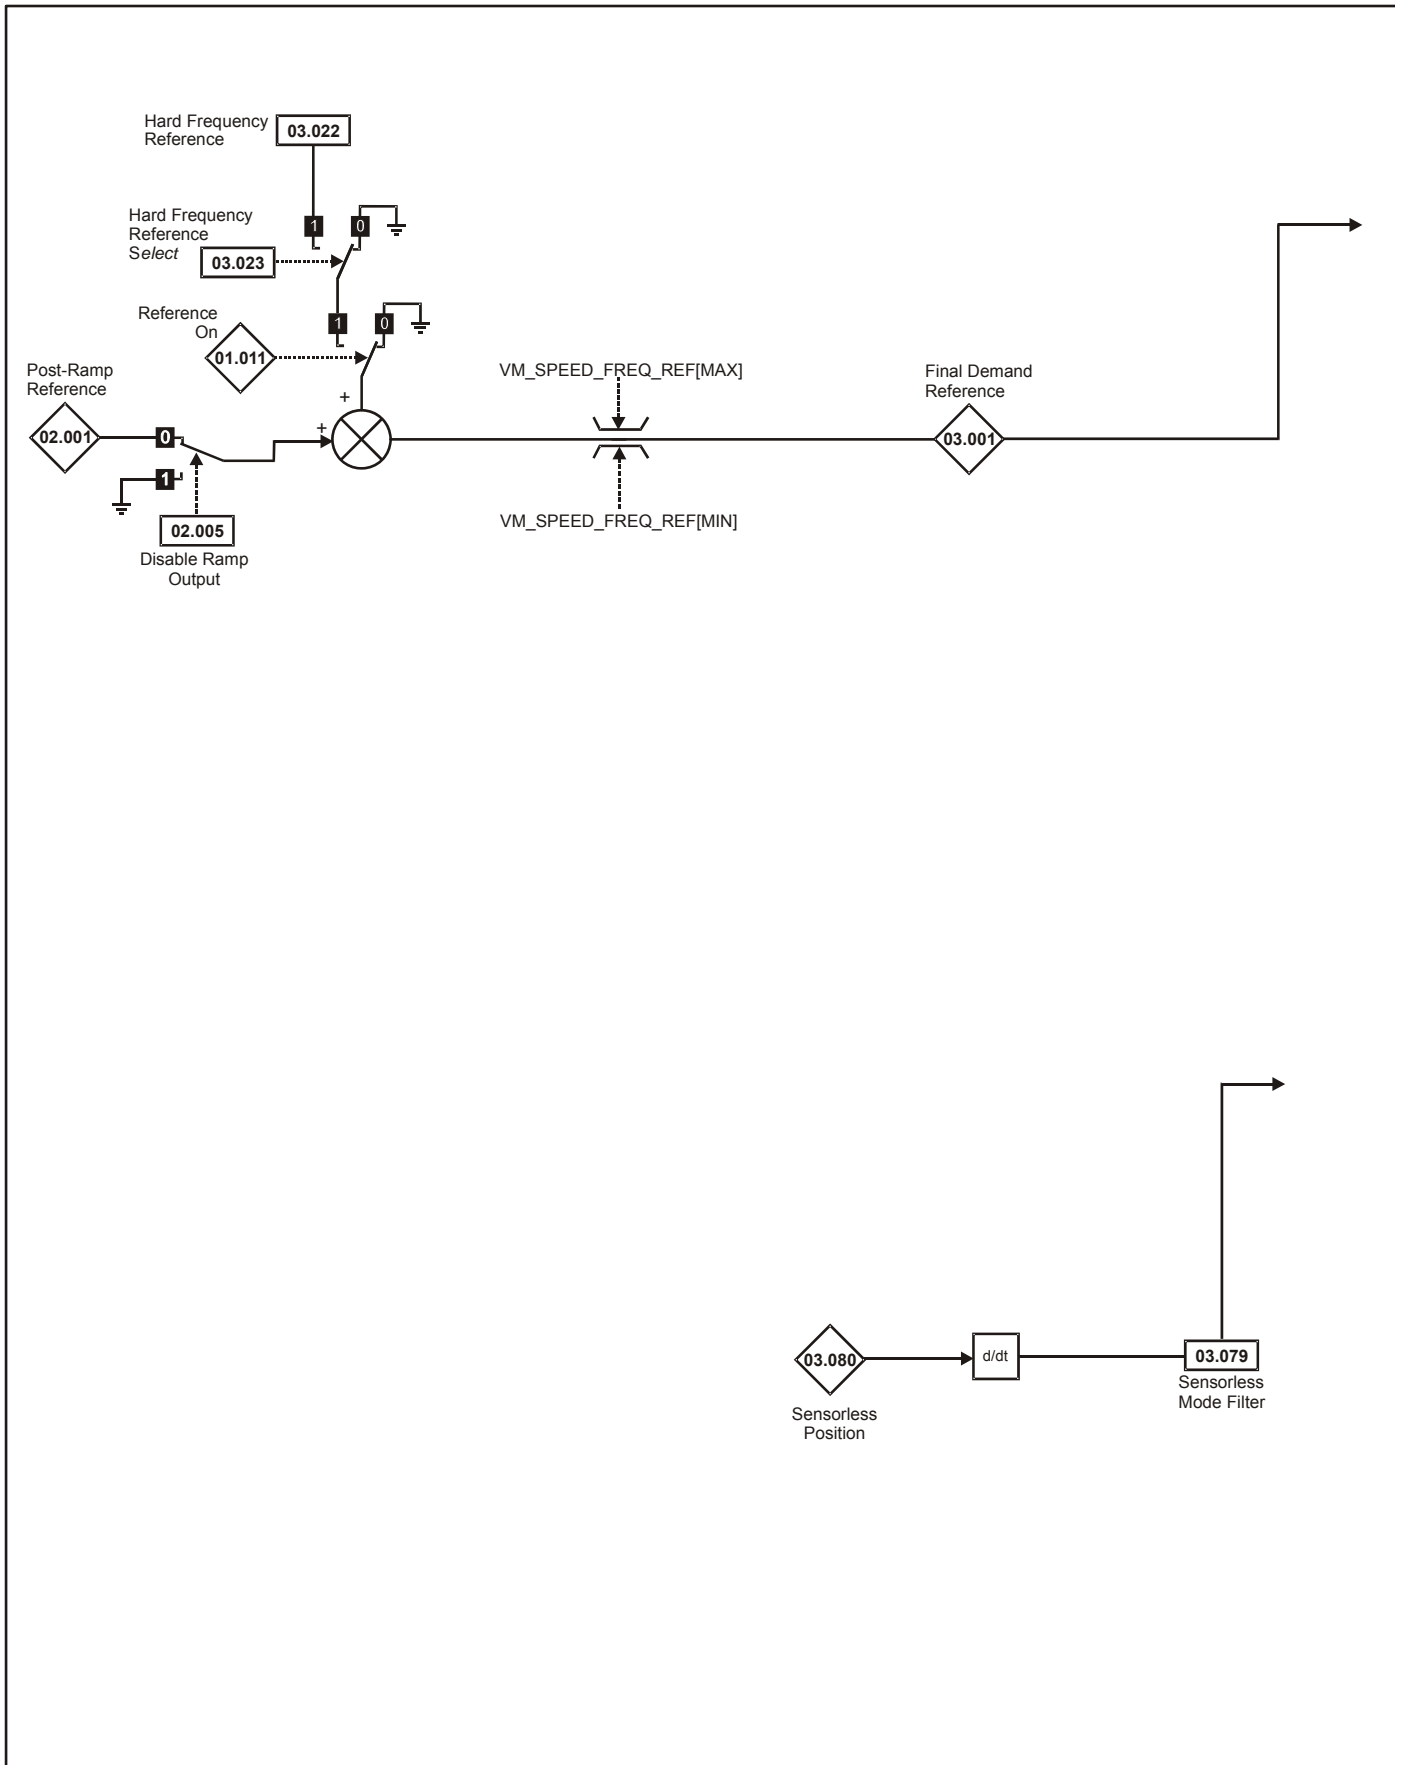

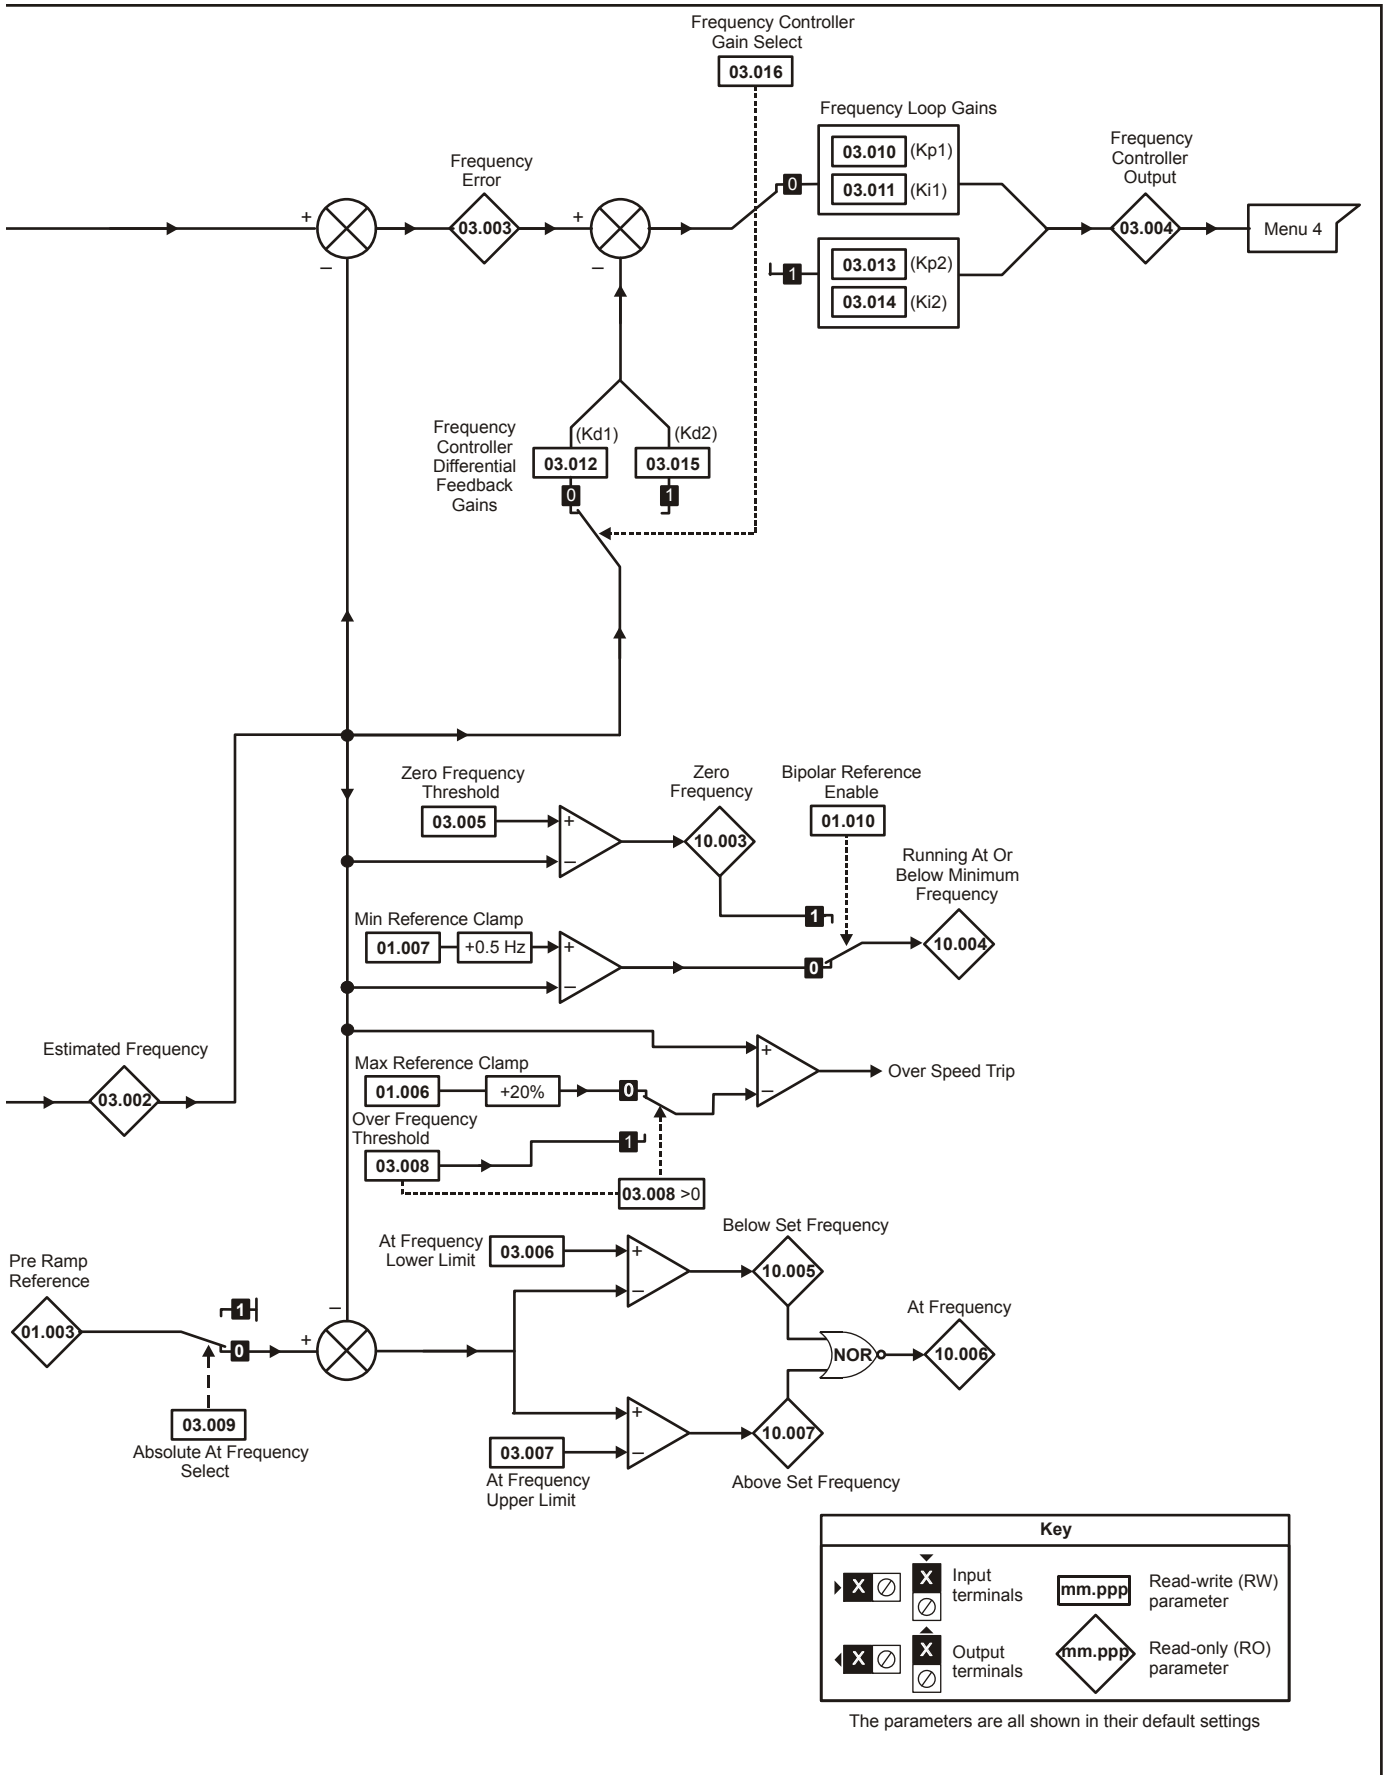

Parameter		Range (⇄)		Default (⇒)		Type					
		OL	RFC-A	OL	RFC-A						
03.001	Final Demand Reference	±VM_FREQ Hz				RO	Num	ND	NC	PT	FI
03.002	Estimated Frequency		±VM_FREQ Hz			RO	Num	ND	NC	PT	FI
03.003	Frequency Error		±VM_FREQ Hz			RO	Num	ND	NC	PT	FI
03.004	Frequency Controller Output		±VM_TORQUE_CURRENT %			RO	Num	ND	NC	PT	FI
03.005	Zero Frequency Threshold	0.00 to 20.00 Hz		2.00 Hz		RW	Num				US
03.006	At Frequency Lower Limit	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		1.00 Hz		RW	Num				US
03.007	At Frequency Upper Limit	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		1.00 Hz		RW	Num				US
03.008	Over Frequency Threshold	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		0.00 Hz		RW	Num				US
03.009	Absolute At Frequency Select	Off (0) or On (1)		Off (0)		RW	Bit				US
03.010	Frequency Controller Proportional Gain Kp1		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num				US
03.011	Frequency Controller Integral Gain Ki1		0.00 to 655.35 s ² /rad		0.10 s ² /rad	RW	Num				US
03.012	Frequency Controller Differential Feedback Gain Kd1		0.00000 to 0.655 35 1/rad		0.00000 1/rad	RW	Num				US
03.013	Frequency Controller Proportional Gain Kp2		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num				US
03.014	Frequency Controller Integral Gain Ki2		0.00 to 655.35 s ² /rad		0.10 s ² /rad	RW	Num				US
03.015	Frequency Controller Differential Feedback Gain Kd2		0.00000 to 0.655 35 1/rad		0.00000 1/rad	RW	Num				US
03.016	Frequency Controller Gain Select		0 to 2		0	RW	Num				US
03.017	Gain Change Threshold		±VM_FREQ		0.00	RW	Num				US
03.018	Motor and Load Inertia		0.00 to 1000.00 kgm ²		0.00 kgm ²	RW	Num				US
03.022	Hard Frequency Reference	±VM_SPEED_FREQ_REF Hz		0.00 Hz		RW	Num				US
03.023	Hard Frequency Reference Select	Off (0) or On (1)		Off (0)		RW	Bit				US
03.028	Revolution Counter	0 to 65535				RO	Num	ND	NC	PT	FI
03.029	Position	0 to 65535				RO	Num	ND	NC	PT	FI
03.032	Position Counter Reset	Off (0) or On (1)		Off (0)		RW	Bit		NC		
03.034	Rotary Lines Per Revolution	512 (0), 1024 (1), 2048 (2), 4096 (3)		1024 (1)		RW	Txt				US
03.035	Position Scaling Numerator	0.000 to 1.000		1.000		RW	Num				US
03.036	Position Scaling Denominator	0.000 to 100.000		1.000		RW	Num				US
03.037	Frequency Output or PWM Output Scaling	0.000 to 4.000		1.000		RW	Num				US
03.038	Maximum Output Frequency	1 (0), 2 (1), 5 (2), 10 (3)		5 (2)		RW	Txt				US
03.043	Maximum Reference Frequency	0.00 to 100.00 kHz		10.00 kHz		RW	Num				US
03.044	Frequency Reference Scaling	0.000 to 4.000		1.000		RW	Num				US
03.045	Frequency Reference	0.00 to 100.00 %				RO	Num	ND	NC	PT	FI
03.047	Two Point Minimum Frequency	0.00 to 100.00 %		0.00 %		RW	Num				US
03.048	Drive Reference at Minimum Frequency	0.00 to 100.00 %		0.00 %		RW	Num				US
03.049	Two Point Maximum Frequency	0.00 to 100.00 %		100.00 %		RW	Num				US
03.050	Drive Reference at Maximum Frequency	0.00 to 100.00 %		100.00 %		RW	Num				US
03.072	Motor speed percent	±150.0 %				RO	Num	ND	NC	PT	FI
03.079	Sensorless Mode Filter		4 (0), 5 (1), 6 (2), 8 (3), 12 (4), 20 (5) ms		4 (0) ms	RW	Txt				US
03.080	Sensorless Position	0 to 65535				RO	Num	ND	NC	PT	

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.4 Menu 4: Torque and current control

Figure 11-5 Menu 4 Open loop logic diagram


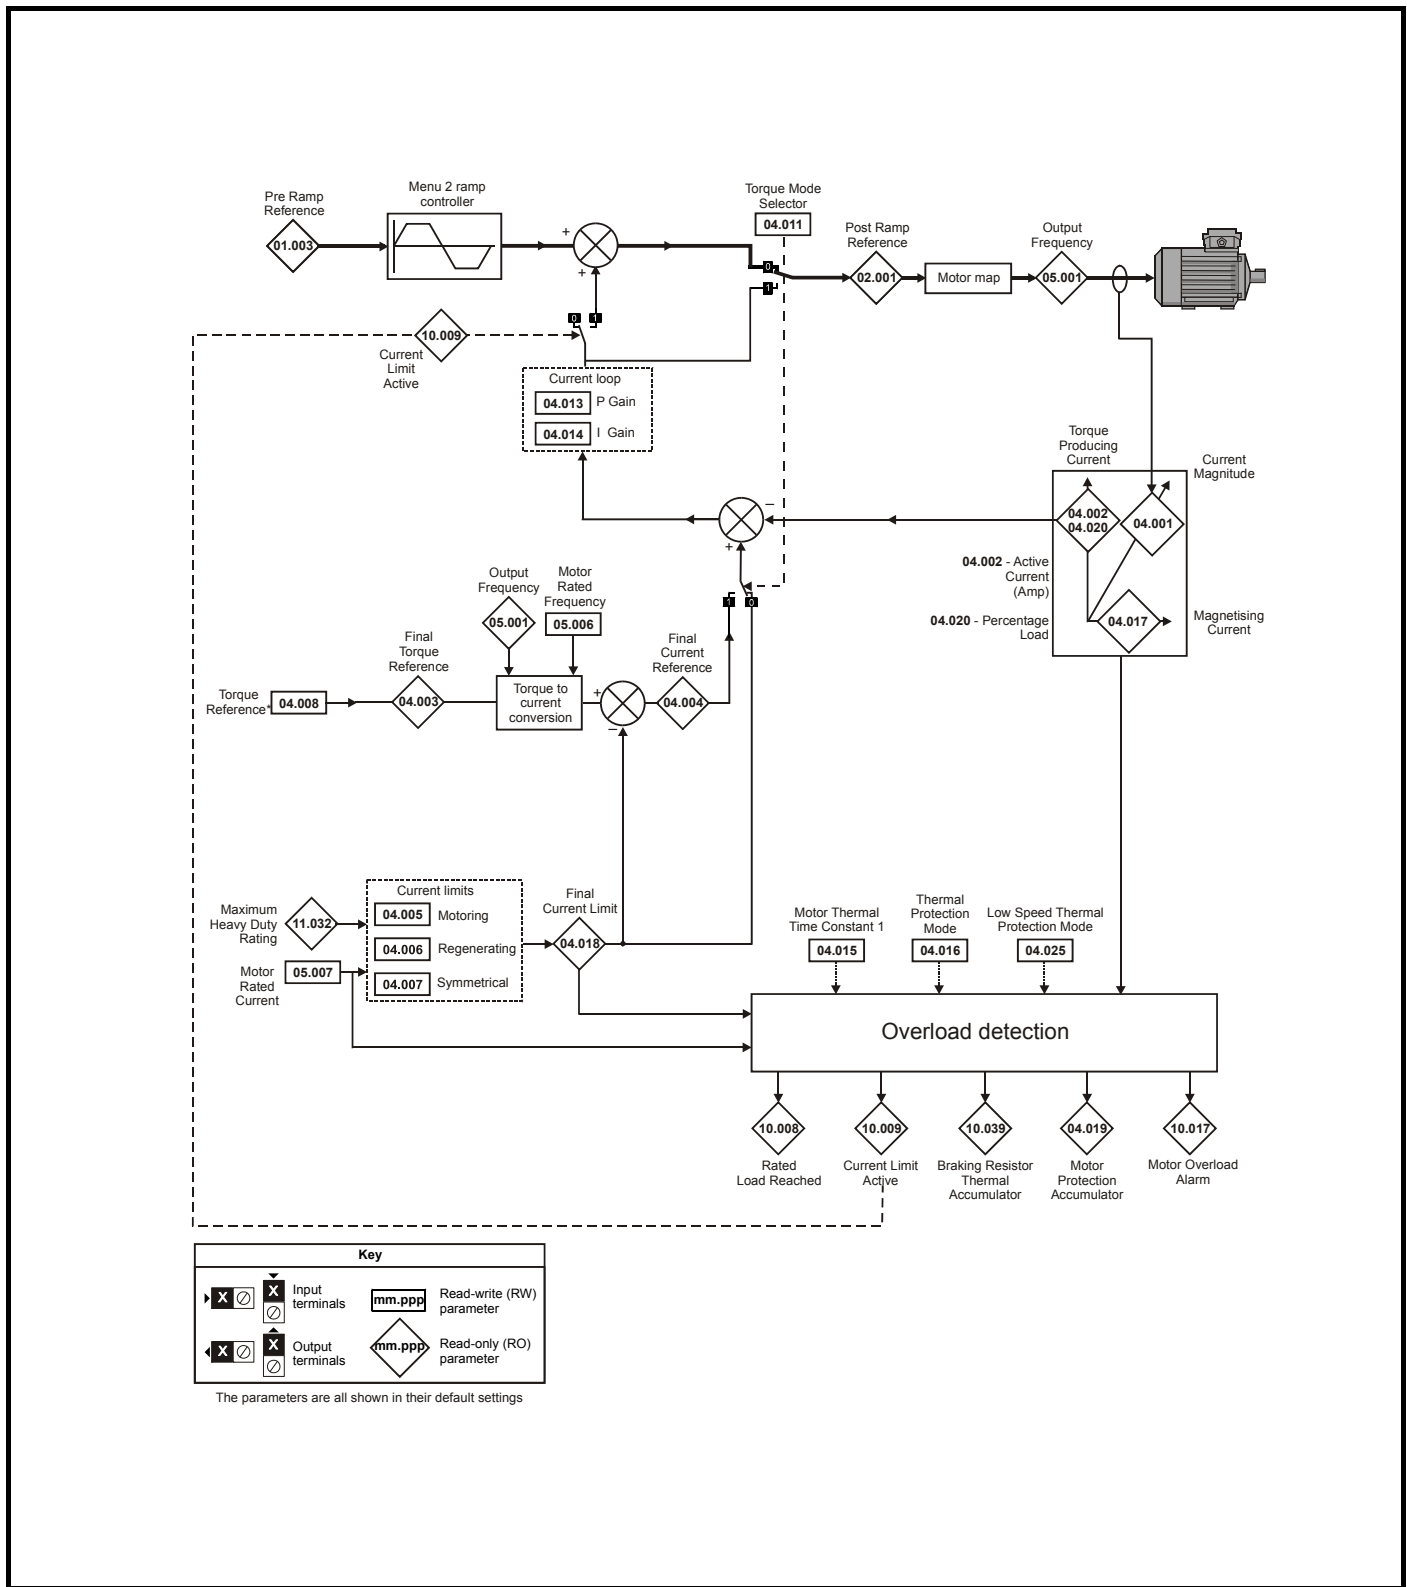


Figure 11-6 Menu 4 RFC-A logic diagram

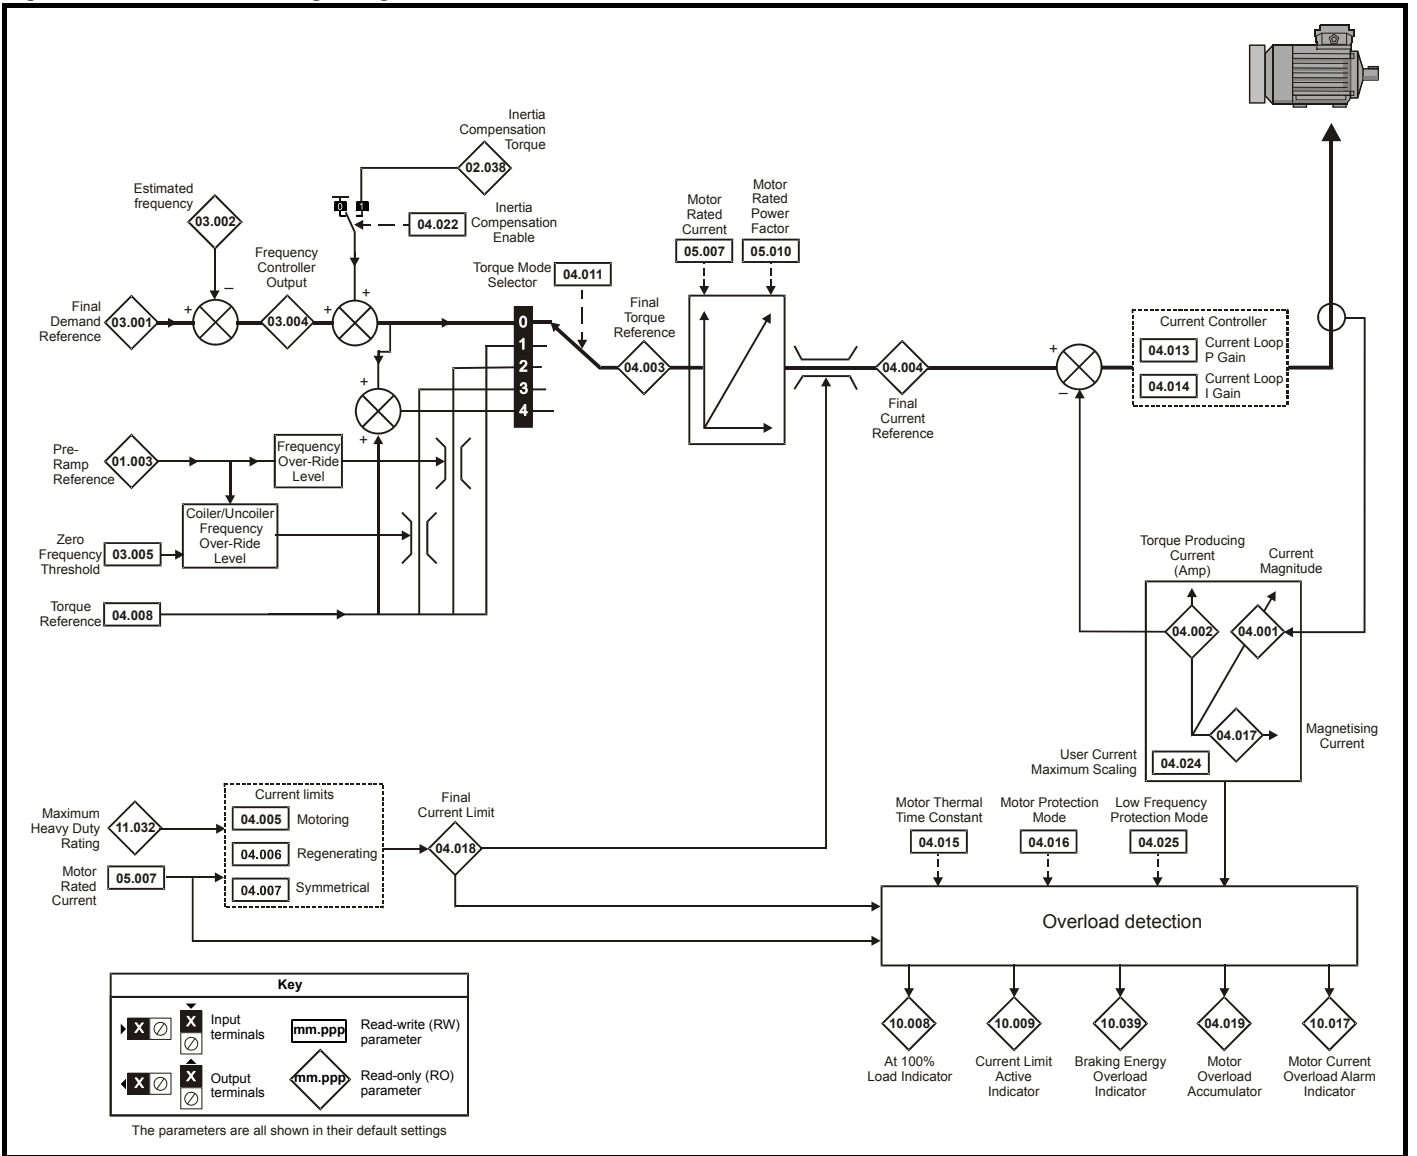

Parameter	Range (⚡)		Default (⇒)		Type							
	OL	RFC-A	OL	RFC-A								
04.001	Current Magnitude		±VM_DRIVE_CURRENT A			RO	Num	ND	NC	PT	FI	
04.002	Torque Producing Current		±VM_DRIVE_CURRENT A			RO	Num	ND	NC	PT	FI	
04.003	Final Torque Reference		±VM_TORQUE_CURRENT %			RO	Num	ND	NC	PT	FI	
04.004	Final Current Reference		±VM_TORQUE_CURRENT %			RO	Num	ND	NC	PT	FI	
04.005	Motoring Current Limit		±VM_MOTOR1_CURRENT_LIMIT %		165.0 %	175.0 %	RW	Num		RA	US	
04.006	Regenerating Current Limit		±VM_MOTOR1_CURRENT_LIMIT %		165.0 %	175.0 %	RW	Num		RA	US	
04.007	Symmetrical Current Limit		±VM_MOTOR1_CURRENT_LIMIT %		165.0 %	175.0 %	RW	Num		RA	US	
04.008	Torque Reference		±VM_USER_CURRENT %		0.0 %		RW	Num			US	
04.011	Torque Mode Selector		0 to 5		0		RW	Num			US	
04.013	Current Controller Kp Gain		0.00 to 4000.00		20.00		RW	Num			US	
04.014	Current Controller Ki Gain		0.000 to 600.000		40.000		RW	Num			US	
04.015	Motor Thermal Time Constant 1		1 to 3000 s		179 s		RW	Num			US	
04.016	Thermal Protection Mode		00 to 11		00		RW	Bin			US	
04.017	Magnetising Current		±VM_DRIVE_CURRENT A				RO	Num	ND	NC	PT	FI
04.018	Final Current Limit		±VM_TORQUE_CURRENT %				RO	Num	ND	NC	PT	PS
04.019	Motor Protection Accumulator		0.0 to 100.0 %				RO	Num	ND	NC	PT	PS
04.020	Percentage Load		±VM_USER_CURRENT %				RO	Num	ND	NC	PT	FI
04.022	Inertia Compensation Enable		Off (0) or On (1)			Off (0)	RW	Bit			US	
04.024	User Current Maximum Scaling		±VM_TORQUE_CURRENT_UNIPOLAR %		165.0 %	175.0 %	RW	Num		RA	US	
04.025	Low Frequency Thermal Protection Mode		0 to 1		0		RW	Num			US	
04.026	Percentage Torque		±VM_USER_CURRENT %				RO	Num	ND	NC	PT	FI
04.036	Motor Protection Accumulator Power-up Value		Power down (0), Zero (1), Real time (2)		Power down (0)		RW	Txt			US	
04.041	User Over Current Trip Level		0 to 100 %		100 %		RW	Num		RA	US	

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.5 Menu 5: Motor control

Figure 11-7 Menu 5 Open-loop logic diagram



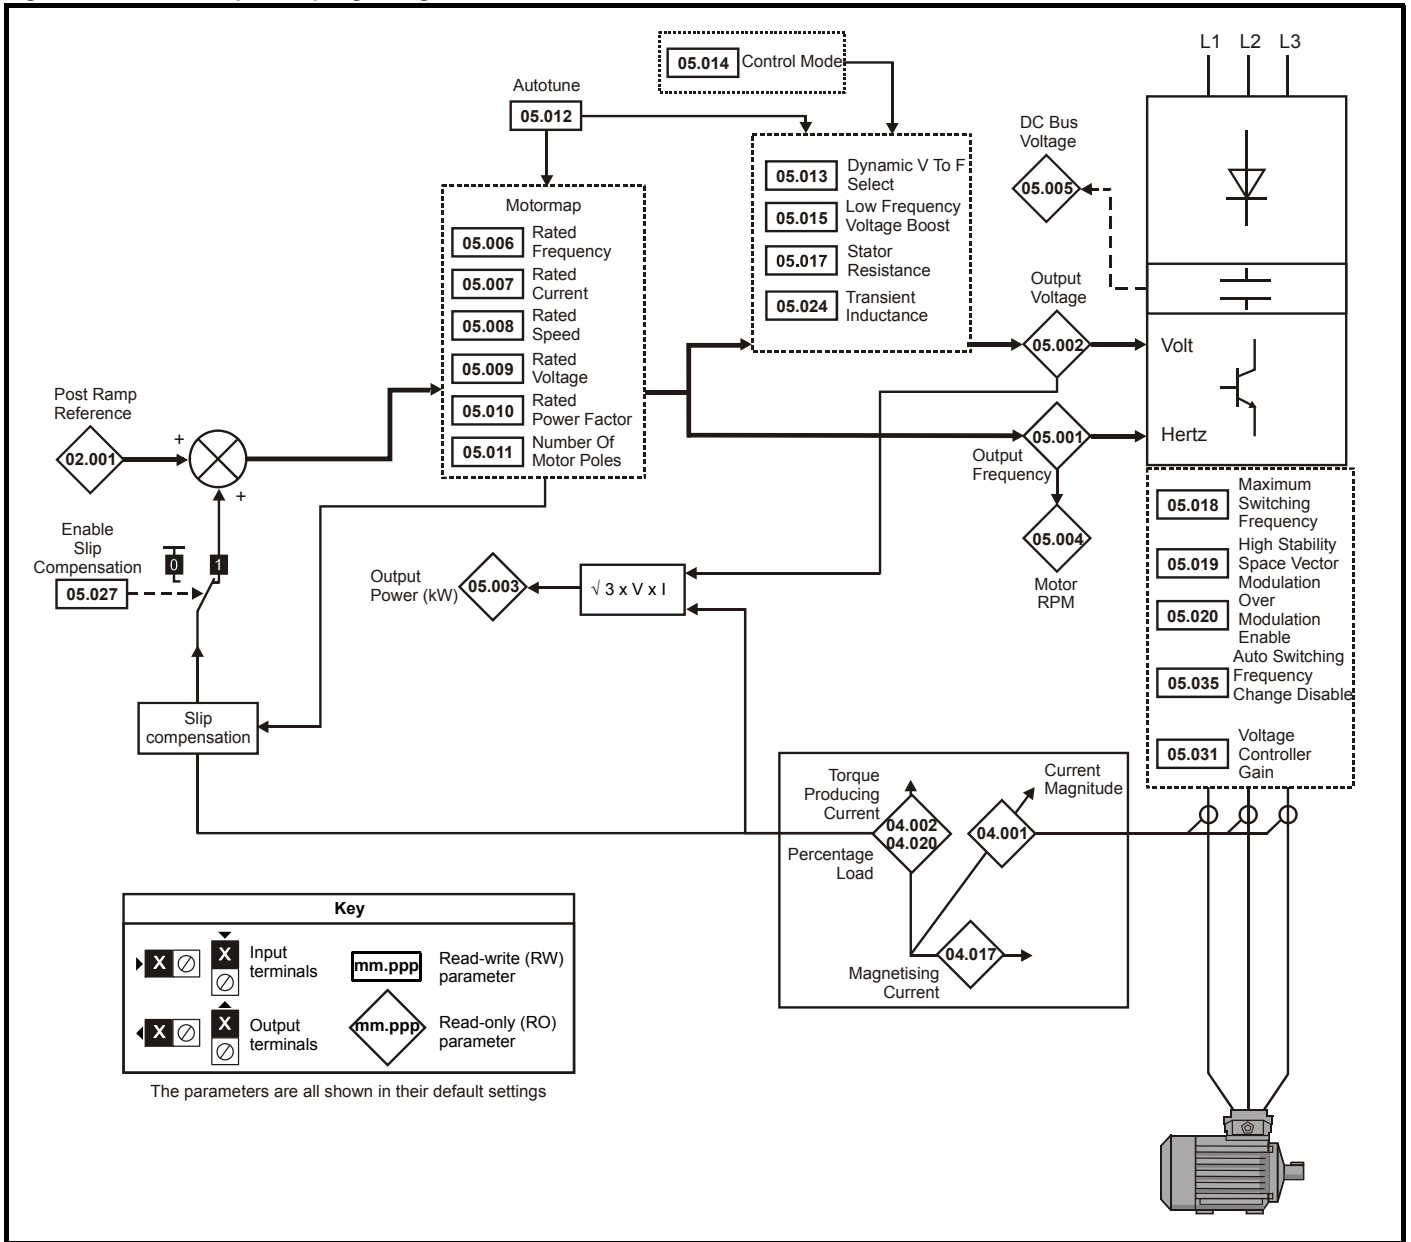


Figure 11-8 Menu 5 RFC-A, logic diagram

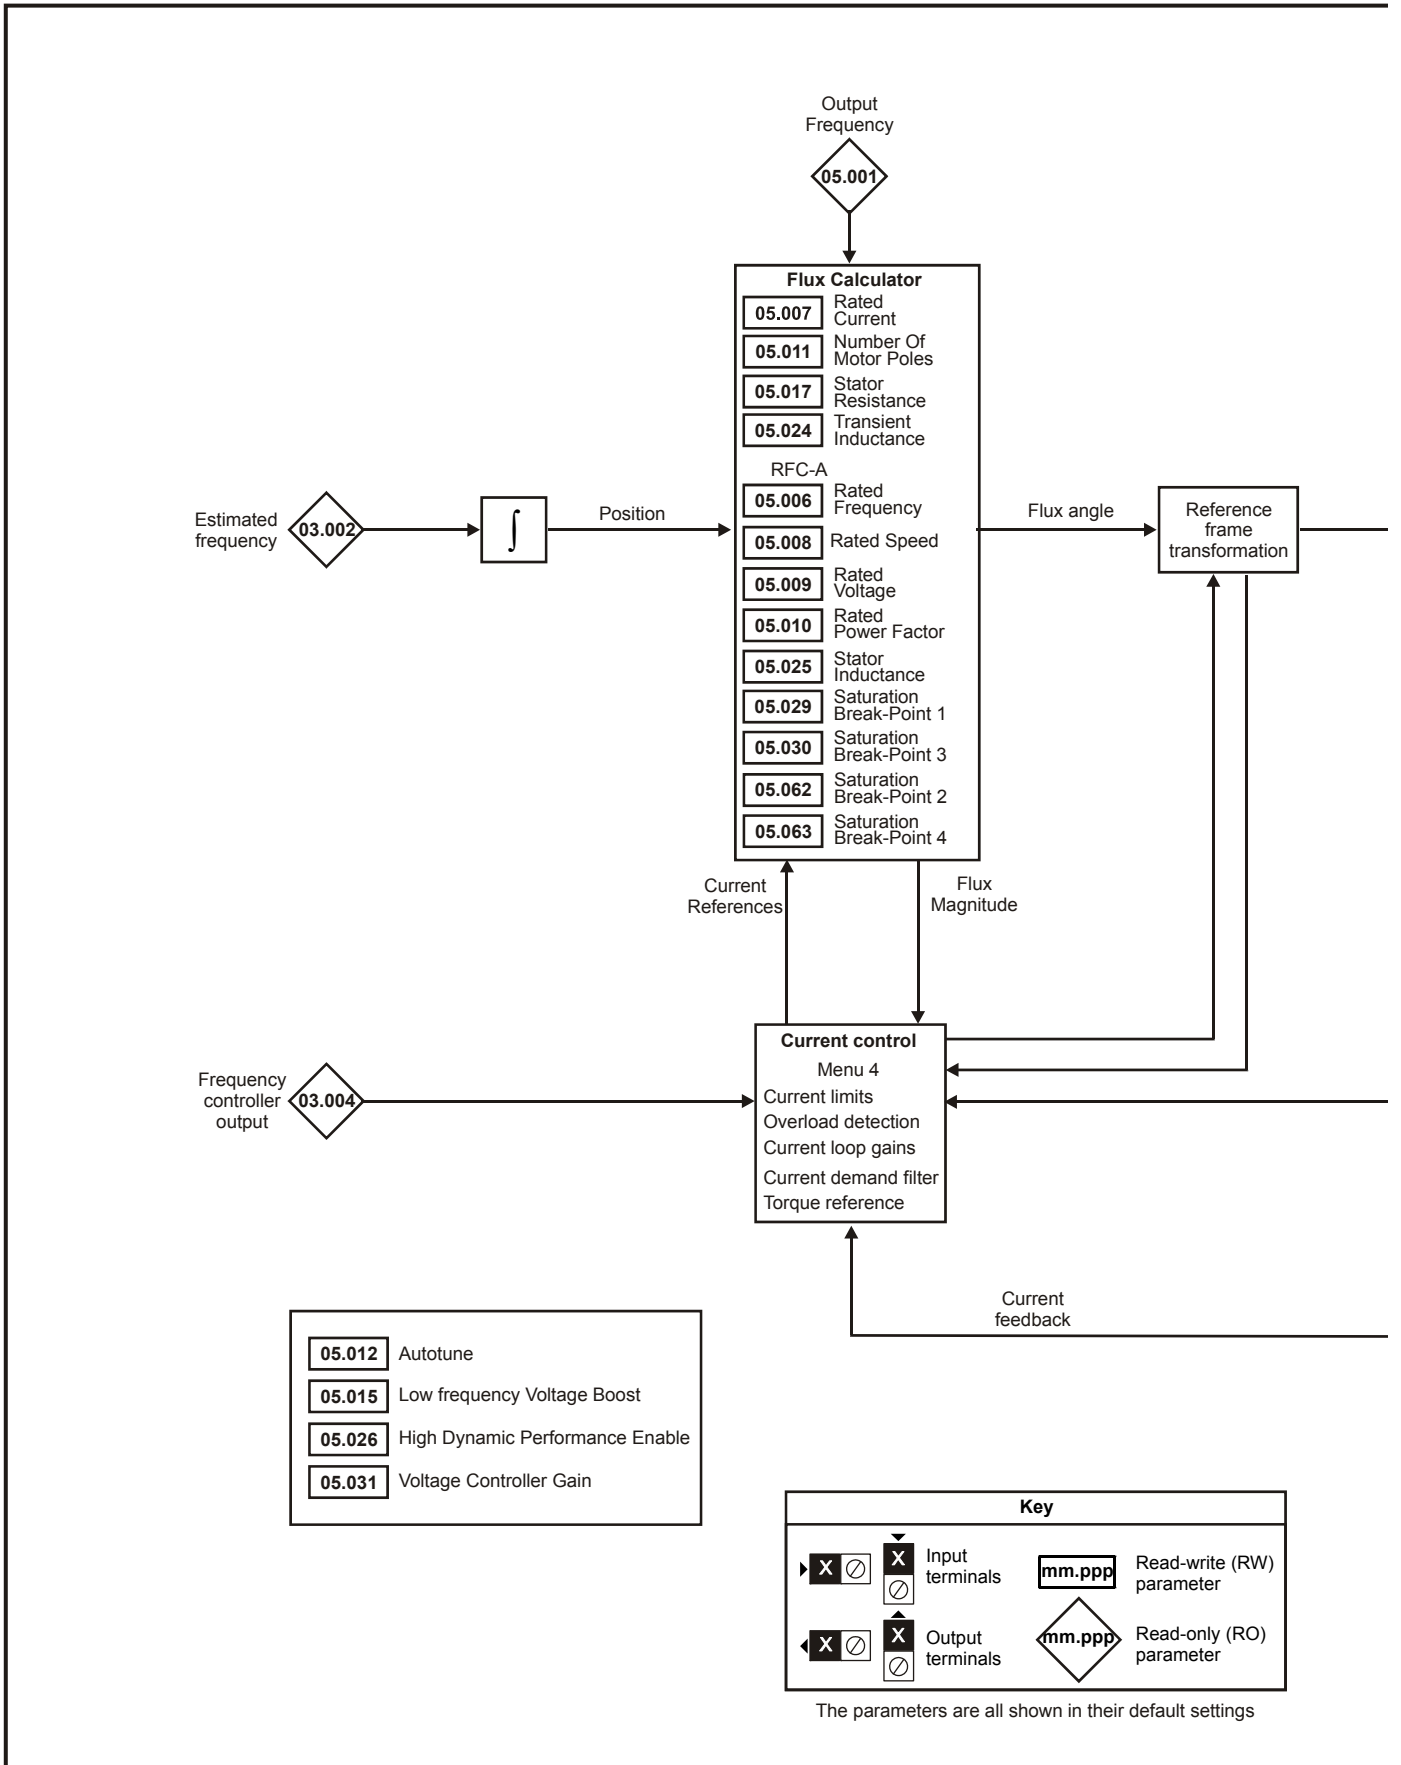

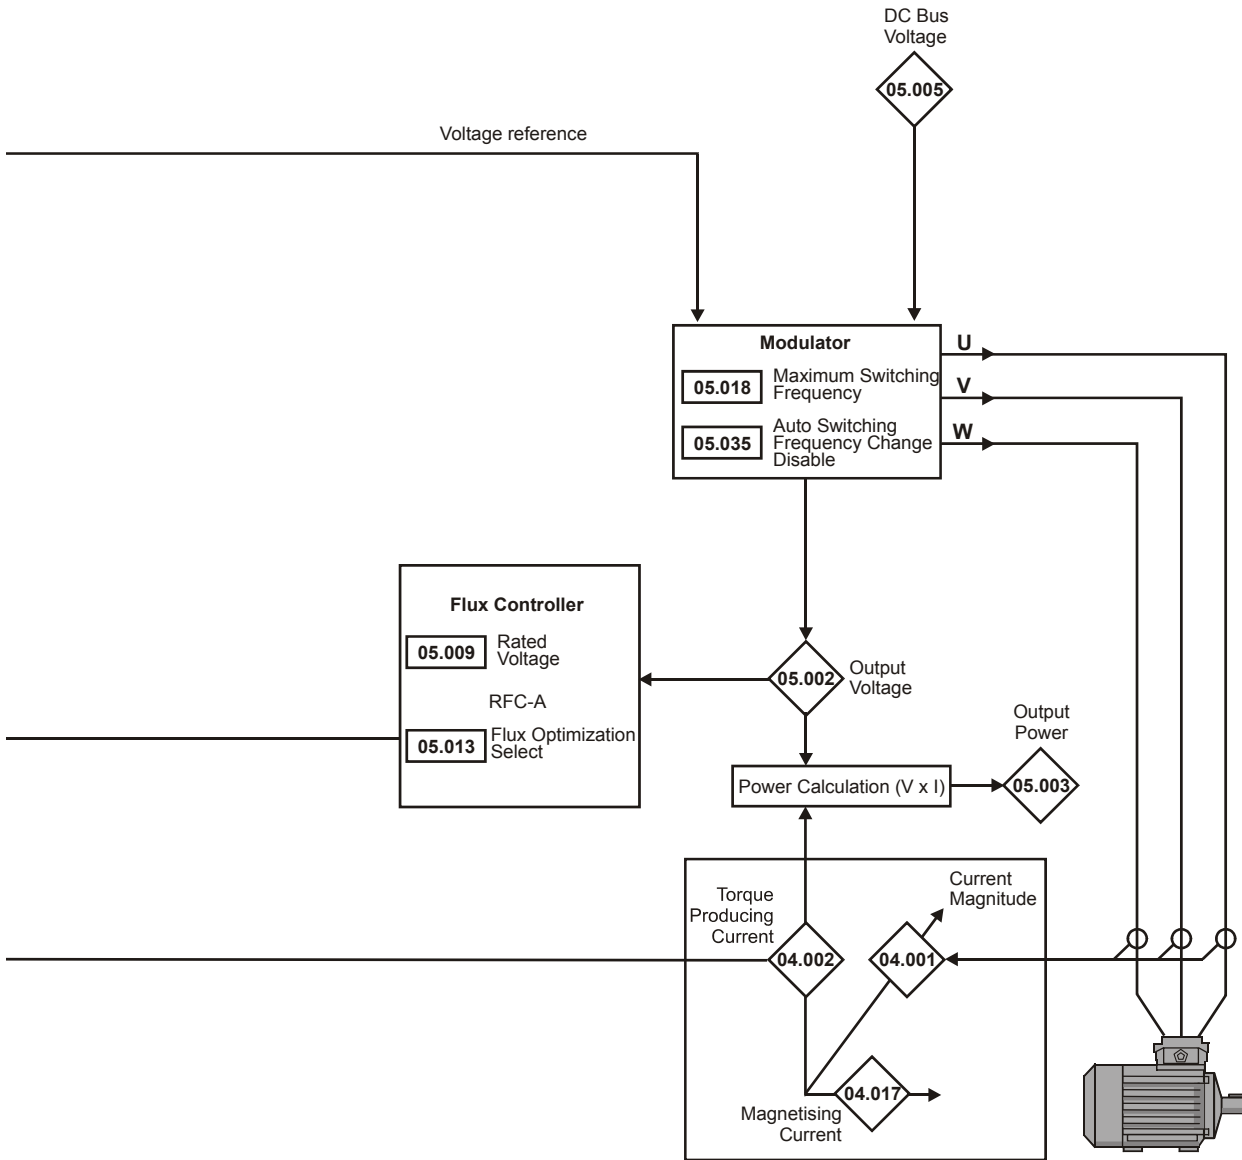

Parameter	Range (⚡)		Default (⇄)		Type								
	OL	RFC-A	OL	RFC-A	RO	Num	ND	NC	PT	FI			
05.001	Output Frequency	±VM_SPEED_FREQ_REF Hz											
05.002	Output Voltage	±VM_AC_VOLTAGE V											
05.003	Output Power	±VM_POWER kW											
05.004	Motor Rpm	±80000 rpm											
05.005	D.C. Link Voltage	±VM_DC_VOLTAGE V											
05.006	Motor Rated Frequency	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		50Hz: 50.00 Hz 60Hz: 60.00 Hz		RW	Num						US
05.007	Motor Rated Current	±VM_RATED_CURRENT A		Maximum Heavy Duty Rating (11.032)		RW	Num		RA				US
05.008	Motor Rated Speed	0.0 to 80000.0 rpm		50Hz: 1500.0 rpm 60Hz: 1800.0 rpm 50Hz: 1450.0 rpm 60Hz: 1750.0 rpm		RW	Num						US
05.009	Motor Rated Voltage	±VM_AC_VOLTAGE_SET V		110V drive: 230 V 200V drive: 230 V 400V drive 50Hz: 400 V 400V drive 60Hz: 460 V 575V drive: 575 V 690V drive: 690 V		RW	Num		RA				US
05.010	Motor Rated Power Factor	0.00 to 1.00		0.85		RW	Num		RA				US
05.011	Number Of Motor Poles	Automatic (0) to 32 (16) Poles		Automatic (0) Poles		RW	Txt						US
05.012	Auto-tune	0 to 3		0		RW	Num		NC				
05.013	Dynamic V To F Select / Flux Optimization Select	0 to 2		0		RW	Num						US
05.014	Control Mode	Ur S (0), Ur (1), Fixed (2), Ur Auto (3), Ur I (4), Square (5)		Ur I (4)		RW	Txt						US
05.015	Low Frequency Voltage Boost	0.0 to 25.0 %		3.0 %		RW	Num						US
05.017	Stator Resistance	0.0000 to 99.9999 Ω		0.0000 Ω		RW	Num		RA				US
05.018	Maximum Switching Frequency	0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz		2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz		3 (3) kHz		RW	Txt		RA		US
05.019	High Stability Space Vector Modulation	Off (0) or On (1)		Off (0)		RW	Bit						US
05.020	Over Modulation Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
05.024	Transient Inductance	0.000 to 500.000 mH		0.000 mH		RW	Num		RA				US
05.025	Stator Inductance	0.00 to 5000.00 mH		0.00 mH		RW	Num		RA				US
05.026	High Dynamic Performance Enable			Off (0) or On (1)		Off (0)		RW	Bit				US
05.027	Enable Slip Compensation	±150.0 %		100.0 %		RW	Num						US
05.028	Flux Control Compensation Disable	Off (0) or On (1)		Off (0)		RW	Bit						US
05.029	Saturation Breakpoint 1			0.0 to 100.0 %		50.0 %		RW	Num				US
05.030	Saturation Breakpoint 3			0.0 to 100.0 %		75.0 %		RW	Num				US
05.031	Voltage Controller Gain	1 to 30		1		RW	Num						US
05.032	Torque Per Amp	0.00 to 500.00 Nm/A				RO	Num	ND	NC	PT			
05.033	Slip Compensation Limit	0.00 to 10.00 Hz		5.00 Hz		RW	Num						US
05.034	Percentage Flux			0.0 to 150.0 %		RO	Num	ND	NC	PT			
05.035	Auto-switching Frequency Change Disable	0 to 2		0		RW	Num						US


Parameter	Range (⇅)		Default (⇒)		Type										
	OL	RFC-A	OL	RFC-A											
05.036	Slip Compensation Filter		64 (0), 128 (1), 256 (2), 512 (3) ms		128 (1) ms					RW	Txt		US		
05.037	Switching Frequency		0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz	2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz						RO	Txt	ND	NC	PT	
05.040	Spin Start Boost		0.0 to 10.0		1.0					RW	Num			US	
05.042	Reverse Output Phase Sequence		Off (0) or On (1)		Off (0)					RW	Bit			US	
05.059	Maximum Deadtime Compensation		0.000 to 10.000 µs		0.000 µs					RO	Num		NC	PT	US
05.060	Current At Maximum Deadtime Compensation		0.00 to 100.00 %		0.00 %					RO	Num		NC	PT	US
05.061	Disable Deadtime Compensation		Off (0) or On (1)		Off (0)					RW	Bit			US	
05.062	Saturation Breakpoint 2			0.0 to 100.0 %		0.0 %				RW	Num			US	
05.063	Saturation Breakpoint 4			0.0 to 100.0 %		0.0 %				RW	Num			US	
05.074	Boost End Voltage		0.0 to 100.0 %		50.0 %					RW	Num			US	
05.075	Boost End Frequency		0.0 to 100.0 %		50.0 %					RW	Num			US	
05.076	Second Point Voltage		0.0 to 100.0 %		55.0 %					RW	Num			US	
05.077	Second Point Frequency		0.0 to 100.0 %		55.0 %					RW	Num			US	
05.078	Third point voltage		0.0 to 100.0 %		75.0 %					RW	Num			US	
05.079	Third point frequency		0.0 to 100.0 %		75.0 %					RW	Num			US	
05.080	Low acoustic noise enable		Off (0) or On (1)		Off (0)					RW	Bit			US	
05.081	Change to maximum drive switching frequency at low output current		Off (0) or On (1)		Off (0)					RW	Bit			US	
05.082	Motor Rated Power		±VM_POWER kW		0.00 kW					RW	Num		RA		
05.083	Voltage Shelving Disable		Off (0) or On (1)		Off (0)					RW	Bit			US	
05.084	Low Frequency Slip Boost		0.0 to 100.0 %		0.0 %					RW	Num			US	

* If this parameter is read via serial communications, it will show pole pairs

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.6 Menu 6: Sequencer and clock

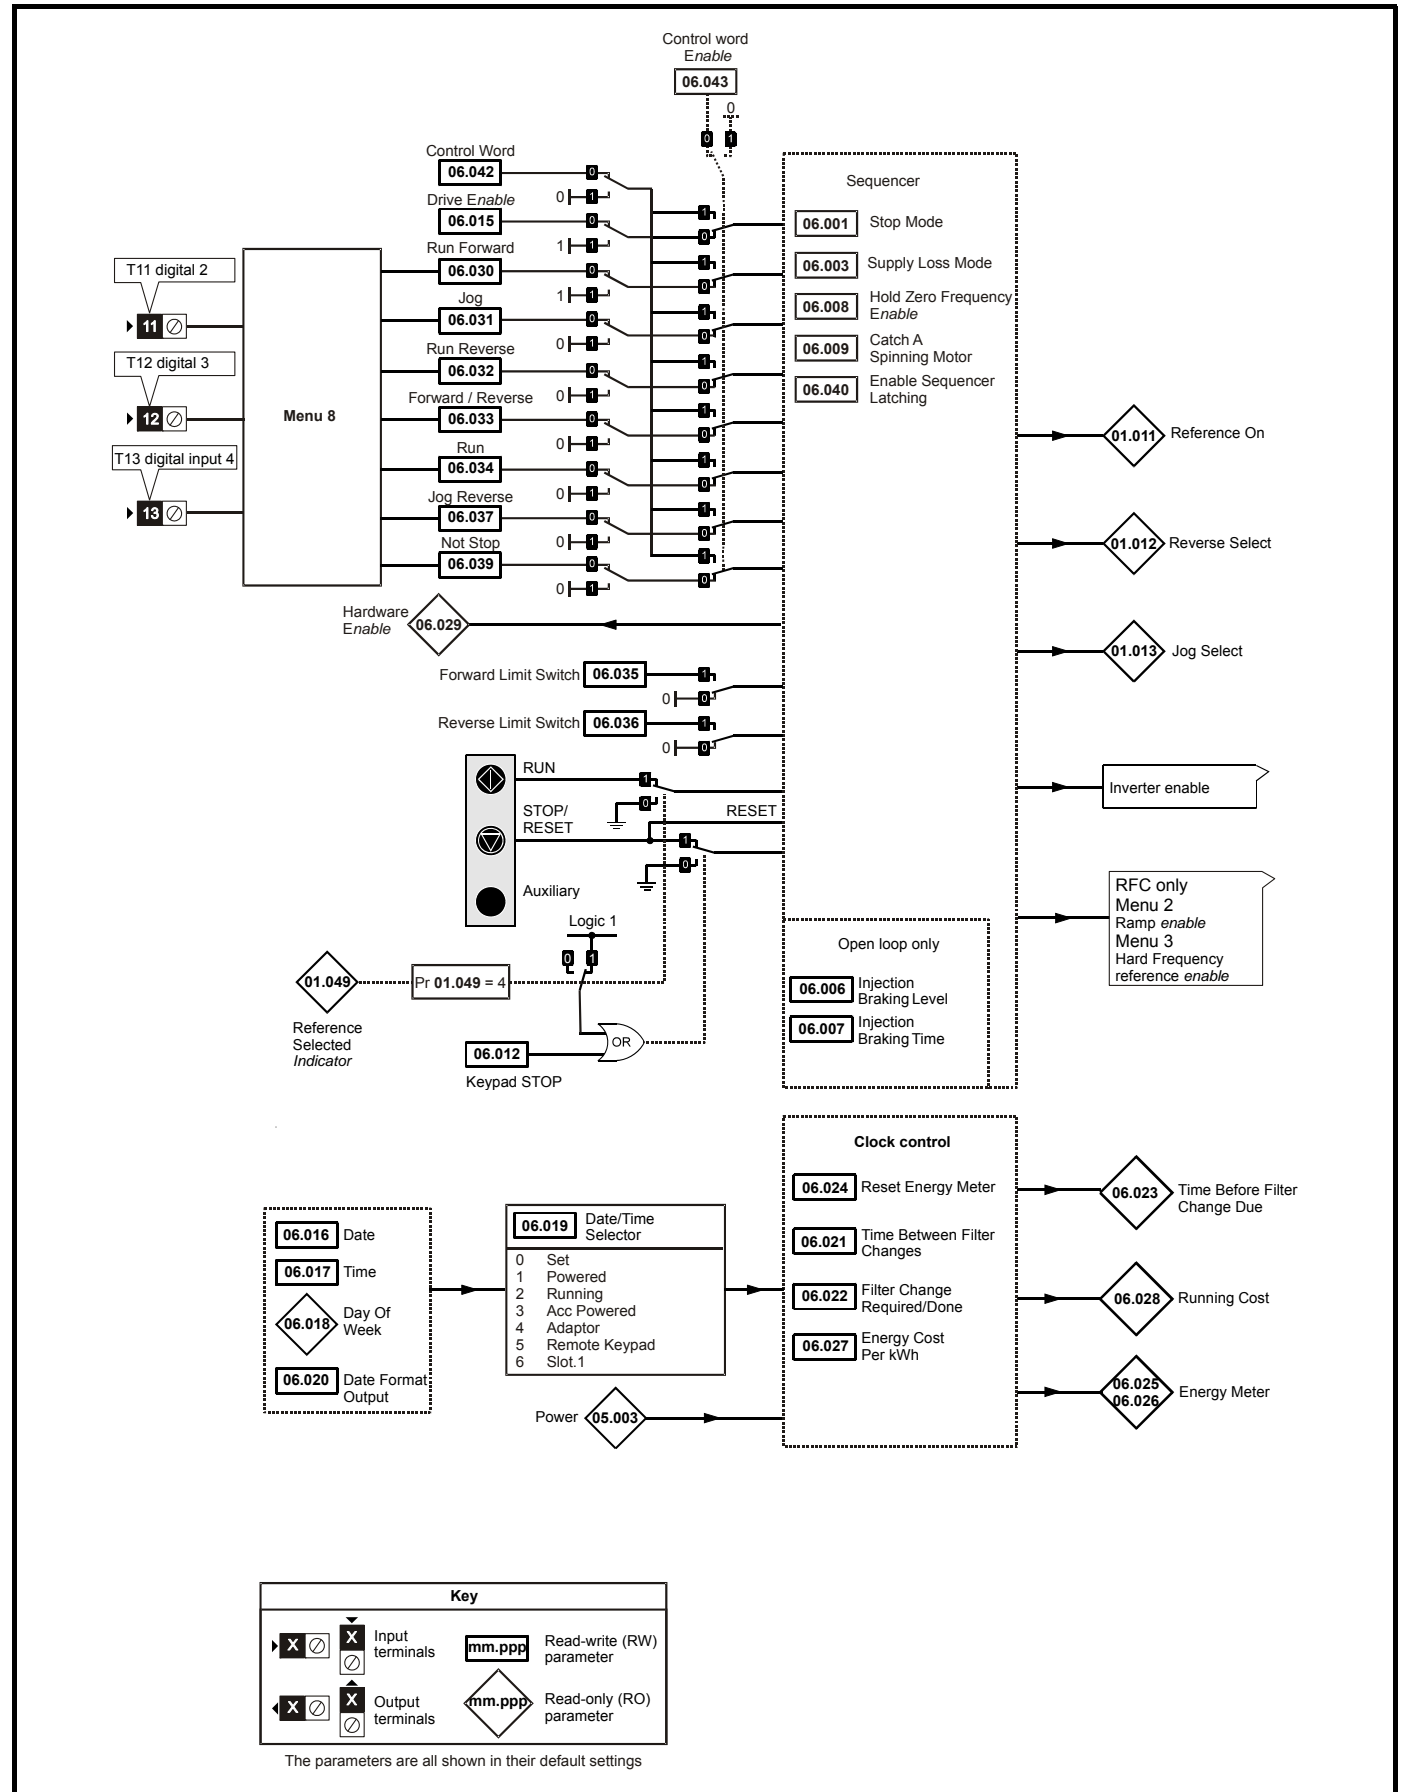Figure 11-9 Menu 6 logic diagram




Parameter		Range (⊕)		Default (⇔)		Type							
		OL	RFC-A	OL	RFC-A								
06.001	Stop Mode	Coast (0), Ramp (1), Ramp dc I (2), dc I (3), Timed dc I (4), Disable (5), No Ramp (6)		Ramp (1)		RW	Txt						US
06.002	Limit Switch Stop Mode	Stop (0), Ramp (1)		Ramp (1)		RW	Txt						US
06.003	Supply Loss Mode	Disable (0), Ramp Stop (1), Ride Thru (2), Limit Stop (3)		Disable (0)		RW	Txt						US
06.004	Start/Stop Logic Select	0 to 6		5		RW	Num						US
06.006	Injection Braking Level	0.0 to 150.0 %		100.0 %		RW	Num		RA				US
06.007	Injection Braking Time	0.0 to 25.0 s		1.0 s		RW	Num						US
06.008	Hold Zero Frequency	Off (0) or On (1)		Off (0)		RW	Bit						US
06.009	Catch A Spinning Motor	Disable (0), Enable (1), Fwd Only (2), Rev Only (3), dc I (4)		Disable (0)		RW	Txt						US
06.010	Enable Conditions	000000000000 to 111111110111				RO	Bin	ND	NC	PT			
06.011	Sequencer State Machine Inputs	0000000 to 1111111				RO	Bin	ND	NC	PT			
06.012	Enable Stop Key	Off (0) or On (1)		Off (0)		RW	Bit						US
06.013	Enable Auxiliary Key	Disabled (0), Forward/Reverse (1), Run Reverse (2)		Disabled (0)		RW	Txt						US
06.014	Disable Auto Reset On Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
06.015	Drive Enable	Off (0) or On (1)		On (1)		RW	Bit		NC				US
06.016	Date	00-00-00 to 31-12-99				RW	Date	ND	NC	PT			
06.017	Time	00:00:00 to 23:59:59				RW	Time	ND	NC	PT			
06.018	Day Of Week	Sunday (0), Monday (1), Tuesday (2), Wednesday (3), Thursday (4), Friday (5), Saturday (6)				RO	Txt	ND	NC	PT			
06.019	Date/Time Selector	Set (0), Powered (1), Running (2), Acc Powered (3), Adaptor Int. (4), Remote Keypad (5), Slot 1 (6)		Powered (1)		RW	Txt						US
06.020	Date Format	Std (0), US (1)		Std (0)		RW	Txt						US
06.021	Time Between Filter Changes	0 to 30000 Hours		0 Hours		RW	Num						US
06.022	Filter Change Required / Change Done	Off (0) or On (1)				RW	Bit	ND	NC				
06.023	Time Before Filter Change Due	0 to 30000 Hours				RO	Num	ND	NC	PT	PS		
06.024	Reset Energy Meter	Off (0) or On (1)		Off (0)		RW	Bit						
06.025	Energy Meter: MWh	±999.9 MWh				RO	Num	ND	NC	PT	PS		
06.026	Energy Meter: kWh	±99.99 kWh				RO	Num	ND	NC	PT	PS		
06.027	Energy Cost Per kWh	0.0 to 600.0		0.0		RW	Num						US
06.028	Running Cost	±32000				RO	Num	ND	NC	PT			
06.029	Hardware Enable	Off (0) or On (1)		On (1)		RO	Bit		NC				
06.030	Run Forward	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.031	Jog Forward	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.032	Run Reverse	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.033	Forward/Reverse	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.034	Run	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.035	Forward Limit Switch	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.036	Reverse Limit Switch	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.037	Jog Reverse	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.038	User Enable	Off (0) or On (1)		On (1)		RW	Bit		NC				
06.039	Not Stop	Off (0) or On (1)		Off (0)		RW	Bit		NC				
06.040	Enable Sequencer Latching	Off (0) or On (1)		Off (0)		RW	Bit						US
06.041	Drive Event Flags	00 to 11		00		RW	Bin		NC				
06.042	Control Word	0000000000000000 to 1111111111111111		0000000000000000		RW	Bin		NC				
06.043	Control Word Enable	0 to 1		0		RW	Num		NC				US
06.045	Cooling Fan control	0 to 5		2		RW	Num						US
06.046	Supply Loss Hold Disable	Off (0) or On (1)		Off (0)		RW	Bit						US
06.047	Input Phase Loss Detection Mode	Full (0), Ripple Only (1), Disabled (2)		Full (0)		RW	Txt						US

Parameter		Range (⇅)		Default (⇔)		Type							
		OL	RFC-A	OL	RFC-A								
06.048	Supply Loss Detection Level	0 to VM_SUPPLY_LOSS_LEVEL V		110V drive: 205 V 200V drive: 205 V 400V drive: 410 V 575V drive: 540 V 690V drive: 540 V		RW	Num			RA			US
06.051	Allow Motoring Load	Off (0) or On (1)		Off (0)		RW	Bit			NC			
06.052	Motor Pre-heat Current Magnitude	0 to 100 %		0 %		RW	Num						US
06.059	Output Phase Loss Detection Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
06.060	Standby Mode Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
06.061	Standby Mode Mask	0000 to 1111		0000		RW	Bin						US
06.071	Slow Rectifier Charge Rate Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
06.073	Braking IGBT Lower Threshold	0 to VM_DC_VOLTAGE_SET V		110V drive: 390 V 200V drive: 390 V 400V drive: 780 V 575V drive: 930 V 690V drive: 1120 V		RW	Num						US
06.074	Braking IGBT Upper Threshold	0 to VM_DC_VOLTAGE_SET V		110V drive: 390 V 200V drive: 390 V 400V drive: 780 V 575V drive: 930 V 690V drive: 1120 V		RW	Num						US
06.075	Low Voltage Braking IGBT Threshold	0 to VM_DC_VOLTAGE_SET V		0 V		RW	Num						US
06.076	Low Voltage Braking IGBT Threshold Select	Off (0) or On (1)		Off (0)		RW	Bit						
06.077	Low DC Link Operation	Off (0) or On (1)		Off (0)		RW	Bit						US
06.089	DC Injection Active	Off (0) or On (1)		Off (0)		RO	Bit			NC	PT		US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
Fl	Filtered	US	User save	PS	Power-down save						

11.7 Menu 7: Analog I/O

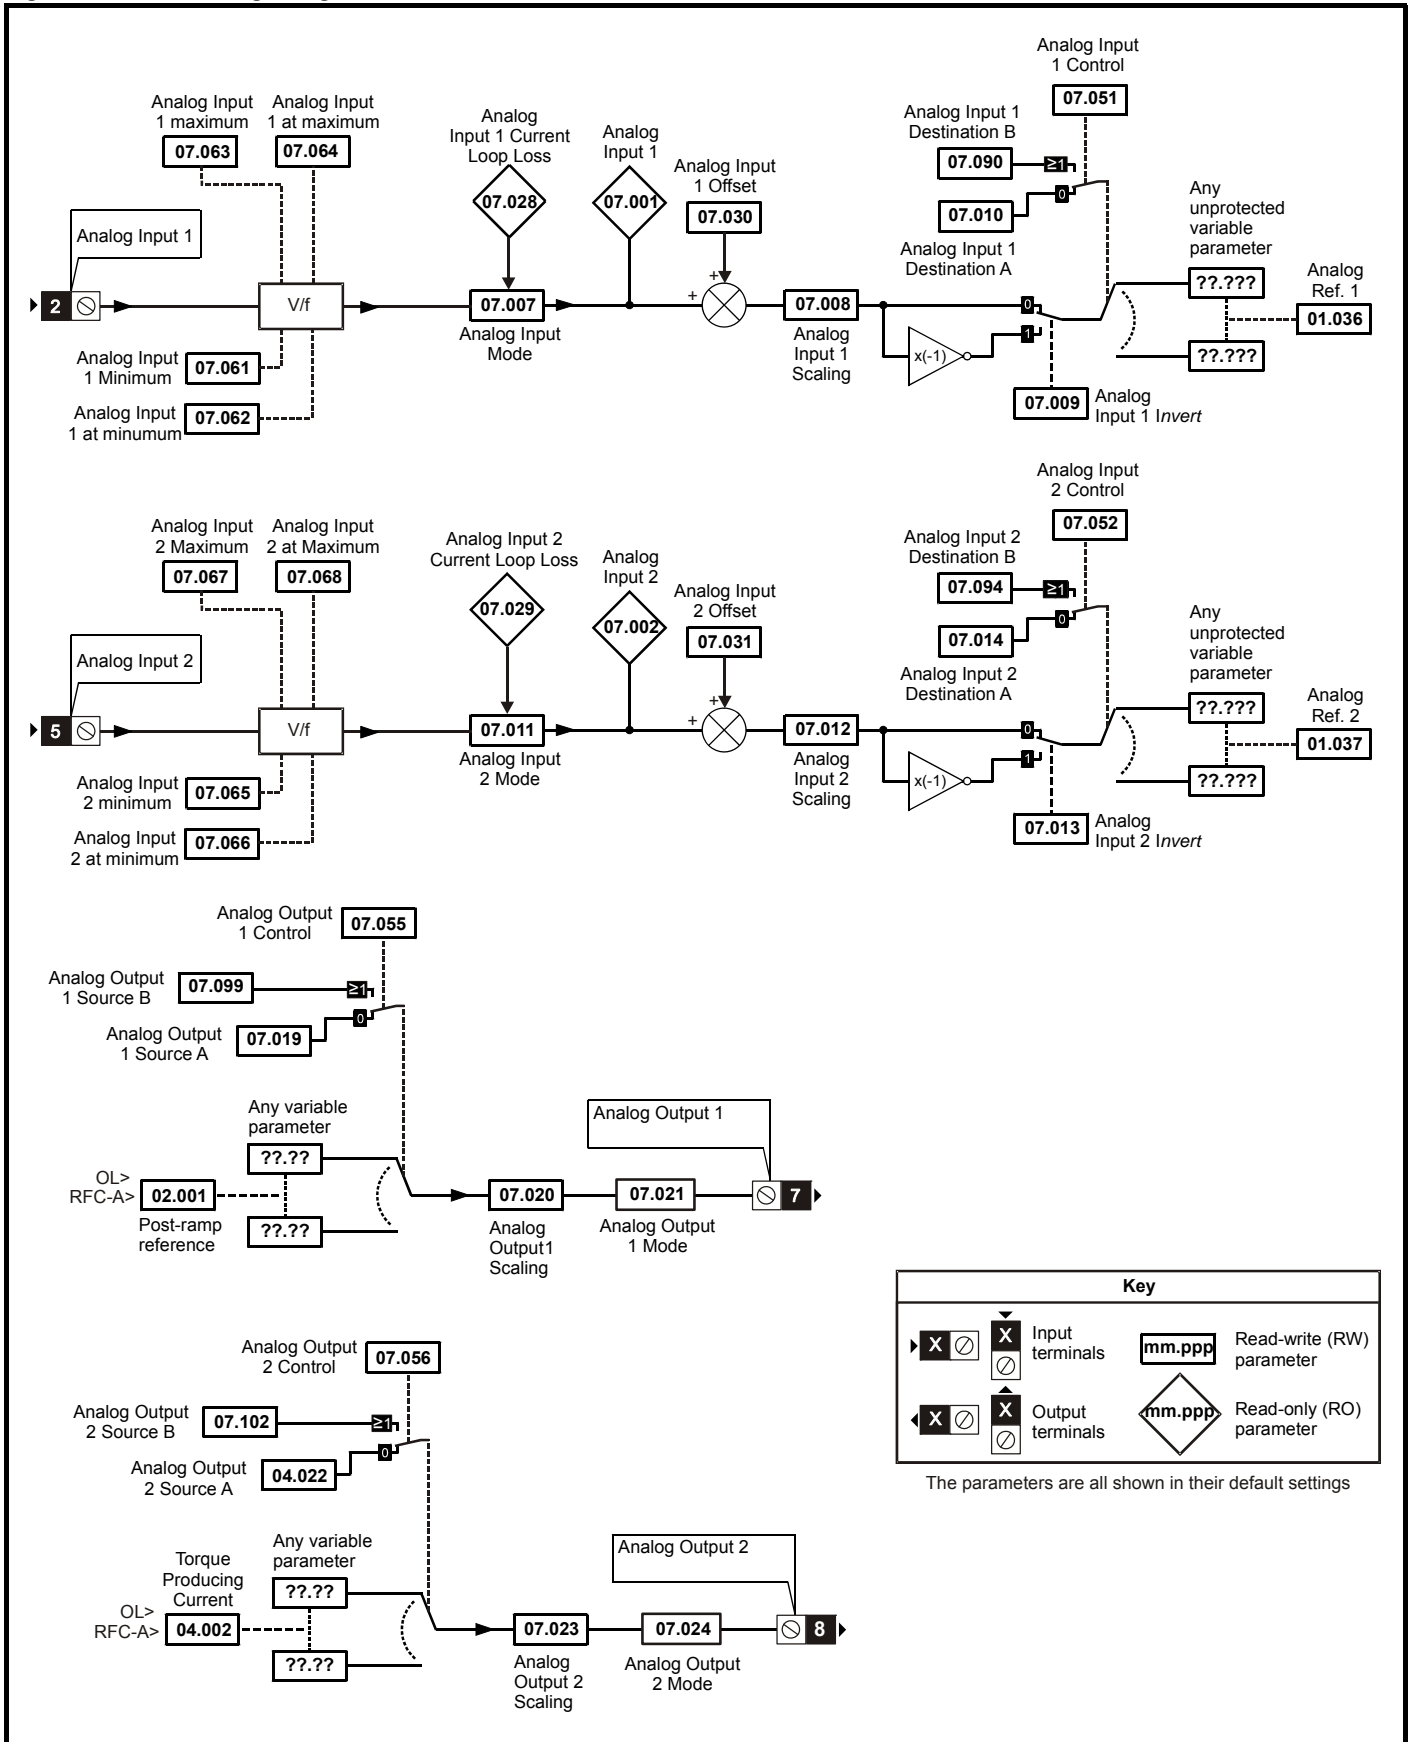Figure 11-10 Menu 7 logic diagram




Parameter		Range (⇅)		Default (⇒)		Type						
		OL	RFC-A	OL	RFC-A							
07.001	Analogue Input 1	±100.00 %				RO	Num	ND	NC	PT	FI	
07.002	Analogue Input 2	0.00 to 100.00 %				RO	Num	ND	NC	PT	FI	
07.004	Stack Temperature	±250 °C				RO	Num	ND	NC	PT		
07.005	Auxiliary Temperature	±250 °C				RO	Num	ND	NC	PT		
07.007	Analogue Input 1 Mode	4-20mA Stop (-6), 20-4mA Stop (-5), 4-20mA Low (-4), 20-4mA Low (-3), 4-20mA Hold (-2), 20-4mA Hold (-1), 0-20mA (0), 20-0mA (1), 4-20mA Trp (2), 20-4mA Trp (3), 4-20mA (4), 20-4mA (5), Voltage (6)		Voltage (6)		RW	Txt					US
07.008	Analogue Input 1 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.009	Analogue Input 1 Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
07.010	Analogue Input 1 Destination A	0.000 to 30.999		1.036		RW	Num	DE		PT		US
07.011	Analogue Input 2 Mode	4-20mA Stop (-6), 20-4mA Stop (-5), 4-20mA Low (-4), 20-4mA Low (-3), 4-20mA Hold (-2), 20-4mA Hold (-1), 0-20mA (0), 20-0mA (1), 4-20mA Trp (2), 20-4mA Trp (3), 4-20mA (4), 20-4mA (5), Voltage (6), Digital (7)		Voltage (6)		RW	Txt					US
07.012	Analogue Input 2 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.013	Analogue Input 2 Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
07.014	Analogue Input 2 Destination A	0.000 to 30.999		1.037		RW	Num	DE		PT		US
07.019	Analogue Output 1 Source A	0.000 to 30.999		2.001		RW	Num			PT		US
07.020	Analogue Output 1 Scaling	0.000 to 40.000		1.000		RW	Num					US
07.021	Analogue Output 1 Mode	Voltage (0), 0-20mA (1), 4-20mA (2), Digital (3)		Voltage (0)		RW	Txt					US
07.022	Analogue Output 2 Source A	0.000 to 30.999		4.002		RW	Num			PT		US
07.023	Analogue Output 2 Scaling	0.000 to 40.000		1.000		RW	Num					US
07.024	Analogue Output 2 Mode	Voltage (0), 0-20mA (1), 4-20mA (2), Digital (3)		Voltage (0)		RW	Txt					US
07.026	Analog Input 1 Preset on Current Loss	4.00 to 20.00		4.00		RW	Num					US
07.027	Analog Input 2 Preset on Current Loss	4.00 to 20.00		4.00		RW	Num					US
07.028	Analogue Input 1 Current Loop Loss	Off (0) or On (1)				RO	Bit	ND	NC	PT		
07.029	Analogue Input 2 Current Loop Loss	Off (0) or On (1)				RO	Bit	ND	NC	PT		
07.030	Analogue Input 1 Offset	±100.00 %		0.00 %		RW	Num					US
07.031	Analogue Input 2 Offset	±100.00 %		0.00 %		RW	Num					US
07.034	Inverter Temperature	±250 °C				RO	Num	ND	NC	PT		
07.035	Percentage Of d.c. Link Thermal Trip Level	0 to 100 %				RO	Num	ND	NC	PT		
07.036	Percentage Of Drive Thermal Trip Level	0 to 100 %				RO	Num	ND	NC	PT		
07.037	Temperature Nearest To Trip Level	0 to 29999				RO	Num	ND	NC	PT		
07.046	Thermistor Type	DIN44081 (0), KTY84 (1), PT1000 (2), PT2000 (3), Other (4)		DIN44081 (0)		RW	Txt					US
07.047	Thermistor Feedback	0 to 4000 Ω				RO	Num	ND	NC	PT	FI	
07.048	Thermistor Trip Threshold	0 to 4000 Ω		3300 Ω		RW	Num					US
07.049	Thermistor Reset Threshold	0 to 4000 Ω		1800 Ω		RW	Num					US
07.050	Thermistor Temperature	-50 to 300 °C				RO	Num	ND	NC	PT	FI	
07.051	Analogue Input 1 Control	0 to 5		0		RW	Num					US
07.052	Analogue Input 2 Control	0 to 5		0		RW	Num					US

Parameter		Range (⇅)		Default (⇒)		Type							
		OL	RFC-A	OL	RFC-A								
07.055	Analogue Output 1 Control	0 to 15		0		RW	Num						US
07.056	Analogue Output 2 Control	0 to 15		0		RW	Num						US
07.061	Analogue Input 1 Minimum Reference	±100.00 %		-100.00 %		RW	Num						US
07.062	Analogue Input 1 At Minimum Reference	±100.00 %		-100.00 %		RW	Num						US
07.063	Analogue Input 1 Maximum Reference	±100.00 %		100.00 %		RW	Num						US
07.064	Analogue Input 1 At Maximum Reference	±100.00 %		100.00 %		RW	Num						US
07.065	Analogue Input 2 Minimum Reference	0.00 to 100.00 %		0.00 %		RW	Num						US
07.066	Analogue Input 2 At Minimum Reference	±100.00 %		0.00 %		RW	Num						US
07.067	Analogue Input 2 Maximum Reference	0.00 to 100.00 %		100.00 %		RW	Num						US
07.068	Analogue Input 2 At Maximum Reference	±100.00 %		100.00 %		RW	Num						US
07.090	Analogue Input 1 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
07.094	Analogue Input 2 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
07.099	Analogue Output 1 Source B	0.000 to 30.999		0.000		RO	Num					PT	US
07.102	Analogue Output 2 Source B	0.000 to 30.999		0.000		RO	Num					PT	US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.8 Menu 8: Digital I/O

Figure 11-11 Menu 8 logic diagram

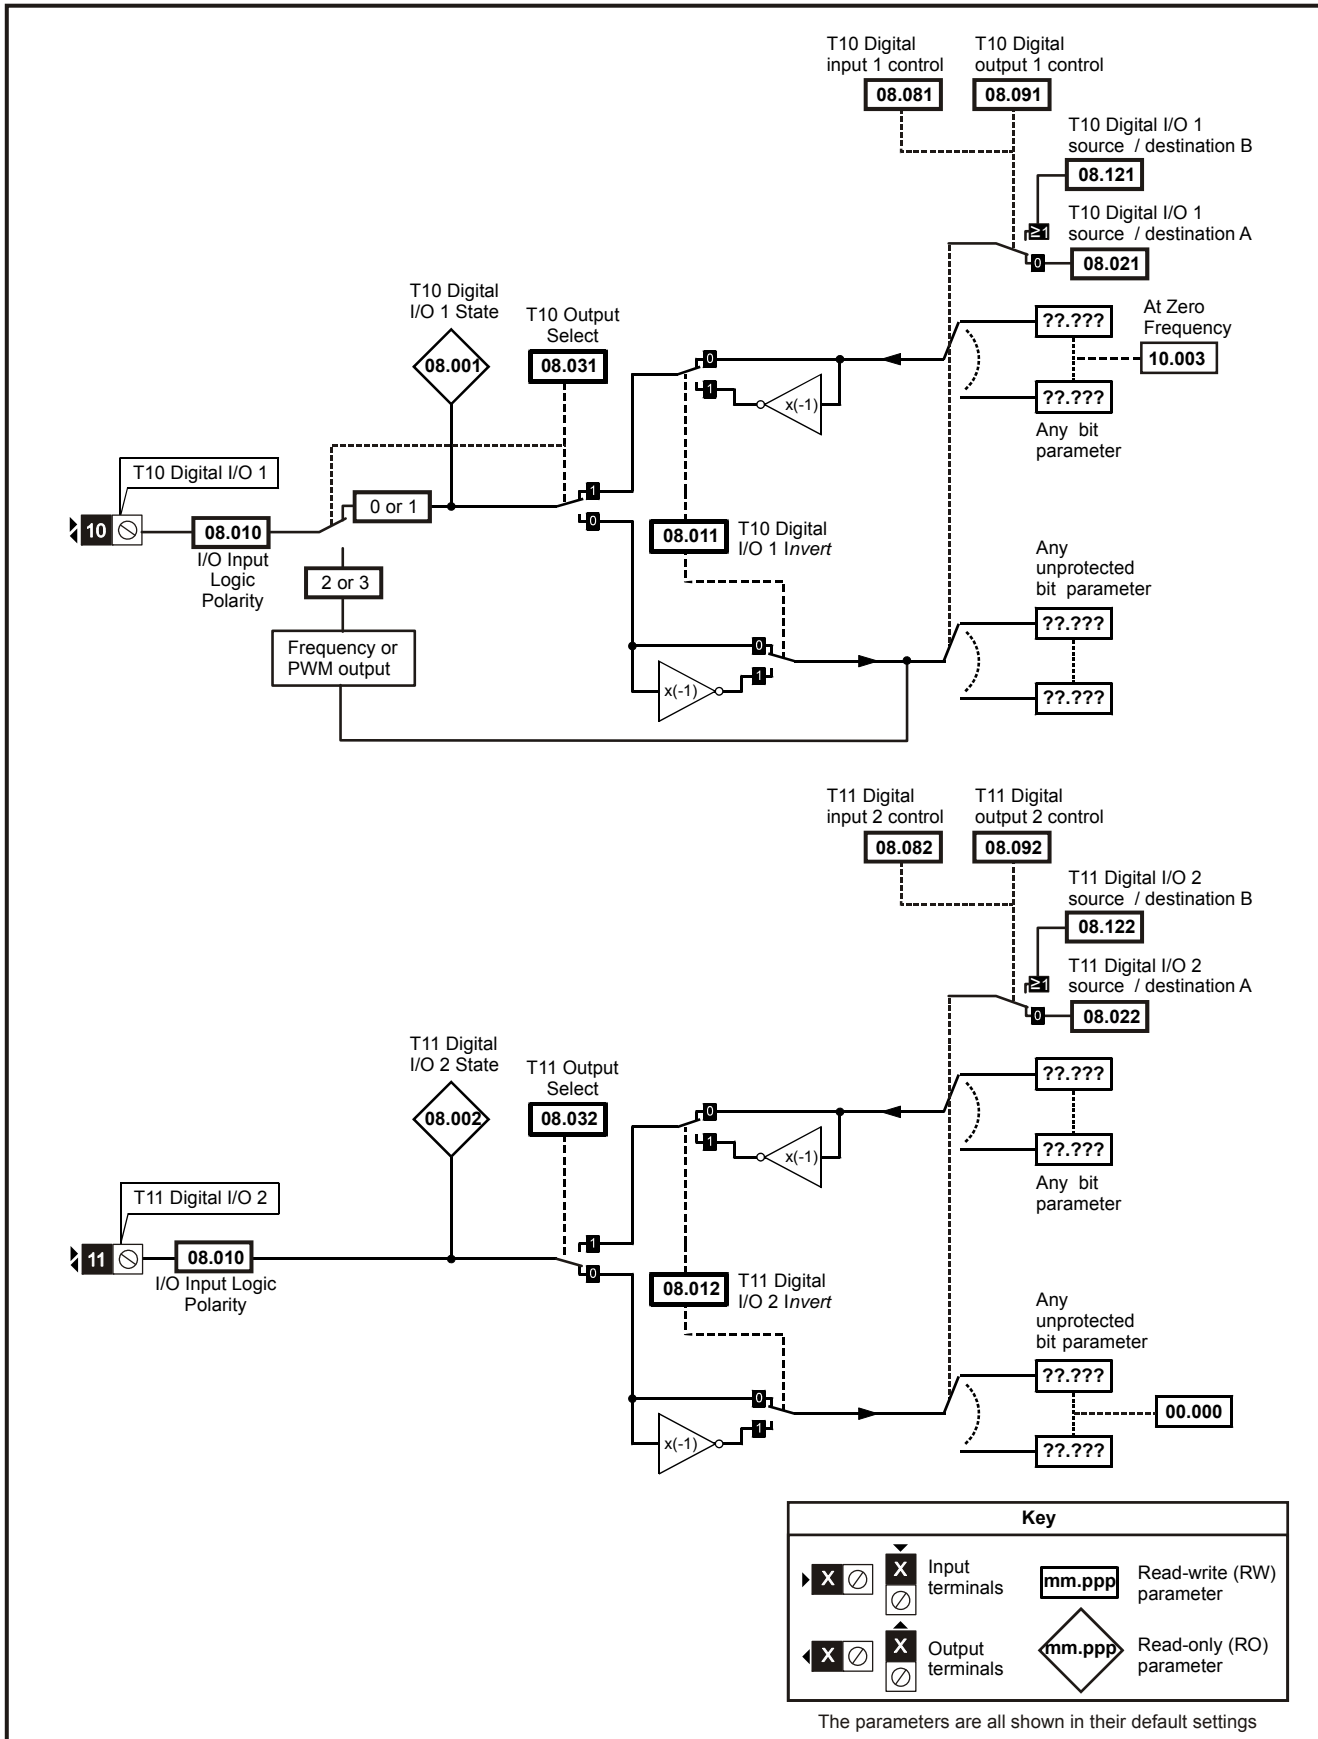

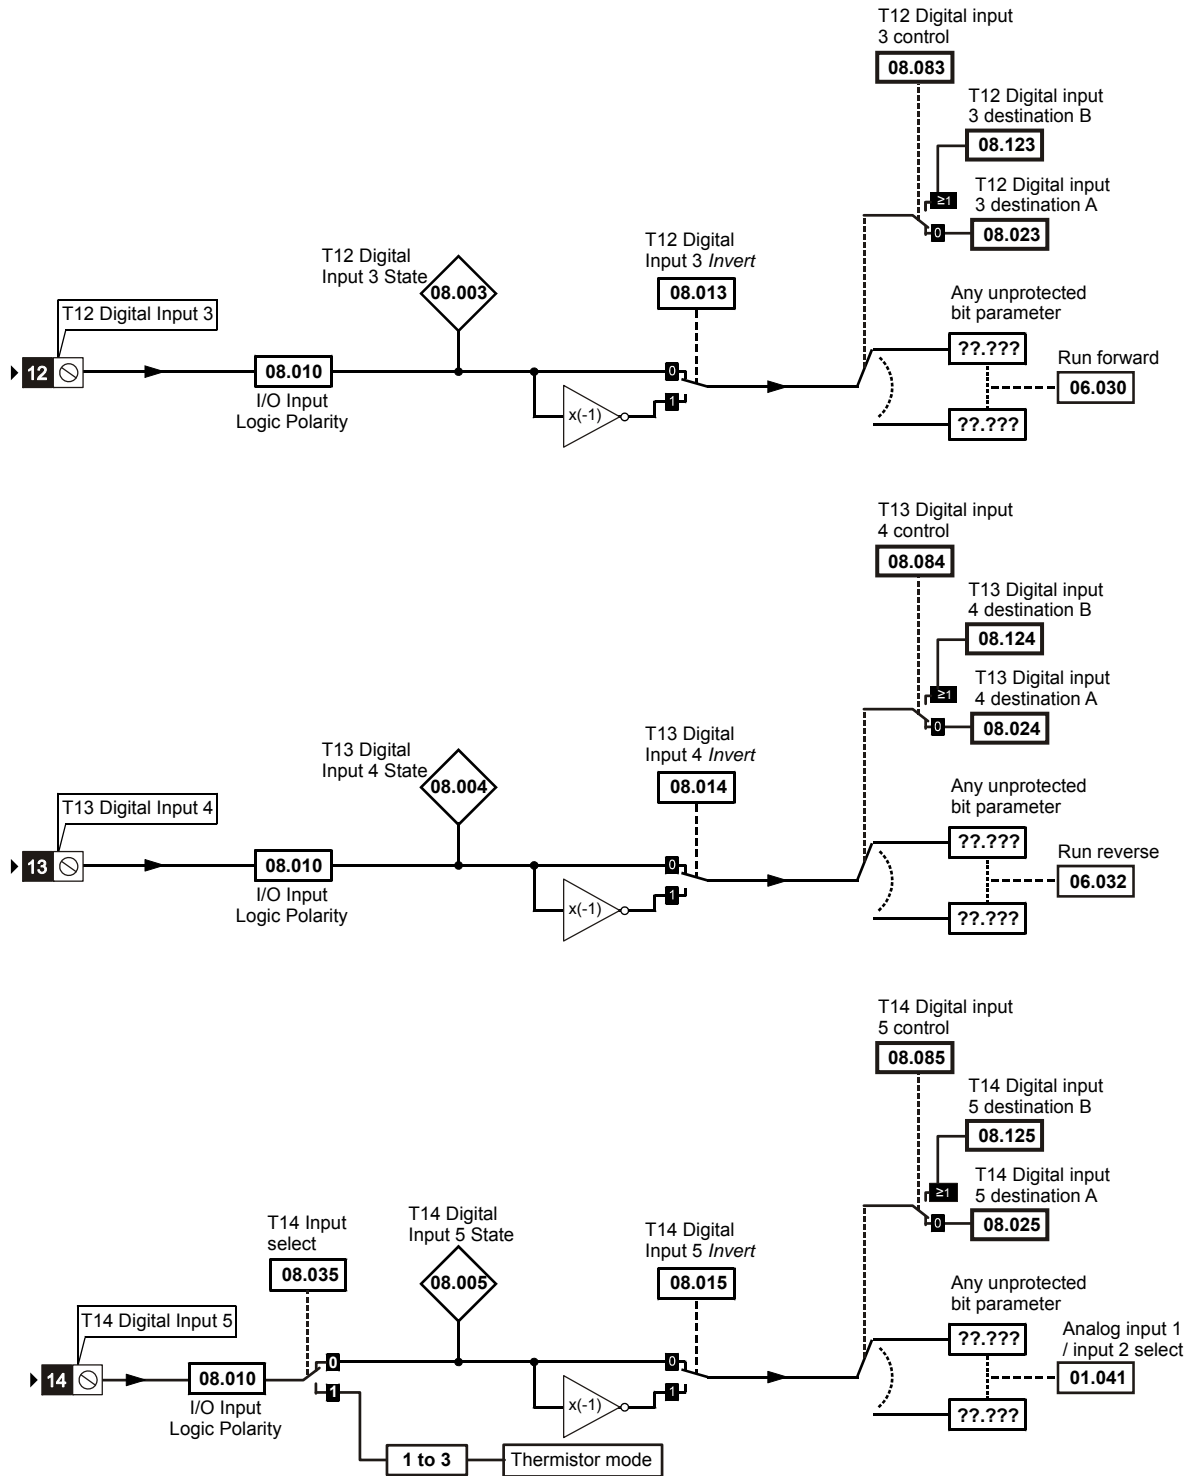


Figure 11-12 Menu 8 Logic Diagram

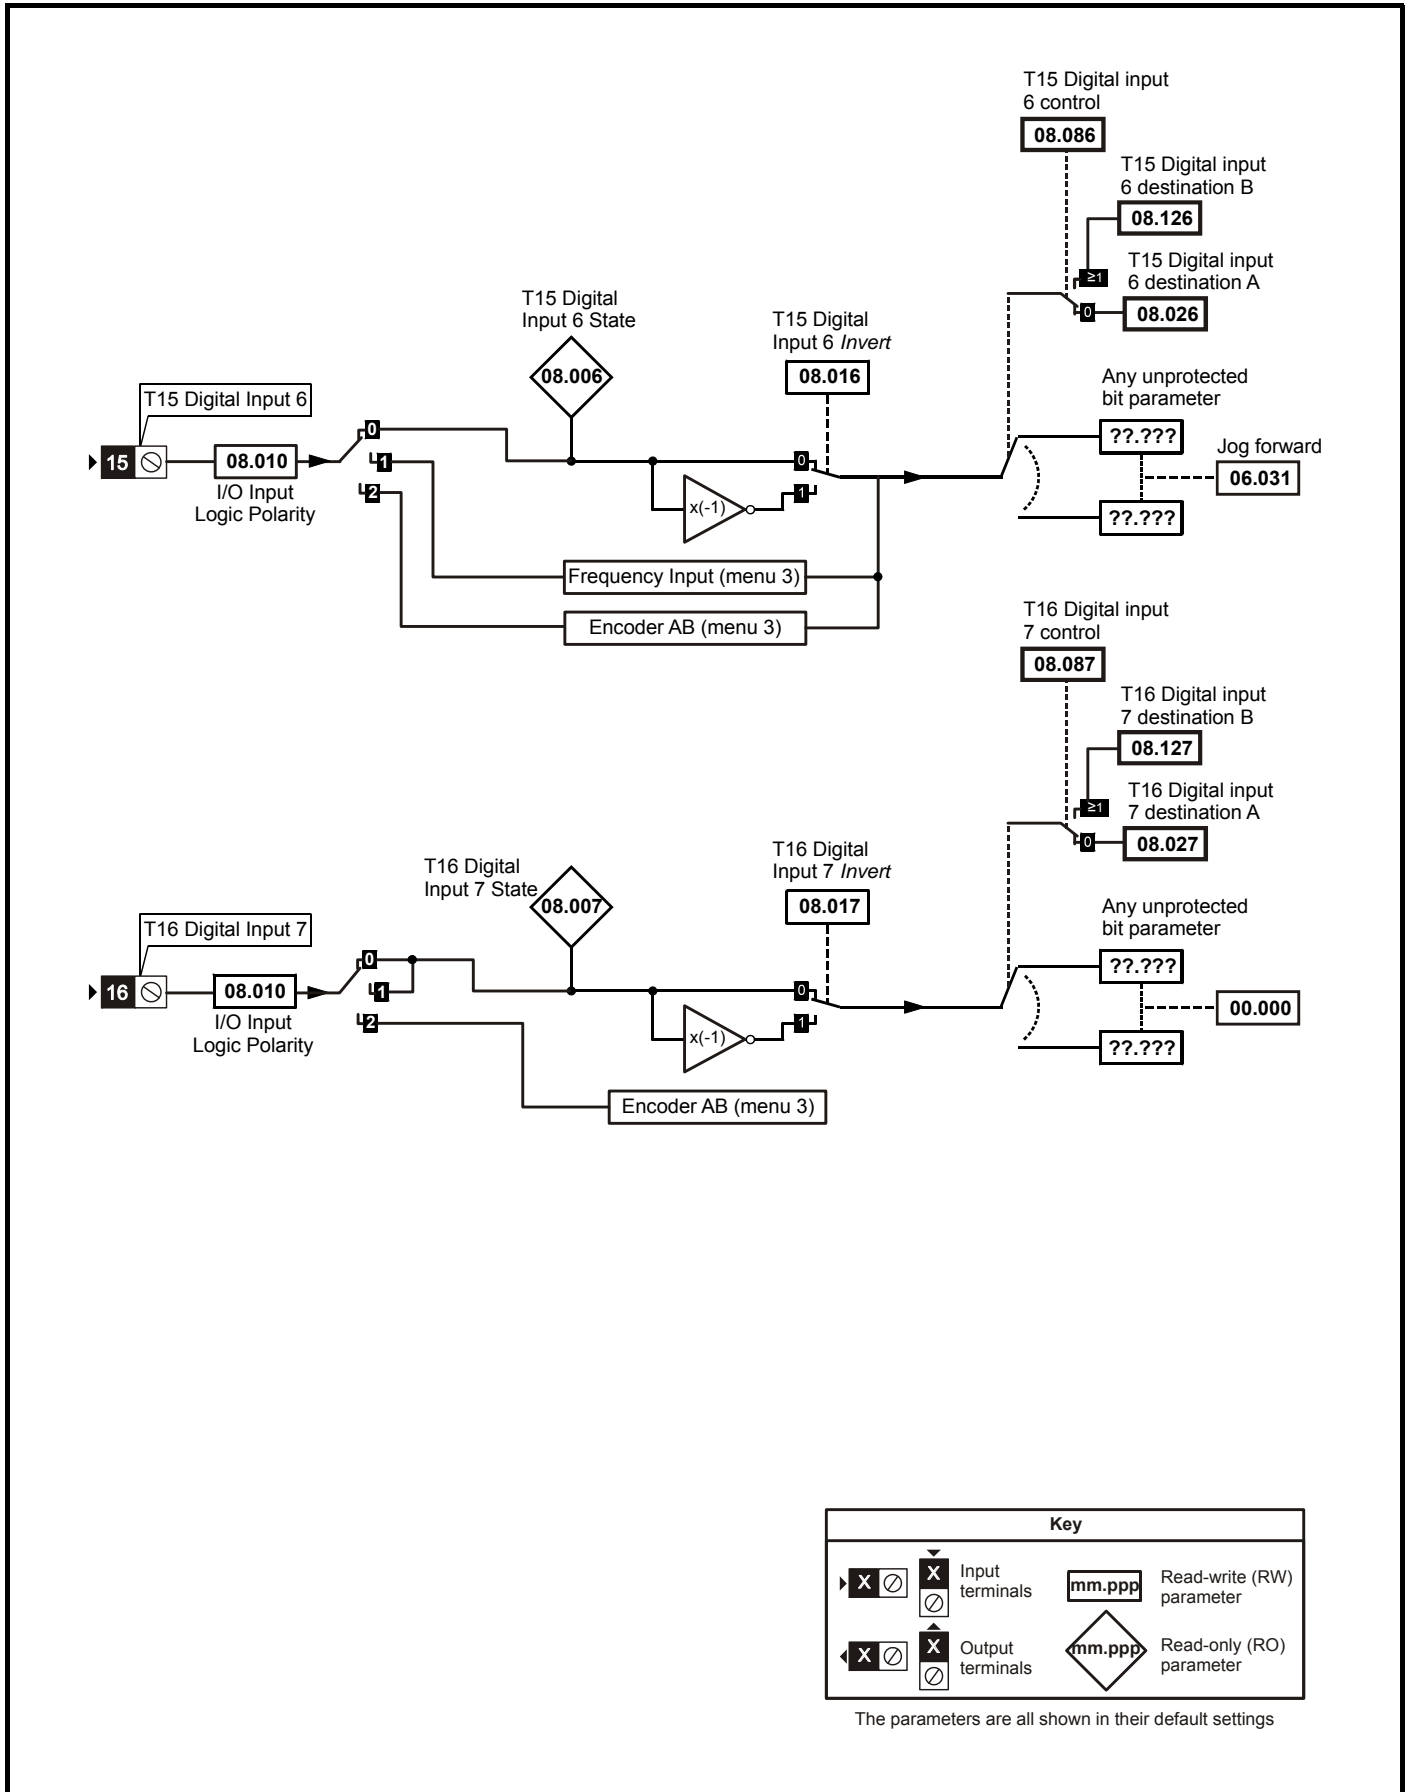


Figure 11-13 Menu 8 logic (cont)

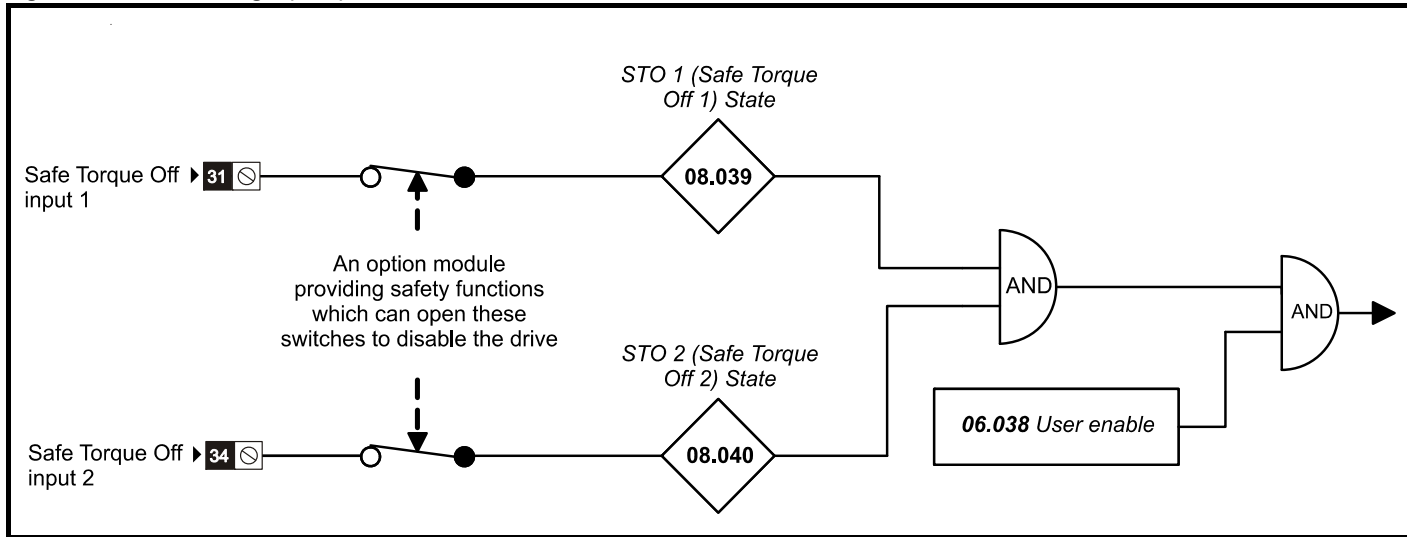


Figure 11-14 Menu 8 logic (cont)


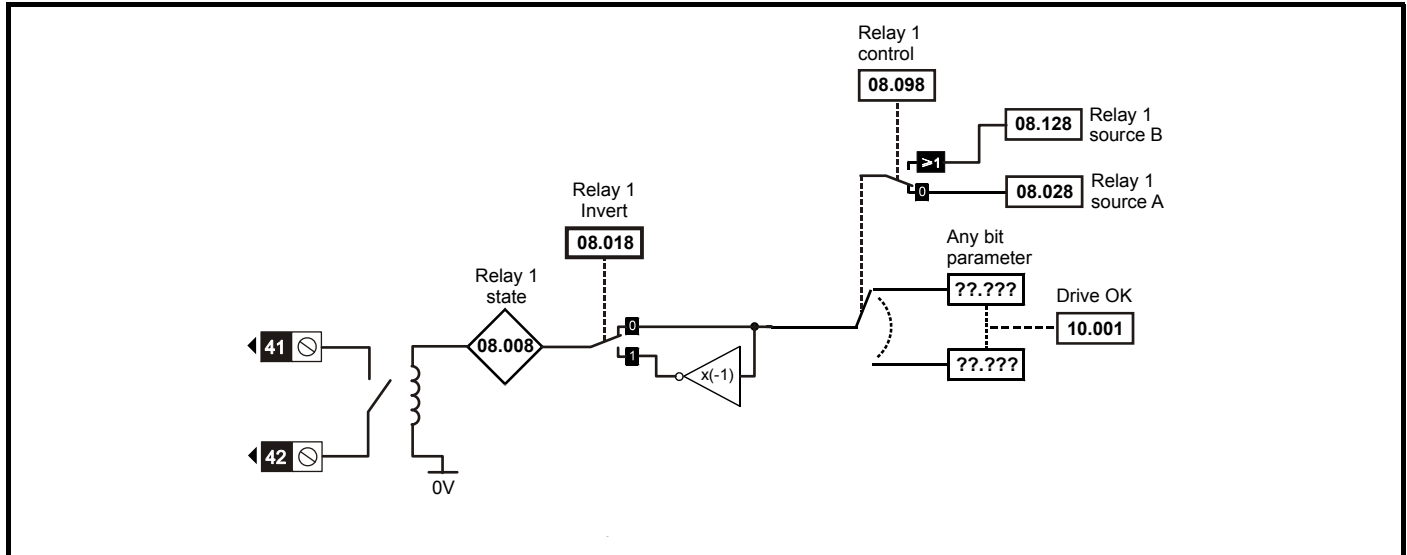


Figure 11-15 Menu 8 logic (cont)

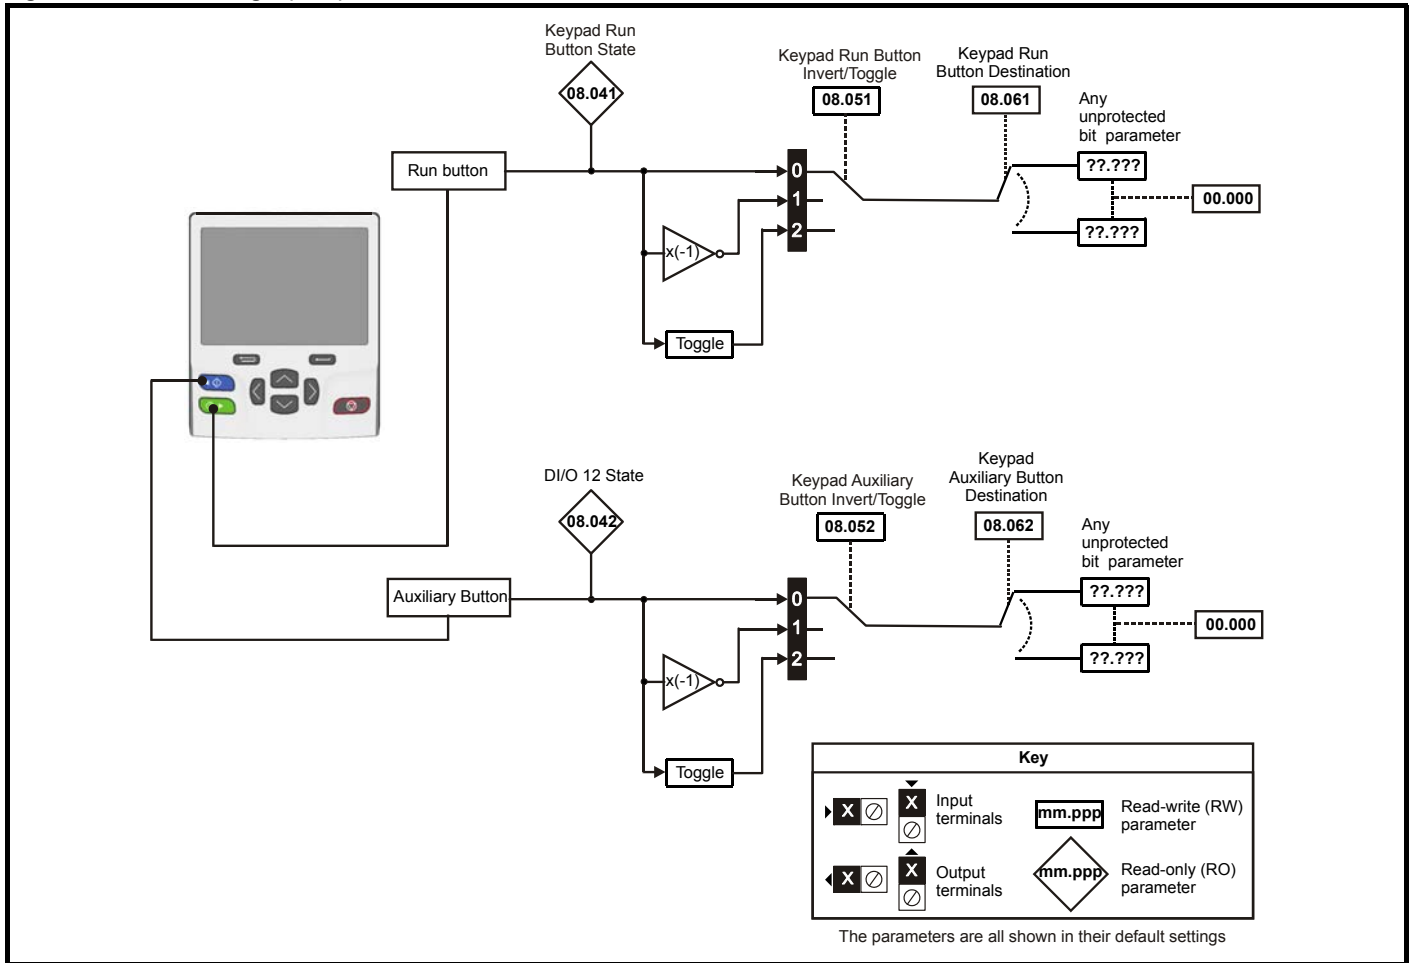

Parameter		Range (⇅)		Default (⇒)		Type							
		OL	RFC-A	OL	RFC-A								
08.001	Digital I/O 1 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.002	Digital I/O 2 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.003	Digital Input 3 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.004	Digital Input 4 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.005	Digital Input 5 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.006	Digital Input 6 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.007	Digital Input 7 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.008	Relay 1 Output State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.009	Relay 2 Output State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.010	Input Logic Polarity	Negative Logic (0), Positive Logic (1)		Positive Logic (1)		RW	Txt						US
08.011	Digital I/O 1 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.012	Digital I/O 2 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.013	Digital Input 3 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.014	Digital Input 4 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.015	Digital Input 5 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.016	Digital Input 6 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.017	Digital Input 7 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.018	Relay 1 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.019	Relay 2 Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.020	Digital I/O Read Word	0 to 2048				RO	Num	ND	NC	PT			
08.021	Digital IO1 Source/Destination A	0.000 to 30.999		10.003		RW	Num	DE			PT		US
08.022	Digital IO2 Source/Destination A	0.000 to 30.999		0.000		RW	Num	DE			PT		US
08.023	Digital Input 03 Destination A	0.000 to 30.999		6.030		RW	Num	DE			PT		US
08.024	Digital Input 04 Destination A	0.000 to 30.999		6.032		RW	Num	DE			PT		US
08.025	Digital Input 05 Destination A	0.000 to 30.999		1.041		RW	Num	DE			PT		US
08.026	Digital Input 06 Destination A	0.000 to 30.999		6.031		RW	Num	DE			PT		US
08.027	Digital Input 07 Destination A	0.000 to 30.999		0.000		RW	Num	DE			PT		US
08.028	Relay 1 Output Source A	0.000 to 30.999		10.001		RW	Num				PT		US
08.029	Relay 2 Output Source A	0.000 to 30.999		0.000		RW	Num				PT		US
08.031	Digital I/O 01 Output Select	Input (0), Output (1), Frequency output (2), PWM output (3)		Output (1)		RW	Txt						US
08.032	Digital I/O 02 Output Select	Input (0), Output (1)		Input (0)		RW	Txt						US
08.035	Digital 5 Input Select	Input (0), Therm Short Cct (1), Thermistor (2), Therm No Trip (3)		Input (0)		RW	Txt						US
08.036	Digital 6/7 Input Select	Digital Input (0), Frequency (1), Encoder AB (2)		Digital Input (0)		RW	Txt						US
08.039	STO Input 01 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.040	STO Input 02 State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.041	Keypad Run Button State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.042	Keypad Auxiliary Button State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.043	24V Supply Input State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.044	Keypad Stop Button State	Off (0) or On (1)				RO	Bit	ND	NC	PT			
08.051	Keypad Run Button Invert/Toggle	Not Invert (0), Invert (1), Toggle (2)		Not Invert (0)		RW	Txt						US
08.052	Keypad Auxiliary Button Invert/Toggle	Not Invert (0), Invert (1), Toggle (2)		Not Invert (0)		RW	Txt						US
08.053	24V Supply Input Invert	Not Invert (0), Invert (1)		Not Invert (0)		RW	Txt						US
08.061	Keypad Run Button Destination	0.000 to 30.999		0.000		RW	Num	DE			PT		US
08.062	Keypad Auxiliary Button Destination	0.000 to 30.999		0.000		RW	Num	DE			PT		US
08.063	24V Supply Input Destination	0.000 to 30.999		0.000		RW	Num	DE			PT		US
08.081	DI1 Control	0 to 26		0		RW	Num						US
08.082	DI2 Control	0 to 26		0		RW	Num						US
08.083	DI3 Control	0 to 26		0		RW	Num						US
08.084	DI4 Control	0 to 26		0		RW	Num						US
08.085	DI5 Control	0 to 26		0		RW	Num						US
08.086	DI6 Control	0 to 26		0		RW	Num						US

Parameter		Range (⇅)		Default (⇔)		Type							
		OL	RFC-A	OL	RFC-A								
08.087	DI7 Control	0 to 26		0		RW	Num						US
08.091	DO1 Control	0 to 21		0		RW	Num						US
08.092	DO2 Control	0 to 21		0		RW	Num						US
08.098	Relay 1 Control	0 to 21		0		RW	Num						US
08.099	Relay 2 Control	0 to 21		0		RW	Num						US
08.121	DI/O 01 Source/Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.122	DI/O 02 Source/Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.123	DI 03 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.124	DI 04 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.125	DI 05 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.126	DI 06 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.127	DI 07 Destination B	0.000 to 30.999		0.000		RO	Num	DE				PT	US
08.128	Relay 01 Source B	0.000 to 30.999		0.000		RW	Num					PT	US
08.129	Relay 02 Source B	0.000 to 30.999		0.000		RW	Num					PT	US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
Fl	Filtered	US	User save	PS	Power-down save						

11.9 Menu 9: Programmable logic, motorized pot, binary sum and timers

Figure 11-16 Menu 9 logic diagram: Programmable logic

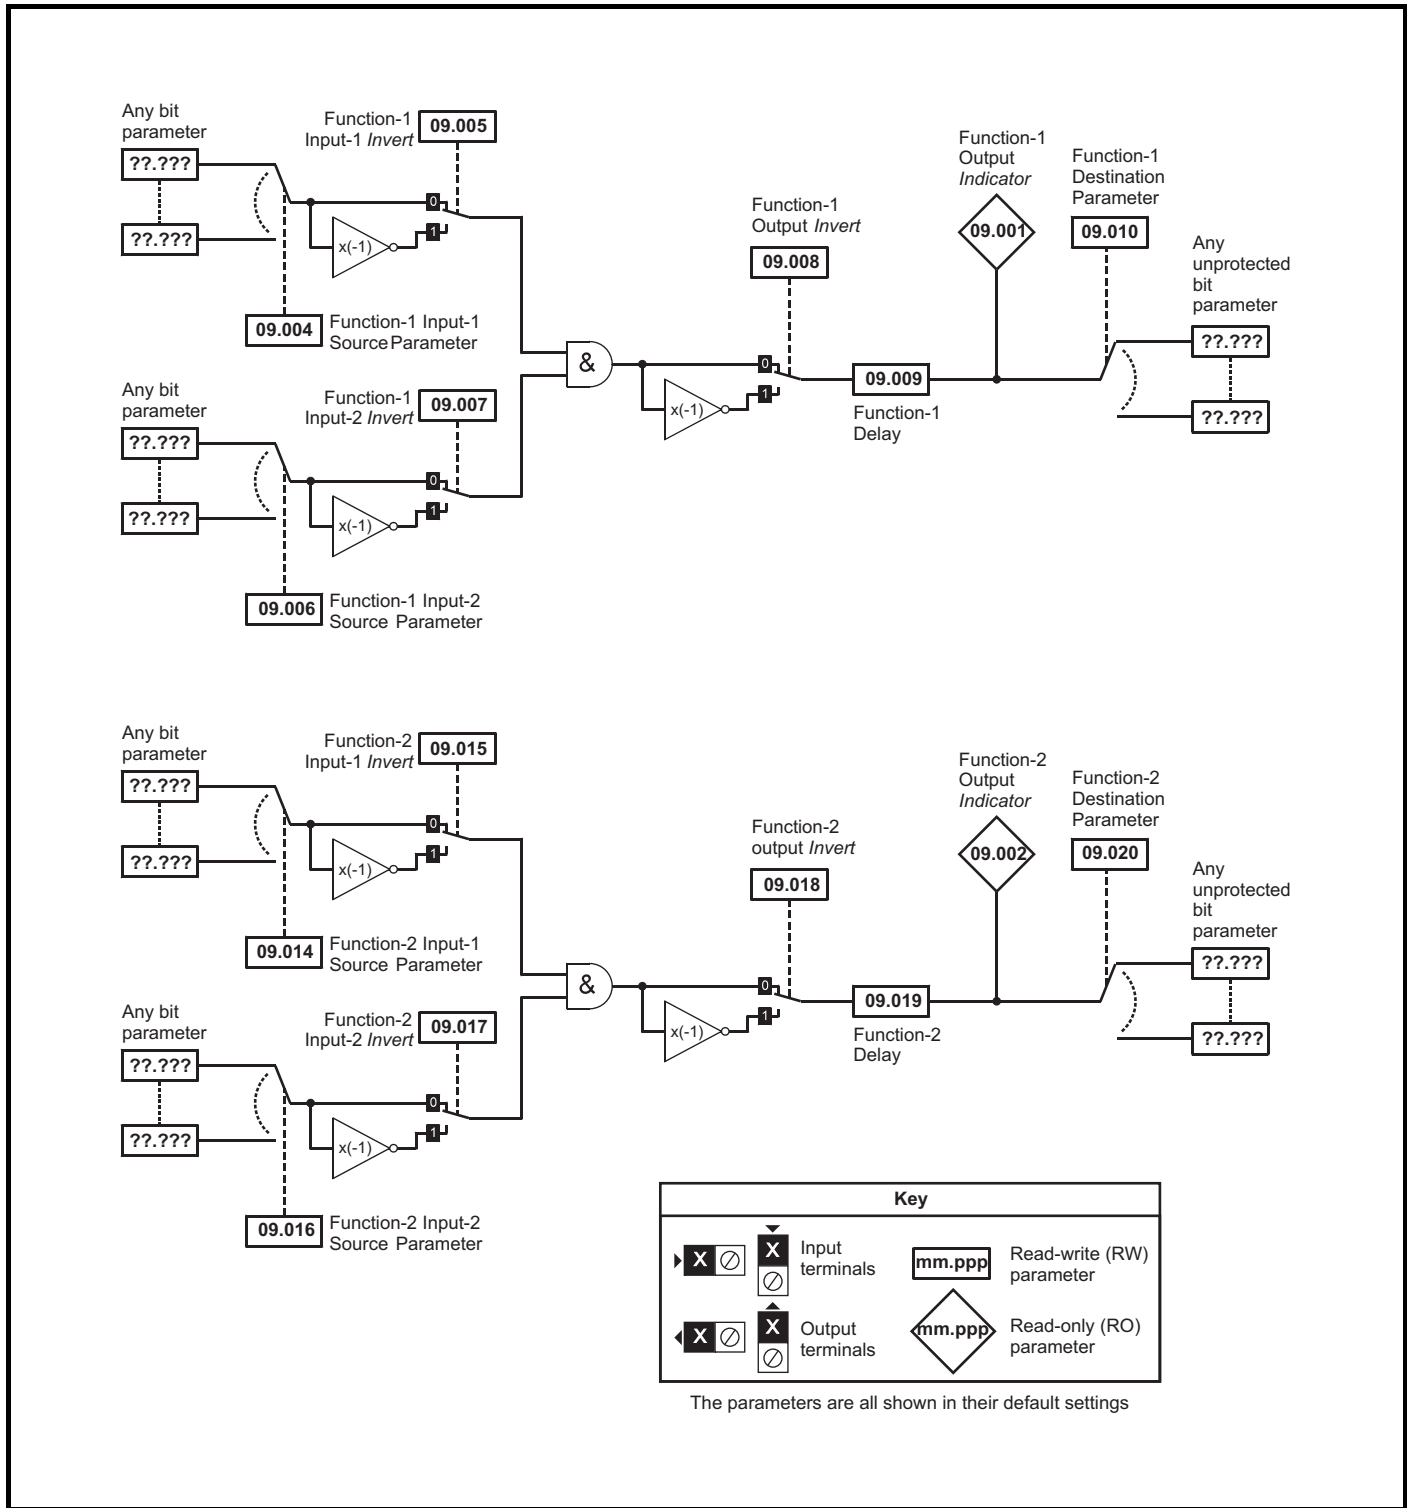


Figure 11-17 Menu 9 logic diagram: Motorized pot and binary sum

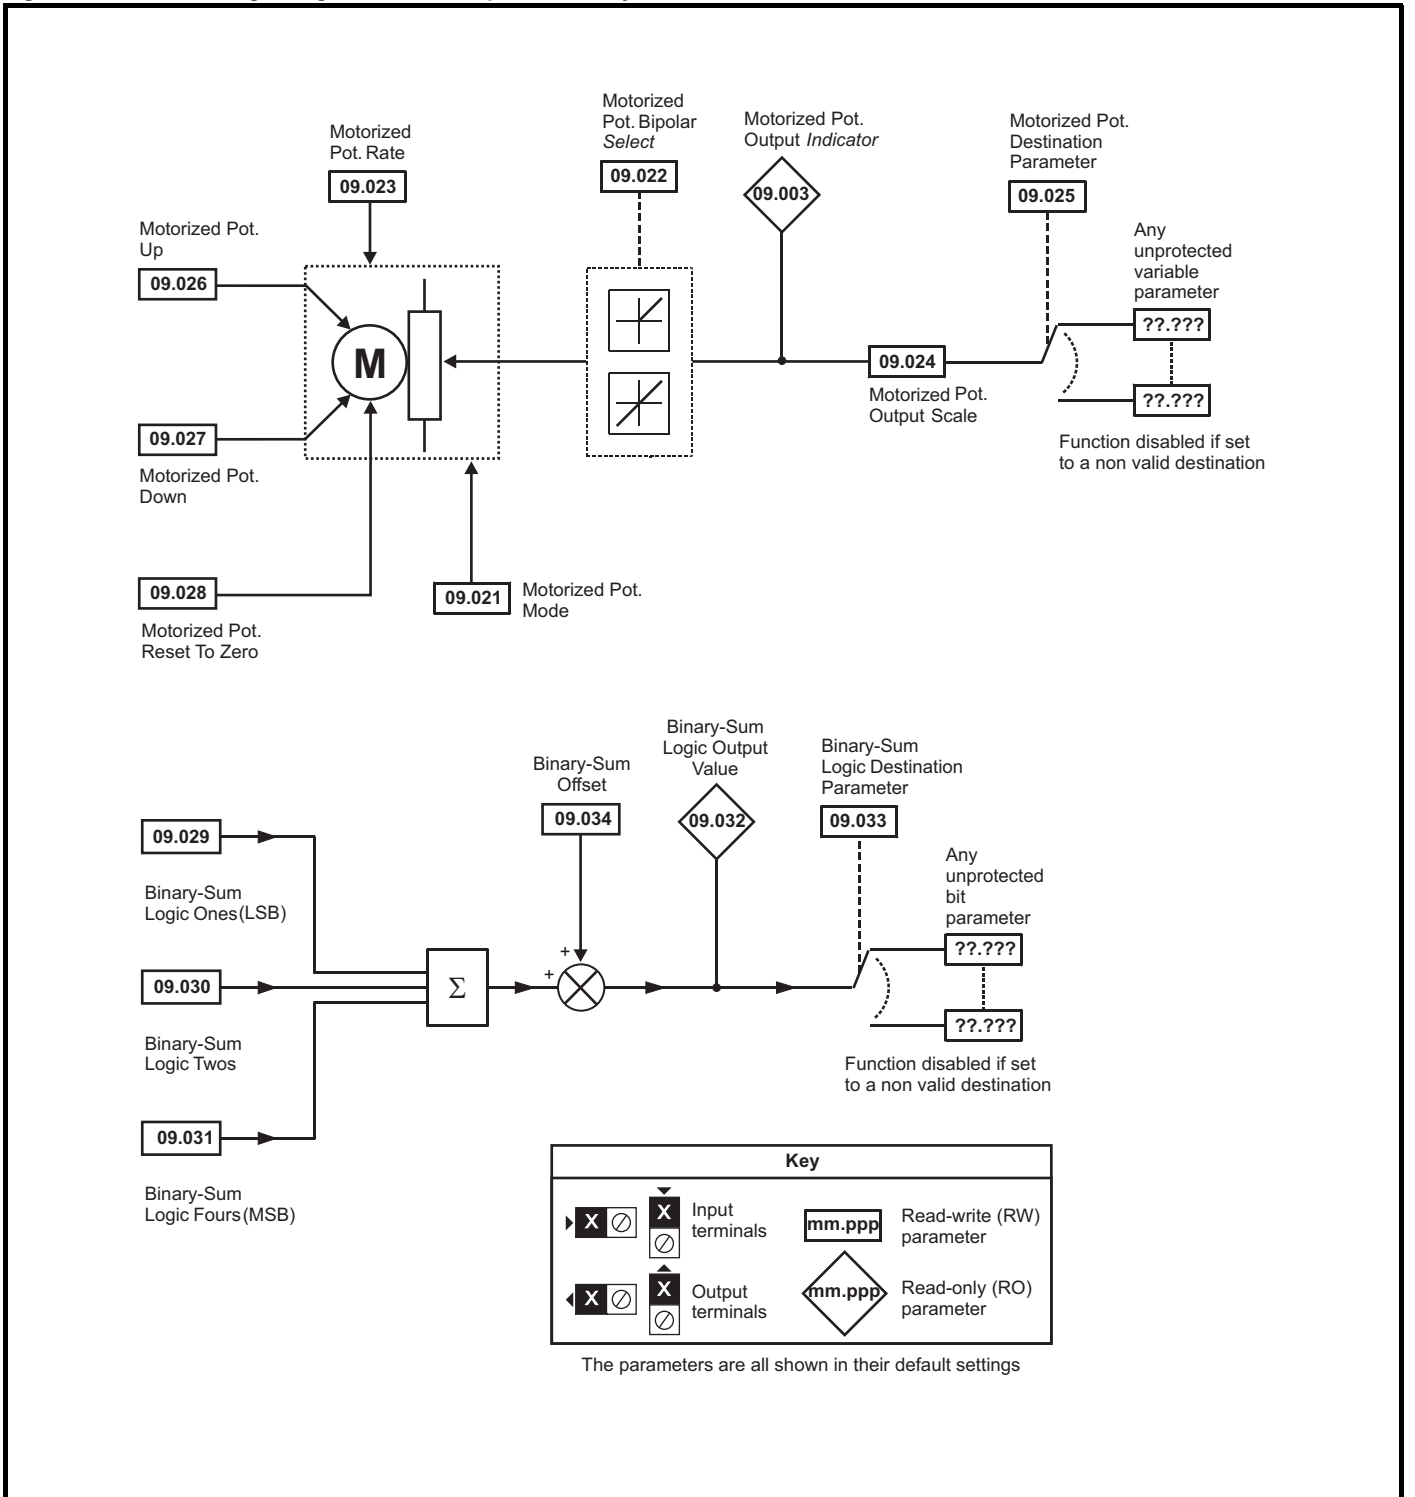


Figure 11-18 Menu 9 logic diagram


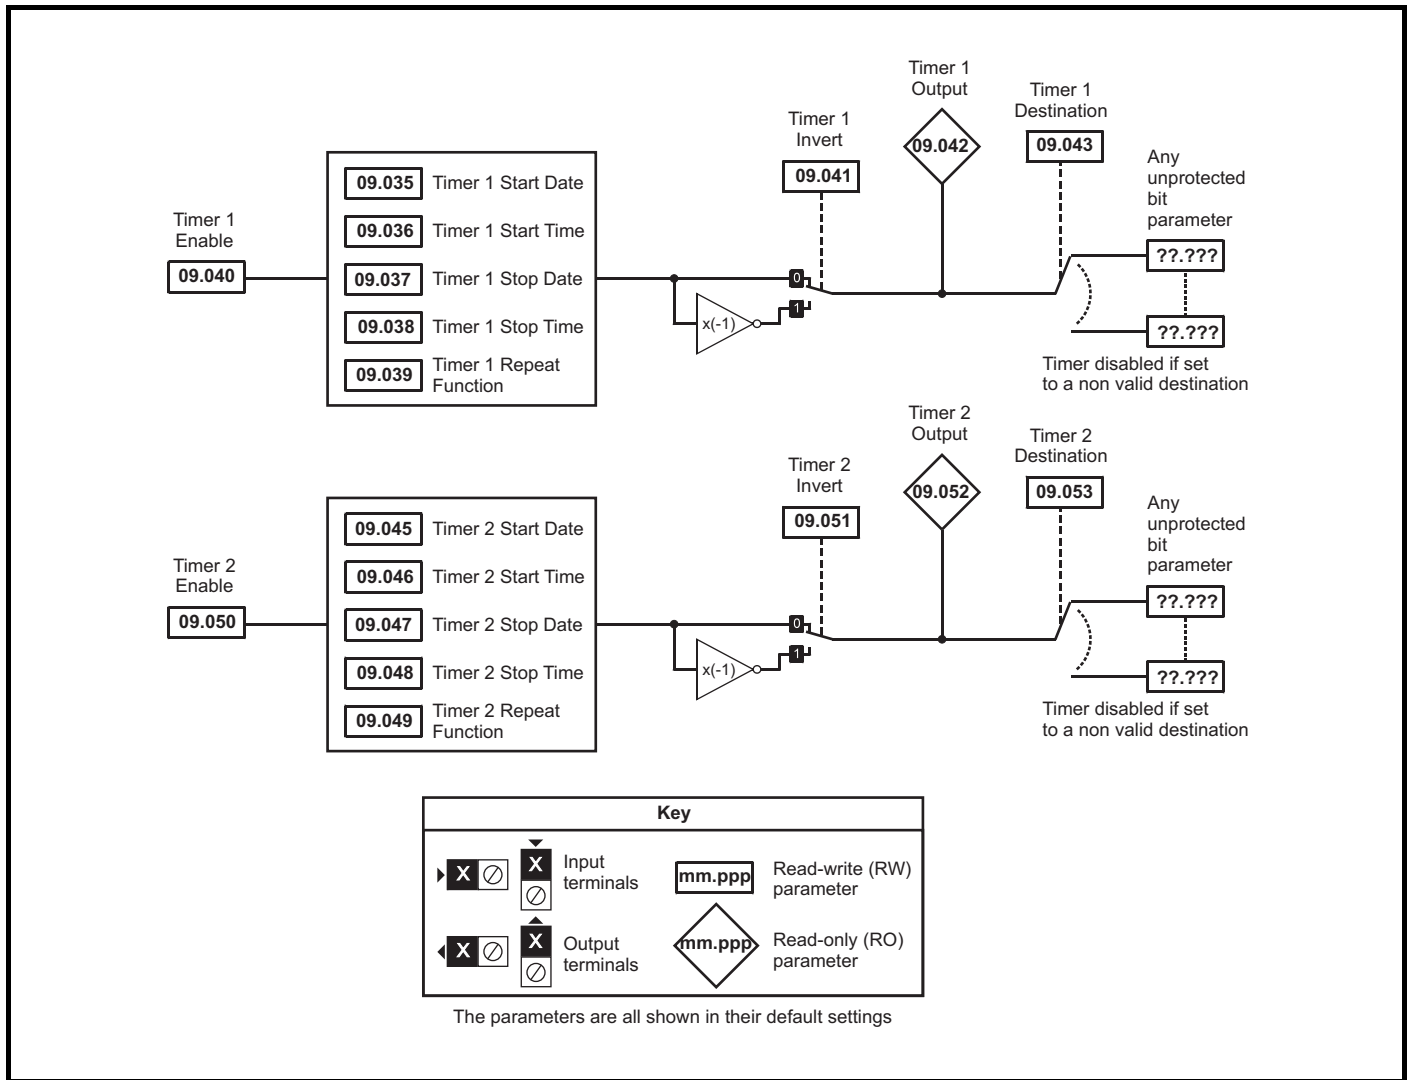


Figure 11-19 Scope function

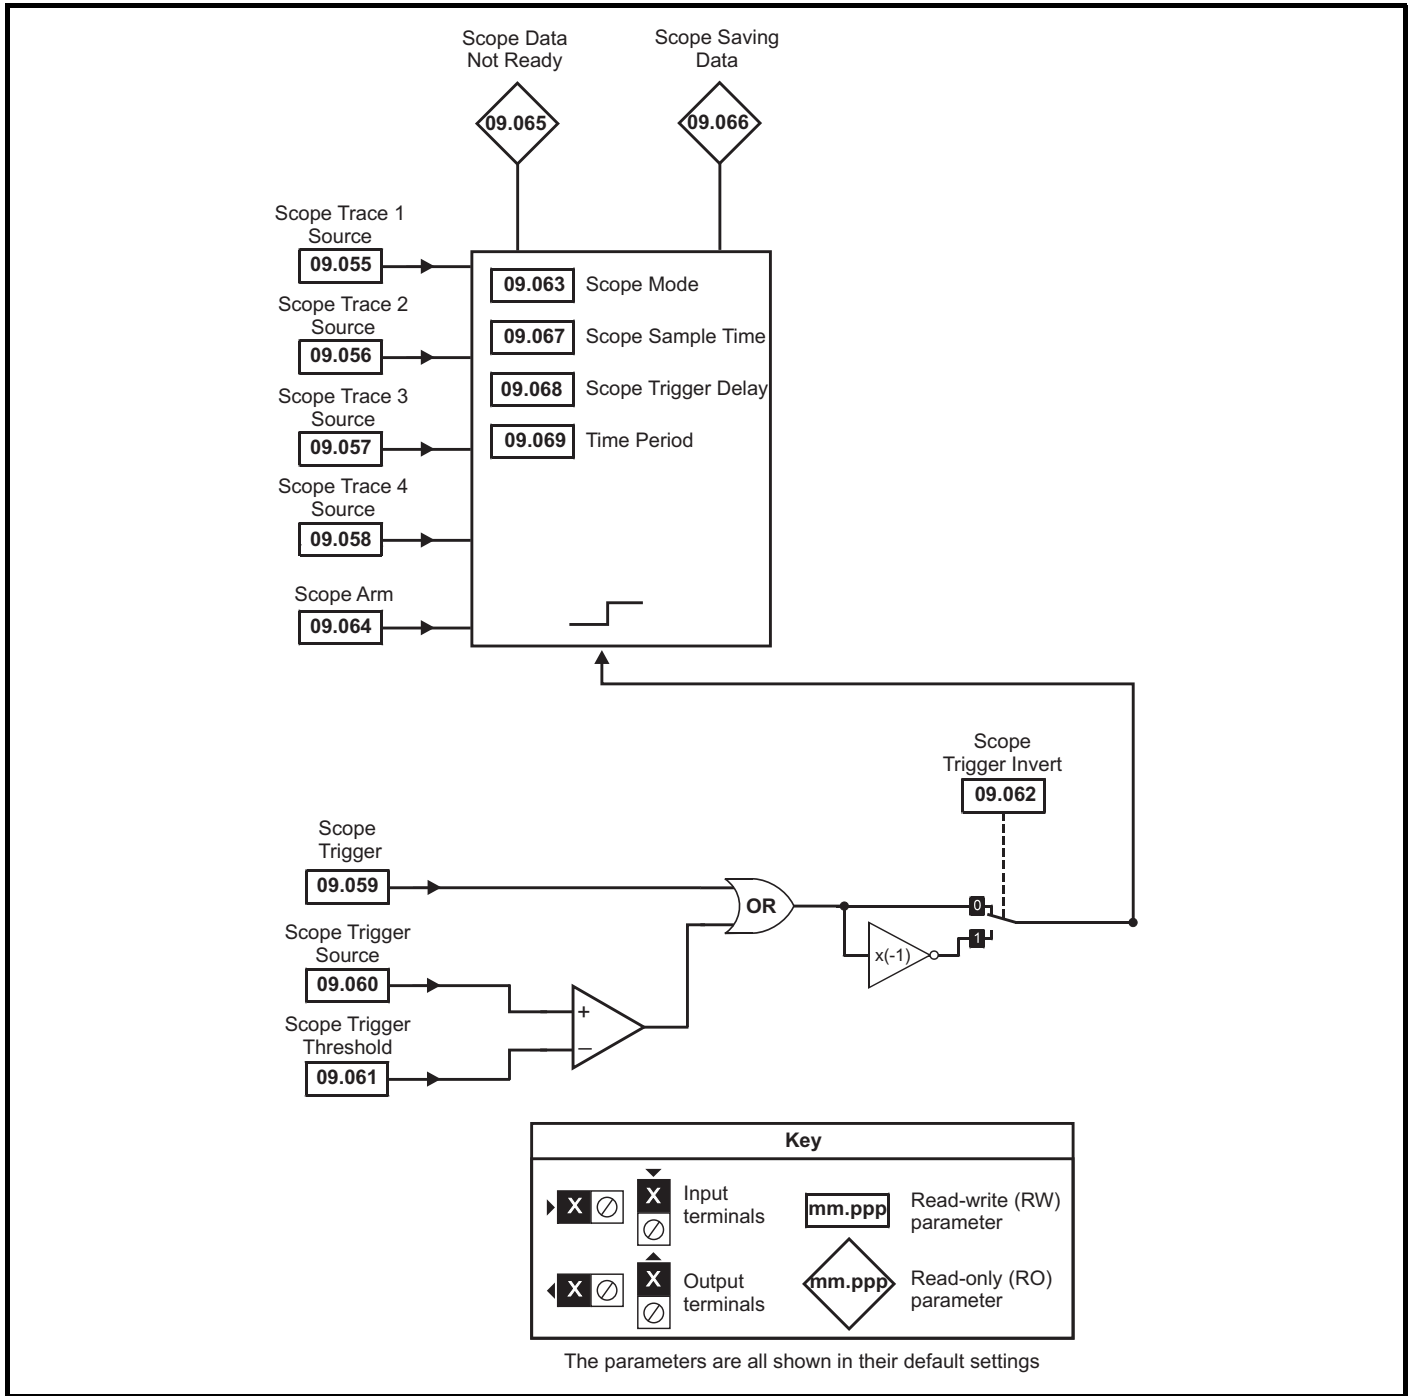

Parameter		Range (⇅)		Default (⇒)		Type						
		OL	RFC-A	OL	RFC-A							
09.001	Logic Function 1 Output	Off (0) or On (1)				RO	Bit	ND	NC	PT		
09.002	Logic Function 2 Output	Off (0) or On (1)				RO	Bit	ND	NC	PT		
09.003	Motorised Pot Output	±100.00 %				RO	Num	ND	NC	PT	PS	
09.004	Logic Function 1 Source 1	0.000 to 30.999		0.000		RW	Num			PT	US	
09.005	Logic Function 1 Source 1 Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.006	Logic Function 1 Source 2	0.000 to 30.999		0.000		RW	Num			PT	US	
09.007	Logic Function 1 Source 2 Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.008	Logic Function 1 Output Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.009	Logic Function 1 Delay	±25.0 s		0.0 s		RW	Num				US	
09.010	Logic Function 1 Destination	0.000 to 30.999		0.000		RW	Num	DE		PT	US	
09.014	Logic Function 2 Source 1	0.000 to 30.999		0.000		RW	Num			PT	US	
09.015	Logic Function 2 Source 1 Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.016	Logic Function 2 Source 2	0.000 to 30.999		0.000		RW	Num			PT	US	
09.017	Logic Function 2 Source 2 Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.018	Logic Function 2 Output Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.019	Logic Function 2 Delay	±25.0 s		0.0 s		RW	Num				US	
09.020	Logic Function 2 Destination	0.000 to 30.999		0.000		RW	Num	DE		PT	US	
09.021	Motorised Pot Mode	0 to 4		0		RW	Num				US	
09.022	Motorised Pot Bipolar Select	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.023	Motorised Pot Rate	0 to 250 s		20 s		RW	Num				US	
09.024	Motorised Pot Scaling	0.000 to 4.000		1.000		RW	Num				US	
09.025	Motorised Pot Destination	0.000 to 30.999		0.000		RW	Num	DE		PT	US	
09.026	Motorised Pot Up	Off (0) or On (1)		Off (0)		RW	Bit		NC			
09.027	Motorised Pot Down	Off (0) or On (1)		Off (0)		RW	Bit		NC			
09.028	Motorised Pot Reset	Off (0) or On (1)		Off (0)		RW	Bit		NC			
09.029	Binary Sum Ones	Off (0) or On (1)		Off (0)		RW	Bit					
09.030	Binary Sum Twos	Off (0) or On (1)		Off (0)		RW	Bit					
09.031	Binary Sum Fours	Off (0) or On (1)		Off (0)		RW	Bit					
09.032	Binary Sum Output	0 to 255				RO	Num	ND	NC	PT		
09.033	Binary Sum Destination	0.000 to 30.999		0.000		RW	Num	DE		PT	US	
09.034	Binary Sum Offset	0 to 248		0		RW	Num				US	
09.035	Timer 1 Start Date	00-00-00 to 31-12-99		00-00-00		RW	Date				US	
09.036	Timer 1 Start Time	00:00:00 to 23:59:59		00:00:00		RW	Time				US	
09.037	Timer 1 Stop Date	00-00-00 to 31-12-99		00-00-00		RW	Date				US	
09.038	Timer 1 Stop Time	00:00:00 to 23:59:59		00:00:00		RW	Time				US	
09.039	Timer 1 Repeat Function	None (0), Hour (1), Day (2), Week (3), Month (4), Year (5), One off (6), Minute (7)		None (0)		RW	Txt				US	
09.040	Timer 1 Enable	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.041	Timer 1 Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.042	Timer 1 Output	Off (0) or On (1)				RO	Bit	ND	NC	PT		
09.043	Timer 1 Destination	0.000 to 30.999		0.000		RW	Num	DE		PT	US	
09.045	Timer 2 Start Date	00-00-00 to 31-12-99		00-00-00		RW	Date				US	
09.046	Timer 2 Start Time	00:00:00 to 23:59:59		00:00:00		RW	Time				US	
09.047	Timer 2 Stop Date	00-00-00 to 31-12-99		00-00-00		RW	Date				US	
09.048	Timer 2 Stop Time	00:00:00 to 23:59:59		00:00:00		RW	Time				US	
09.049	Timer 2 Repeat Function	None (0), Hour (1), Day (2), Week (3), Month (4), Year (5), One off (6), Minute (7)		None (0)		RW	Txt				US	
09.050	Timer 2 Enable	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.051	Timer 2 Invert	Off (0) or On (1)		Off (0)		RW	Bit				US	
09.052	Timer 2 Output	Off (0) or On (1)				RO	Bit	ND	NC	PT		
09.053	Timer 2 Destination	0.000 to 30.999		0.000		RW	Num	DE		PT	US	
09.055	Scope Trace 1 Source	0.000 to 30.999		0.000		RW	Num			PT	US	
09.056	Scope Trace 2 Source	0.000 to 30.999		0.000		RW	Num			PT	US	
09.057	Scope Trace 3 Source	0.000 to 30.999		0.000		RW	Num			PT	US	

Parameter		Range (⇅)		Default (⇒)		Type					
		OL	RFC-A	OL	RFC-A						
09.058	Scope Trace 4 Source	0.000 to 30.999		0.000		RW	Num			PT	US
09.059	Scope Trigger	Off (0) or On (1)		Off (0)		RW	Bit				
09.060	Scope Trigger Source	0.000 to 30.999		0.000		RW	Num			PT	US
09.061	Scope Trigger Threshold	-2147483648 to 2147483647		0		RW	Num				US
09.062	Scope Trigger Invert	Off (0) or On (1)		Off (0)		RW	Bit				US
09.063	Scope Mode	Single (0), Normal (1), Auto (2)		Single (0)		RW	Txt				US
09.064	Scope Arm	Off (0) or On (1)		Off (0)		RW	Bit		NC		
09.065	Scope Data Not Ready	Off (0) or On (1)				RO	Bit	ND	NC	PT	
09.066	Scope Saving Data	Off (0) or On (1)				RO	Bit	ND	NC	PT	
09.067	Scope Sample Time	1 to 200		1		RW	Num				US
09.068	Scope Trigger Delay	0 to 100 %		0 %		RW	Num				US
09.069	Scope Time Period	0.00 to 200000.00 ms				RO	Bit	ND	NC	PT	
09.070	Scope Auto-save Mode	Disabled (0), Overwrite (1), Keep (2)		Disabled (0)		RW	Txt				US
09.071	Scope Auto-save File Number	0 to 99		0		RO	Num				PS
09.072	Scope Auto-save Reset	Off (0) or On (1)		Off (0)		RW	Bit				
09.073	Scope Auto-save Status	Disabled (0), Active (1), Stopped (2), Failed (3)		Disabled (0)		RO	Txt				PS

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
Fl	Filtered	US	User save	PS	Power-down save						

11.10 Menu 10: Status and trips

Parameter		Range (⇅)		Default (⇒)		Type					
		OL	RFC-A	OL	RFC-A						
10.001	Drive Healthy	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.002	Drive Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.003	Zero Frequency	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.004	Running At Or Below Minimum Frequency	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.005	Below Set Frequency	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.006	At Frequency	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.007	Above Set Frequency	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.008	Rated Load Reached	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.009	Current Limit Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.010	Regenerating	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.011	Braking IGBT Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.012	Braking Resistor Alarm	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.013	Reverse Direction Commanded	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.014	Reverse Direction Running	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.015	Supply Loss	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.016	Under Voltage Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.017	Motor Overload Alarm	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.018	Drive Over-temperature Alarm	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.019	Drive Warning	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.020	Trip 0	0 to 255				RO	Txt	ND	NC	PT	PS
10.021	Trip 1	0 to 255				RO	Txt	ND	NC	PT	PS
10.022	Trip 2	0 to 255				RO	Txt	ND	NC	PT	PS
10.023	Trip 3	0 to 255				RO	Txt	ND	NC	PT	PS
10.024	Trip 4	0 to 255				RO	Txt	ND	NC	PT	PS
10.025	Trip 5	0 to 255				RO	Txt	ND	NC	PT	PS
10.026	Trip 6	0 to 255				RO	Txt	ND	NC	PT	PS
10.027	Trip 7	0 to 255				RO	Txt	ND	NC	PT	PS
10.028	Trip 8	0 to 255				RO	Txt	ND	NC	PT	PS
10.029	Trip 9	0 to 255				RO	Txt	ND	NC	PT	PS
10.030	Braking Resistor Rated Power	0.0 to 99999.9 kW		0.0 kW		RW	Num				US
10.031	Braking Resistor Thermal Time Constant	0.00 to 1500.00 s		0.00 s		RW	Num				US
10.032	External Trip	Off (0) or On (1)		Off (0)		RW	Bit		NC		
10.033	Drive Reset	Off (0) or On (1)		Off (0)		RW	Bit		NC		
10.034	Number Of Auto-reset Attempts	None (0), 1 (1), 2 (2), 3 (3), 4 (4), 5 (5), Infinite (6)		None (0)		RW	Txt				US
10.035	Auto-reset Delay	0.0 to 600.0 s		1.0 s		RW	Num				US
10.036	Auto-reset Hold Drive Healthy	Off (0) or On (1)		Off (0)		RW	Bit				US
10.037	Action On Trip Detection	00000 to 11111		00000		RW	Num				US
10.038	User Trip	0 to 255				RW	Num	ND	NC		
10.039	Braking Resistor Thermal Accumulator	0.0 to 100.0 %				RO	Num	ND	NC	PT	
10.040	Status Word	0000000000000000 to 1111111111111111				RO	Num	ND	NC	PT	
10.041	Trip 0 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.042	Trip 0 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.043	Trip 1 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.044	Trip 1 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.045	Trip 2 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.046	Trip 2 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.047	Trip 3 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.048	Trip 3 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.049	Trip 4 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.050	Trip 4 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.051	Trip 5 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.052	Trip 5 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS

Parameter		Range (⇅)		Default (⇔)		Type					
		OL	RFC-A	OL	RFC-A						
10.053	Trip 6 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.054	Trip 6 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.055	Trip 7 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.056	Trip 7 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.057	Trip 8 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.058	Trip 8 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.059	Trip 9 Date	00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS
10.060	Trip 9 Time	00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS
10.061	Braking Resistor Resistance	0.00 to 10000.00 Ω		0.00 Ω		RW	Num				US
10.064	Remote Keypad Battery Low	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.065	Auto-tune Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.066	Limit Switch Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.069	Additional Status Bits	0000000000 to 1111111111				RO	Num	ND	NC	PT	
10.070	Trip 0 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.071	Trip 1 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.072	Trip 2 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.073	Trip 3 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.074	Trip 4 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.075	Trip 5 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.076	Trip 6 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.077	Trip 7 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.078	Trip 8 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.079	Trip 9 Sub-trip Number	0 to 65535				RO	Num	ND	NC	PT	PS
10.080	Stop Motor	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.081	Phase Loss	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.090	Drive Ready	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.101	Drive Status	Inhibit (0), Ready (1), Stop (2), Scan (3), Run (4), Supply Loss (5), Deceleration (6), dc Injection (7), Reserved (8), Trip (9), Active (10), Heat (14), Under Voltage (15)				RO	Txt	ND	NC	PT	
10.102	Trip Reset Source	0 to 1023				RO	Num	ND	NC	PT	PS
10.103	Trip Time Identifier	-2147483648 to 2147483647 ms				RO	Num	ND	NC	PT	
10.104	Active Alarm	None (0), Brake Resistor (1), Motor Overload (2), Reserved (3), Drive Overload (4), Auto Tune (5), Limit Switch (6), Reserved (8), Option Slot 1 (9), Reserved (10), Reserved (11), Reserved (12), Low AC (13), Current limit (14)				RO	Txt	ND	NC	PT	
10.107	Low AC Alarm	Off (0) or On (1)				RO	Bit	ND	NC	PT	
10.108	Reversed cooling fan detected	Off (0) or On (1)				RO	Bit	ND		PT	

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.11 Menu 11: General drive set-up

Parameter	Range (⇅)		Default (⇔)		Type						
	OL	RFC-A	OL	RFC-A							
11.018	Status Mode Parameter 1	0.000 to 30.999		2.001		RW	Num			PT	US
11.019	Status Mode Parameter 2	0.000 to 30.999		4.020		RW	Num			PT	US
11.020	Reset Serial Communications	Off (0) or On (1)				RW	Bit	ND	NC		
11.021	Customer defined scaling	0.000 to 10.000		1.000		RW	Num				US
11.022	Parameter Displayed At Power-up	0.000 to 0.080		0.010		RW	Num			PT	US
11.023	Serial Address	1 to 247		1		RW	Num				US
11.024	Serial Mode	8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 1 EP (8), 7 1 OP (9), 7 1 EP M (10), 7 1 OP M (11)		8 2 NP (0)		RW	Txt				US
11.025	Serial Baud Rate	300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 76800 (9), 115200 (10)		19200 (6)		RW	Txt				US
11.026	Minimum Comms Transmit Delay	0 to 250 ms		2 ms		RW	Num				US
11.027	Silent Period	0 to 250 ms		0 ms		RW	Num				US
11.028	Drive Derivative	0 to 255				RO	Num	ND	NC	PT	
11.029	Software Version	00.00.00.00 to 99.99.99.99				RO	Ver	ND	NC	PT	
11.030	User Security Code	0 to 9999				RW	Num	ND	NC	PT	US
11.031	User Drive Mode	Open-loop (1), RFC-A (2)				RW	Txt	ND	NC	PT	
11.032	Maximum Heavy Duty Rating	0.00 to 9999.99 A				RO	Num	ND	NC	PT	
11.033	Drive Rated Voltage	110V (0), 200V (1), 400V (2), 575V (3), 690V (4)				RO	Txt	ND	NC	PT	
11.034	Drive Configuration	AV (0), AI (1), AV Preset (2), AI Preset (3), Preset (4), Keypad (5), Keypad Ref (6), Electronic Pot (7), Torque Control (8), Pid Control (9)		AV (0)		RW	Txt			PT	US
11.035	Power Software Version	00.00.00.00 to 99.99.99.99				RO	Ver	ND	NC	PT	
11.036	NV Media Card File Previously Loaded	0 to 999		0		RO	Num		NC	PT	
11.037	NV Media Card File Number	0 to 999		0		RW	Num				
11.038	NV Media Card File Type	None (0), Open-loop (1), RFC-A (2), User Program (5)				RO	Txt	ND	NC	PT	
11.039	NV Media Card File Version	0 to 9999				RO	Num	ND	NC	PT	
11.042	Parameter Cloning	None (0), Read (1), Program (2), Auto (3), Boot (4)		None (0)		RW	Txt		NC		US
11.043	Load Defaults	None (0), Standard (1), US (2)		None (0)		RW	Txt		NC		
11.044	User Security Status	Menu 0 (0), All Menus (1), Read-only Menu 0 (2), Read-only (3), Status Only (4), No Access (5)				RW	Txt	ND		PT	
11.045	Select Motor 2 Parameters	Motor 1 (0), Motor 2 (1)		Motor 1 (0)		RW	Txt				US
11.046	Defaults Previously Loaded	0 to 2000				RO	Num	ND	NC	PT	US
11.047	Onboard User Program: Enable	Stop (0), Run (1)		Run (1)		RW	Txt				US
11.048	Onboard User Program: Status	-2147483648 to 2147483647				RO	Num	ND	NC	PT	
11.049	Onboard User Program: Programming Events	0 to 65535				RO	Num	ND	NC	PT	
11.050	Onboard User Program: Freewheeling Tasks Per Second	0 to 65535				RO	Num	ND	NC	PT	
11.051	Onboard User Program: Clock Task Time Used	0.0 to 100.0 %				RO	Num	ND	NC	PT	
11.052	Serial Number LS	000000 to 999999				RO	Num	ND	NC	PT	
11.053	Serial Number MS	0 to 999999				RO	Num	ND	NC	PT	
11.054	Drive Date Code	0000 to 9999				RO	Num	ND	NC	PT	
11.055	Onboard User Program: Clock Task Schedule Rate	0 to 262128				RO	Num	ND	NC	PT	
11.060	Maximum Rated Current	0.000 to 999.999				RO	Num	ND	NC	PT	

Parameter	Range (⇅)		Default (⇒)		Type						
	OL	RFC-A	OL	RFC-A							
11.061	Full Scale Current Kc	0.000 to 999.999				RO	Num	ND	NC	PT	
11.063	Product Type	0 to 255				RO	Num	ND	NC	PT	
11.064	Product Identifier Characters	M400 (1295265840) to □□□□ (2147483647)				RO	Chr	ND	NC	PT	
11.065	Frame size and voltage code	000 to 999				RO	Num	ND	NC	PT	
11.066	Power Stage Identifier	0 to 255				RO	Num	ND	NC	PT	
11.067	Control Board Identifier	0 to 255				RO	Num	ND	NC	PT	
11.068	Drive current rating	00000 to 32767				RO	Num	ND	NC	PT	
11.070	Core Parameter Database Version	0.00 to 99.99				RO	Num	ND	NC	PT	
11.072	NV Media Card Create Special File	0 to 1		0		RW	Num		NC		
11.073	NV Media Card Type	None (0), Reserved (1), SD Card (2)				RO	Txt	ND	NC	PT	
11.075	NV Media Card Read-only Flag	Off (0) or On (1)				RO	Bit	ND	NC	PT	
11.076	NV Media Card Warning Suppression Flag	Off (0) or On (1)				RO	Bit	ND	NC	PT	
11.077	NV Media Card File Required Version	0 to 9999				RW	Num	ND	NC	PT	
11.079	Drive Name Characters 1-4	□□□□ (-2147483648) to □□□□ (2147483647)		----	(757935405)	RW	Chr			PT	US
11.080	Drive Name Characters 5-8	□□□□ (-2147483648) to □□□□ (2147483647)		----	(757935405)	RW	Chr			PT	US
11.081	Drive Name Characters 9-12	□□□□ (-2147483648) to □□□□ (2147483647)		----	(757935405)	RW	Chr			PT	US
11.082	Drive Name Characters 13-16	□□□□ (-2147483648) to □□□□ (2147483647)		----	(757935405)	RW	Chr			PT	US
11.084	Drive Mode	Open-loop (1), RFC-A (2)				RO	Txt	ND	NC	PT	US
11.085	Security Status	None (0), Read-only (1), Status-only (2), No Access (3)				RO	Txt	ND	NC	PT	PS
11.086	Menu Access Status	Menu 0 (0), All Menus (1)				RO	Txt	ND	NC	PT	PS
11.090	Keypad Port Serial Address	1 to 16		1		RW	Num				US
11.091	Additional Identifier Characters 1	□□□□ (-2147483648) to □□□□ (2147483647)				RO	Chr	ND	NC	PT	
11.092	Additional Identifier Characters 2	□□□□ (-2147483648) to □□□□ (2147483647)				RO	Chr	ND	NC	PT	
11.093	Additional Identifier Characters 3	□□□□ (-2147483648) to □□□□ (2147483647)				RO	Chr	ND	NC	PT	
11.097	AI ID Code	None (0), SD Card (1), RS-485 (2), boot (3), RS-485 (4)				RO	Txt	ND	NC	PT	

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.12 Menu 12: Threshold detectors, variable selectors and brake control function

Figure 11-20 Menu 12 logic diagram


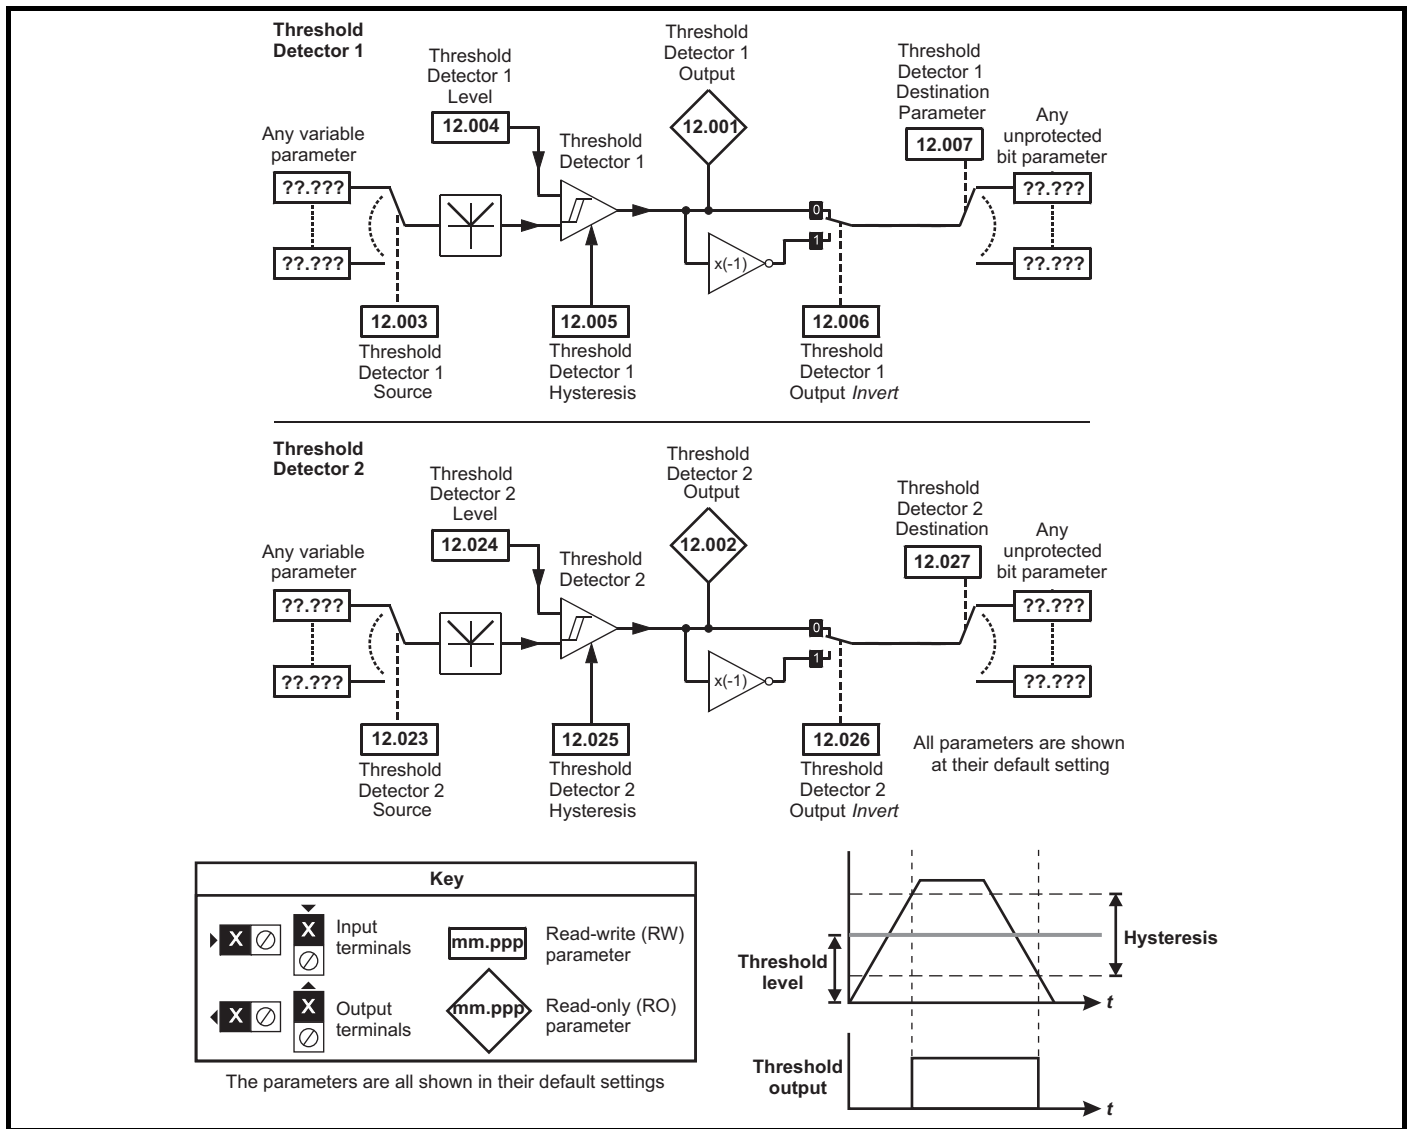


Figure 11-21 Menu 12 logic diagram (continued)

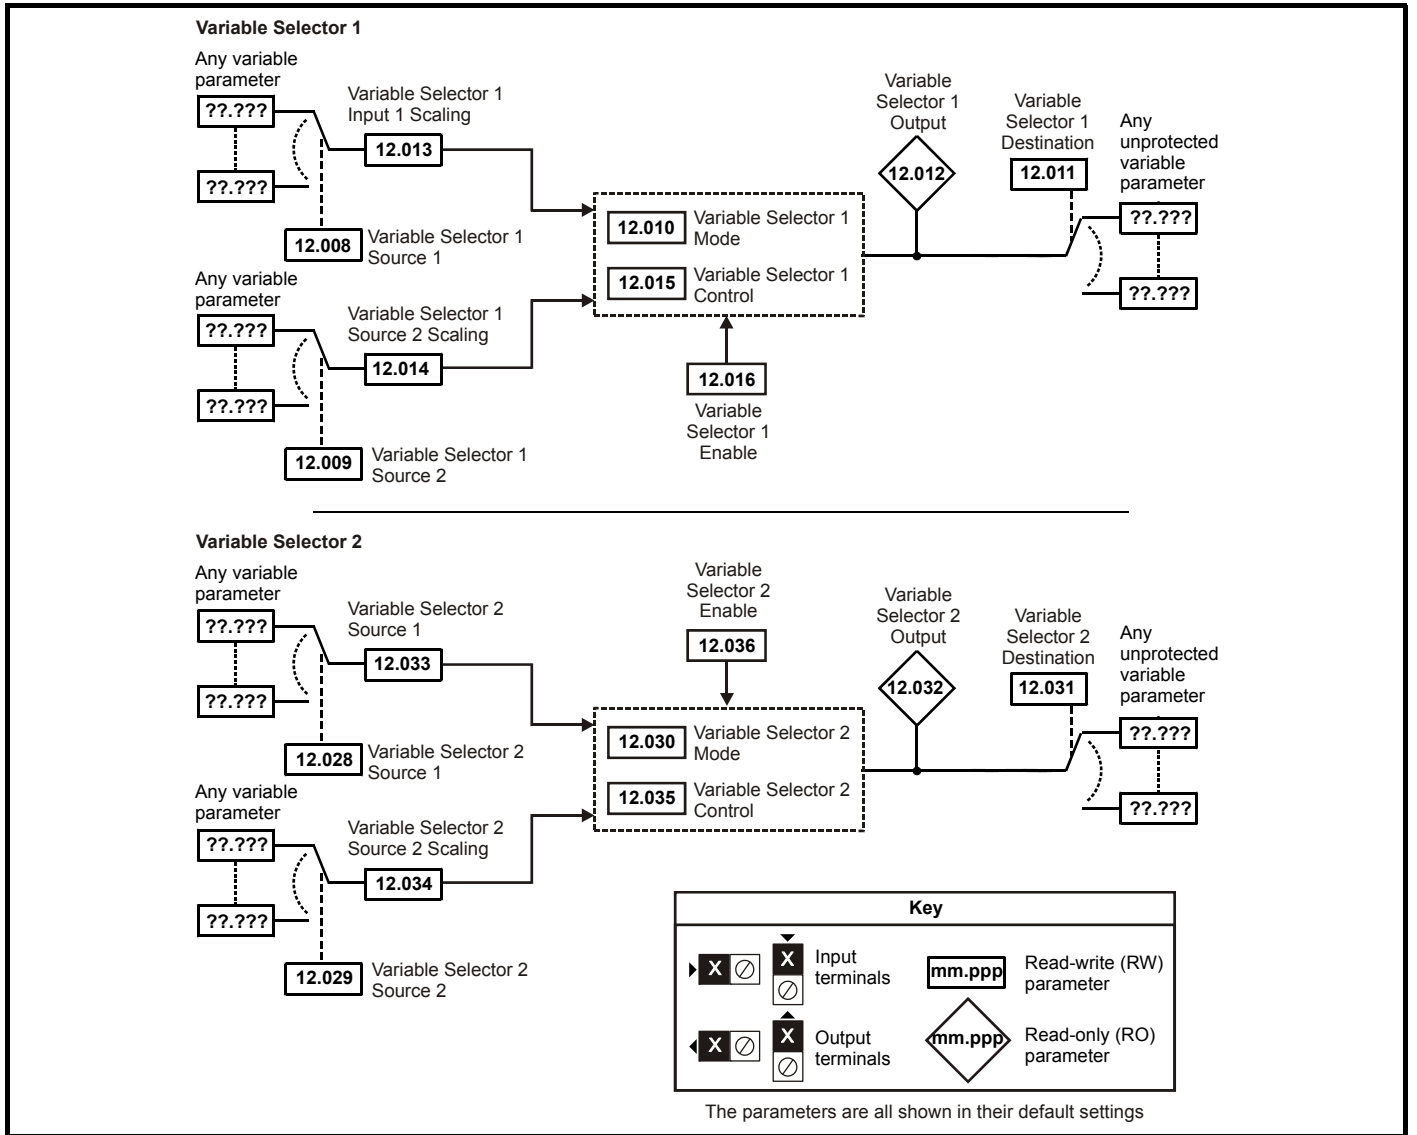



The brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.



The control terminal relay can be selected as an output to release a brake. If a drive is set up in this manner and a drive replacement takes place, prior to programming the drive on initial power up, the brake may be released. When drive terminals are programmed to non default settings the result of incorrect or delayed programming must be considered. The use of an NV media card in boot mode can ensure drive parameters are immediately programmed to avoid this situation.

Figure 11-22 Brake function


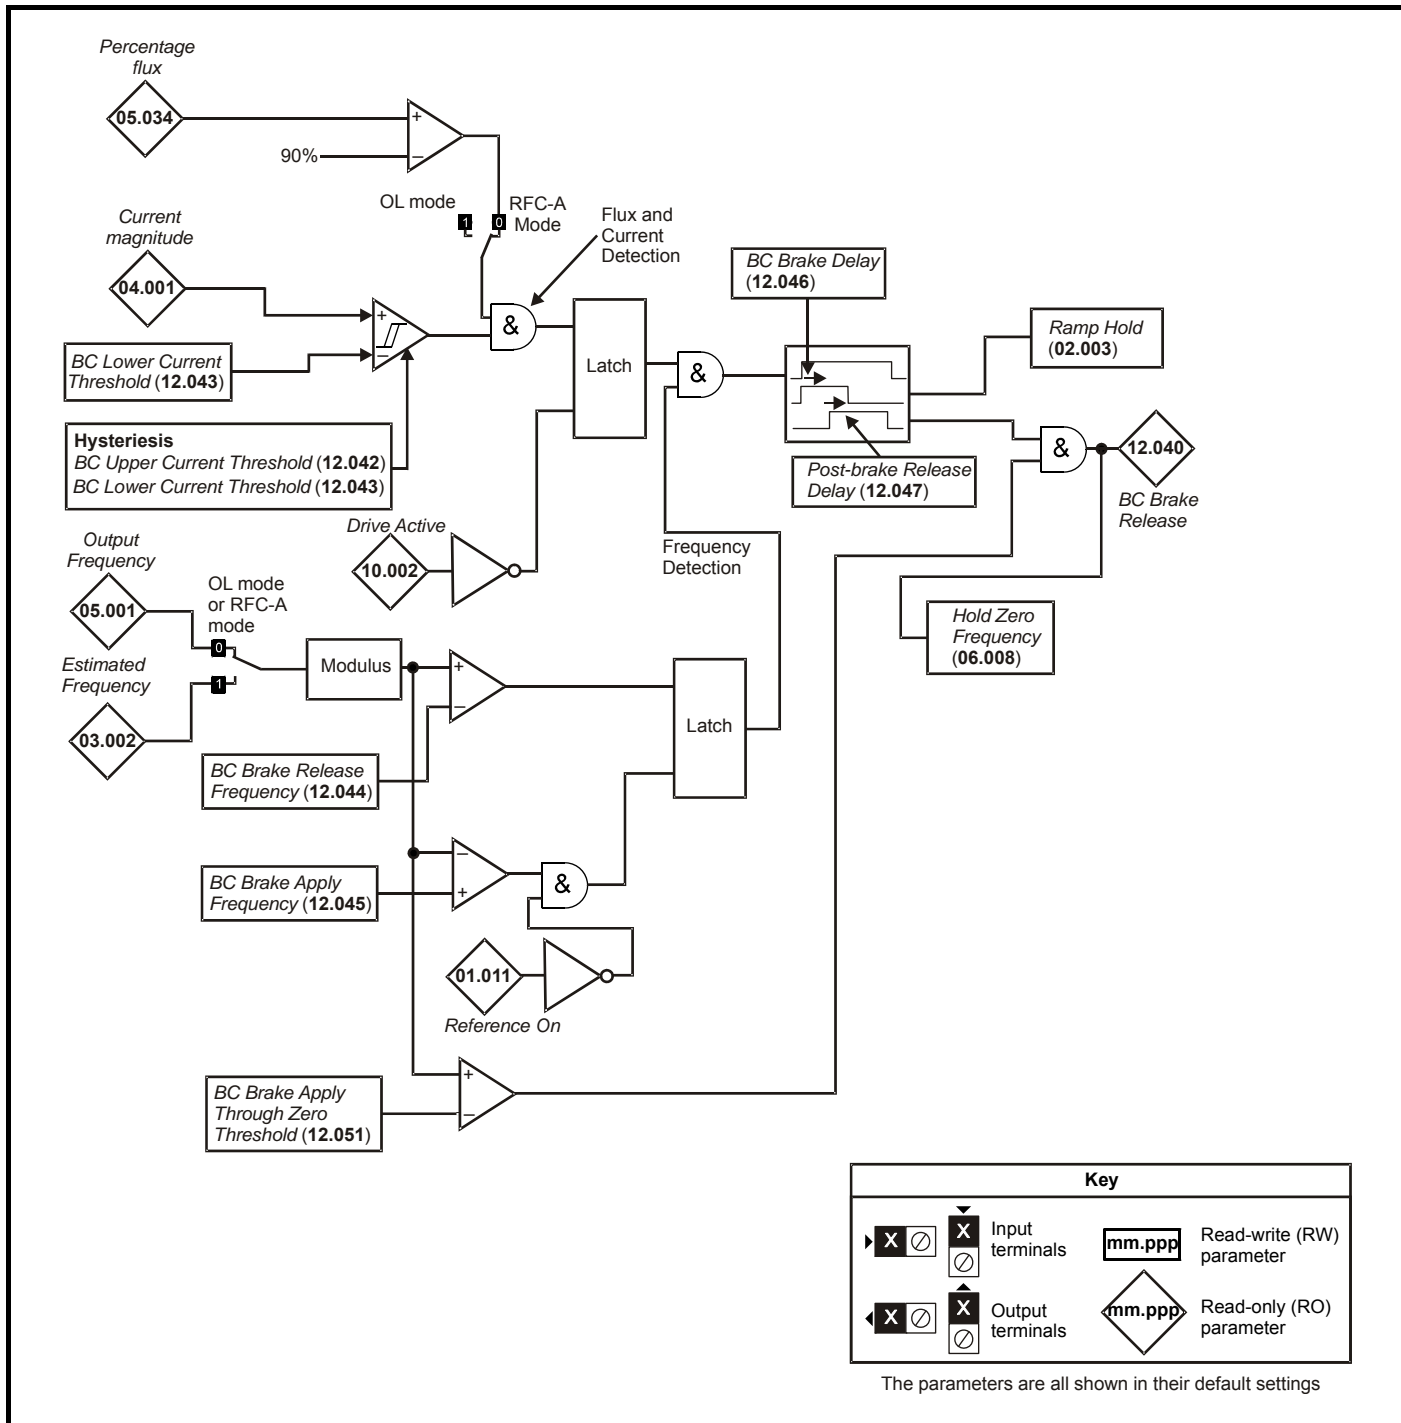


Figure 11-23 Brake sequence

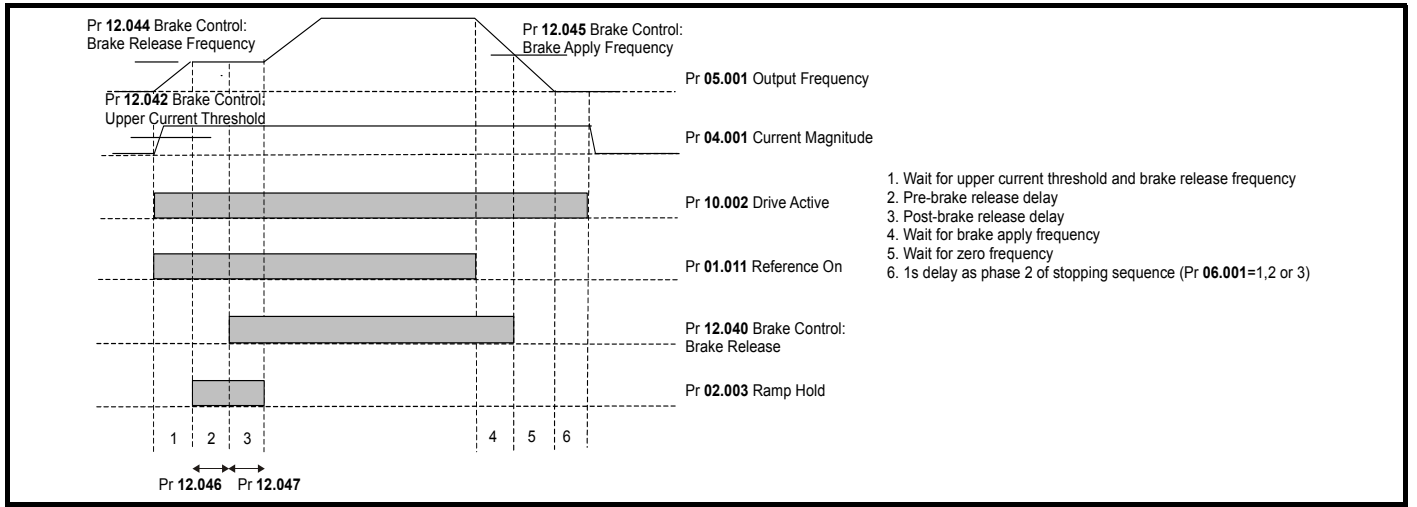



Parameter	Range (⇄)		Default (⇒)		Type						
	OL	RFC-A	OL	RFC-A	RO	Bit	ND	NC	PT	US	
12.001	Threshold Detector 1 Output		Off (0) or On (1)			RO	Bit	ND	NC	PT	
12.002	Threshold Detector 2 Output		Off (0) or On (1)			RO	Bit	ND	NC	PT	
12.003	Threshold Detector 1 Source		0.000 to 30.999		0.000	RW	Num			PT	US
12.004	Threshold Detector 1 Level		0.00 to 100.00 %		0.00 %	RW	Num				US
12.005	Threshold Detector 1 Hysteresis		0.00 to 25.00 %		0.00 %	RW	Num				US
12.006	Threshold Detector 1 Output Invert		Off (0) or On (1)		Off (0)	RW	Bit				US
12.007	Threshold Detector 1 Destination		0.000 to 30.999		0.000	RW	Num	DE		PT	US
12.008	Variable Selector 1 Source 1		0.000 to 30.999		0.000	RW	Num			PT	US
12.009	Variable Selector 1 Source 2		0.000 to 30.999		0.000	RW	Num			PT	US
12.010	Variable Selector 1 Mode		Input 1 (0), Input 2 (1), Add (2), Subtract (3), Multiply (4), Divide (5), Time Const (6), Ramp (7), Modulus (8), Powers (9)		Input 1 (0)	RW	Txt				US
12.011	Variable Selector 1 Destination		0.000 to 30.999		0.000	RW	Num	DE		PT	US
12.012	Variable Selector 1 Output		±100.00 %			RO	Num	ND	NC	PT	
12.013	Variable Selector 1 Source 1 Scaling		±4.000		1.000	RW	Num				US
12.014	Variable Selector 1 Source 2 Scaling		±4.000		1.000	RW	Num				US
12.015	Variable Selector 1 Control		0.00 to 100.00		0.00	RW	Num				US
12.016	Variable Selector 1 Enable		Off (0) or On (1)		On (1)	RW	Bit				US
12.023	Threshold Detector 2 Source		0.000 to 30.999		0.000	RW	Num			PT	US
12.024	Threshold Detector 2 Level		0.00 to 100.00 %		0.00 %	RW	Num				US
12.025	Threshold Detector 2 Hysteresis		0.00 to 25.00 %		0.00 %	RW	Num				US
12.026	Threshold Detector 2 Output Invert		Off (0) or On (1)		Off (0)	RW	Bit				US
12.027	Threshold Detector 2 Destination		0.000 to 30.999		0.000	RW	Num	DE		PT	US
12.028	Variable Selector 2 Source 1		0.000 to 30.999		0.000	RW	Num			PT	US
12.029	Variable Selector 2 Source 2		0.000 to 30.999		0.000	RW	Num			PT	US
12.030	Variable Selector 2 Mode		Input 1 (0), Input 2 (1), Add (2), Subtract (3), Multiply (4), Divide (5), Time Const (6), Ramp (7), Modulus (8), Powers (9)		Input 1 (0)	RW	Txt				US
12.031	Variable Selector 2 Destination		0.000 to 30.999		0.000	RW	Num	DE		PT	US
12.032	Variable Selector 2 Output		±100.00 %			RO	Num	ND	NC	PT	
12.033	Variable Selector 2 Source 1 Scaling		±4.000		1.000	RW	Num				US
12.034	Variable Selector 2 Source 2 Scaling		±4.000		1.000	RW	Num				US
12.035	Variable Selector 2 Control		0.00 to 100.00		0.00	RW	Num				US
12.036	Variable Selector 2 Enable		Off (0) or On (1)		On (1)	RW	Bit				US
12.040	BC Brake Release		Off (0) or On (1)			RO	Bit	ND	NC	PT	
12.041	BC Enable		Disable (0), Relay (1), Digital IO (2), User (3)		Disable (0)	RW	Txt				US
12.042	BC Upper Current Threshold		0 to 200 %		50 %	RW	Num				US
12.043	BC Lower Current Threshold		0 to 200 %		10 %	RW	Num				US
12.044	BC Brake Release Frequency		0.00 to 20.00 Hz		1.00 Hz	RW	Num				US
12.045	BC Brake Apply Frequency		0.00 to 20.00 Hz		2.00 Hz	RW	Num				US
12.046	BC Brake Delay		0.0 to 25.0 s		1.0 s	RW	Num				US
12.047	BC Post-brake Release Delay		0.0 to 25.0 s		1.0 s	RW	Num				US
12.050	BC Initial Direction		Ref (0), Forward (1), Reverse (2)		Ref (0)	RW	Txt				US
12.051	BC Brake Apply Through Zero Thres hold		0.00 to 25.00 Hz		0.00 Hz	RW	Num				US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
Fl	Filtered	US	User save	PS	Power-down save						

11.13 Menu 14: User PID controller

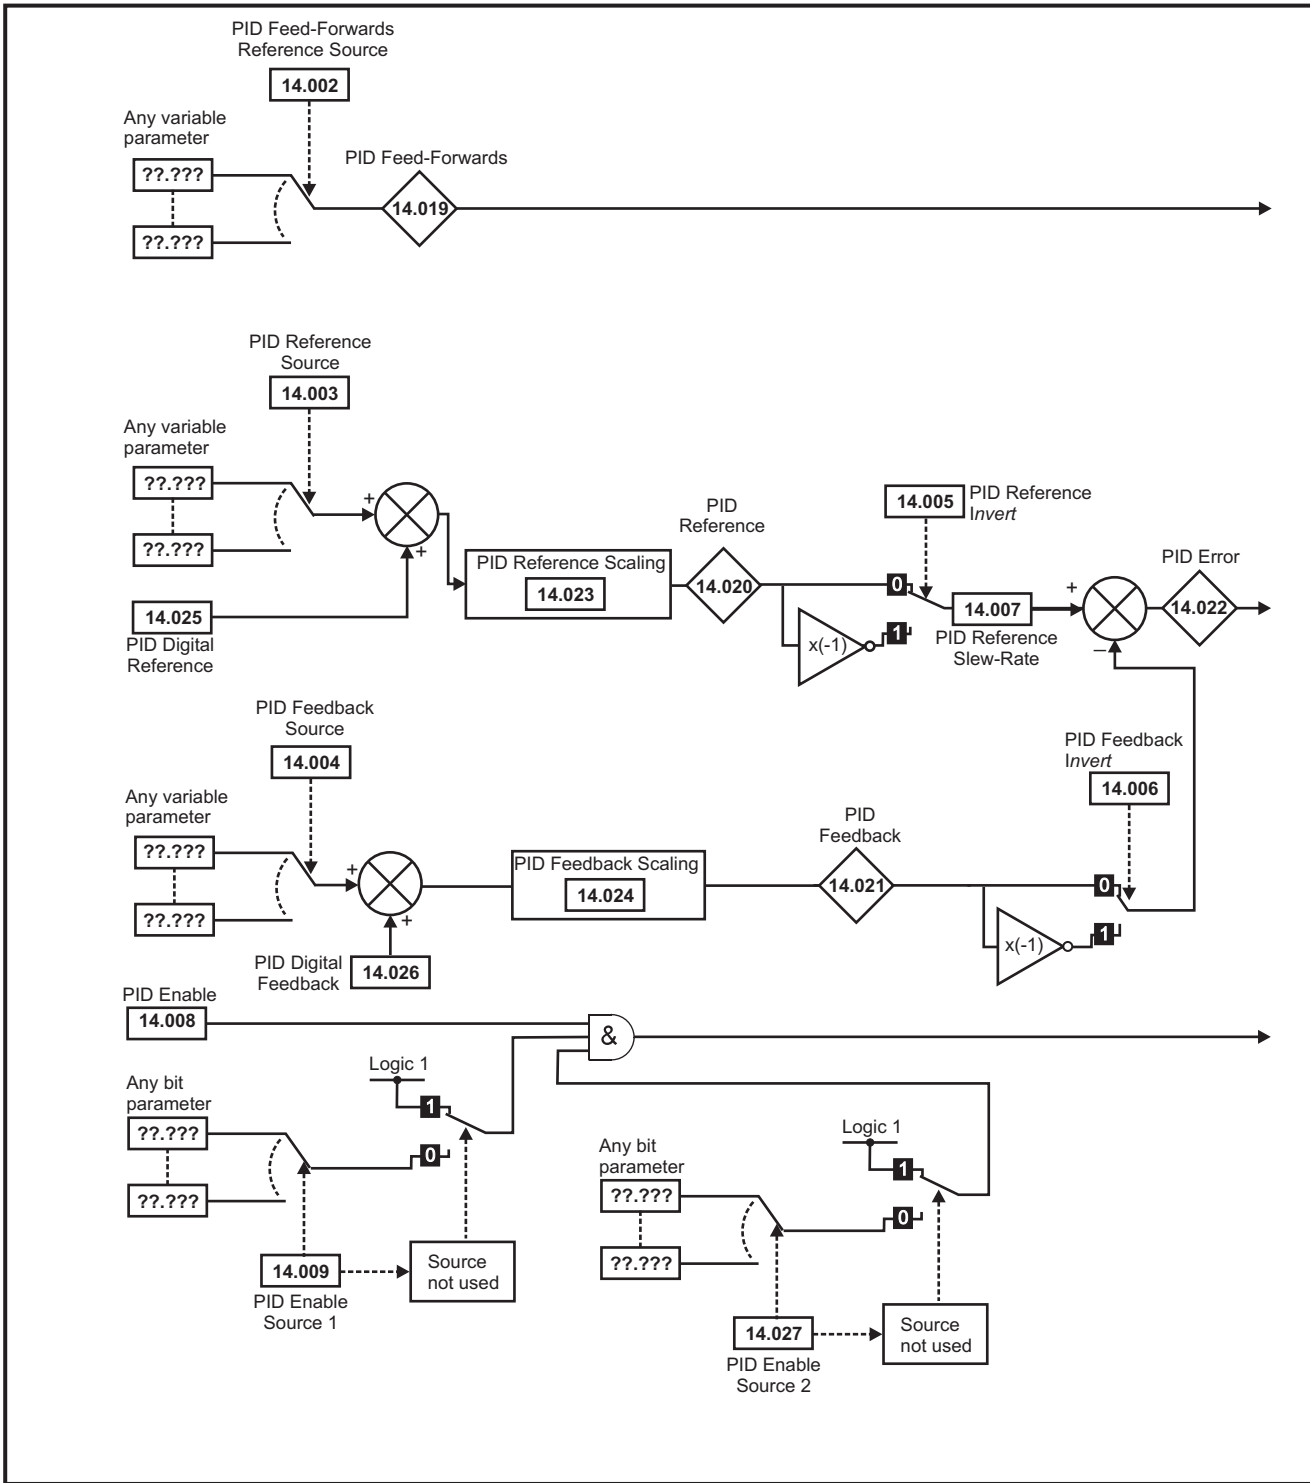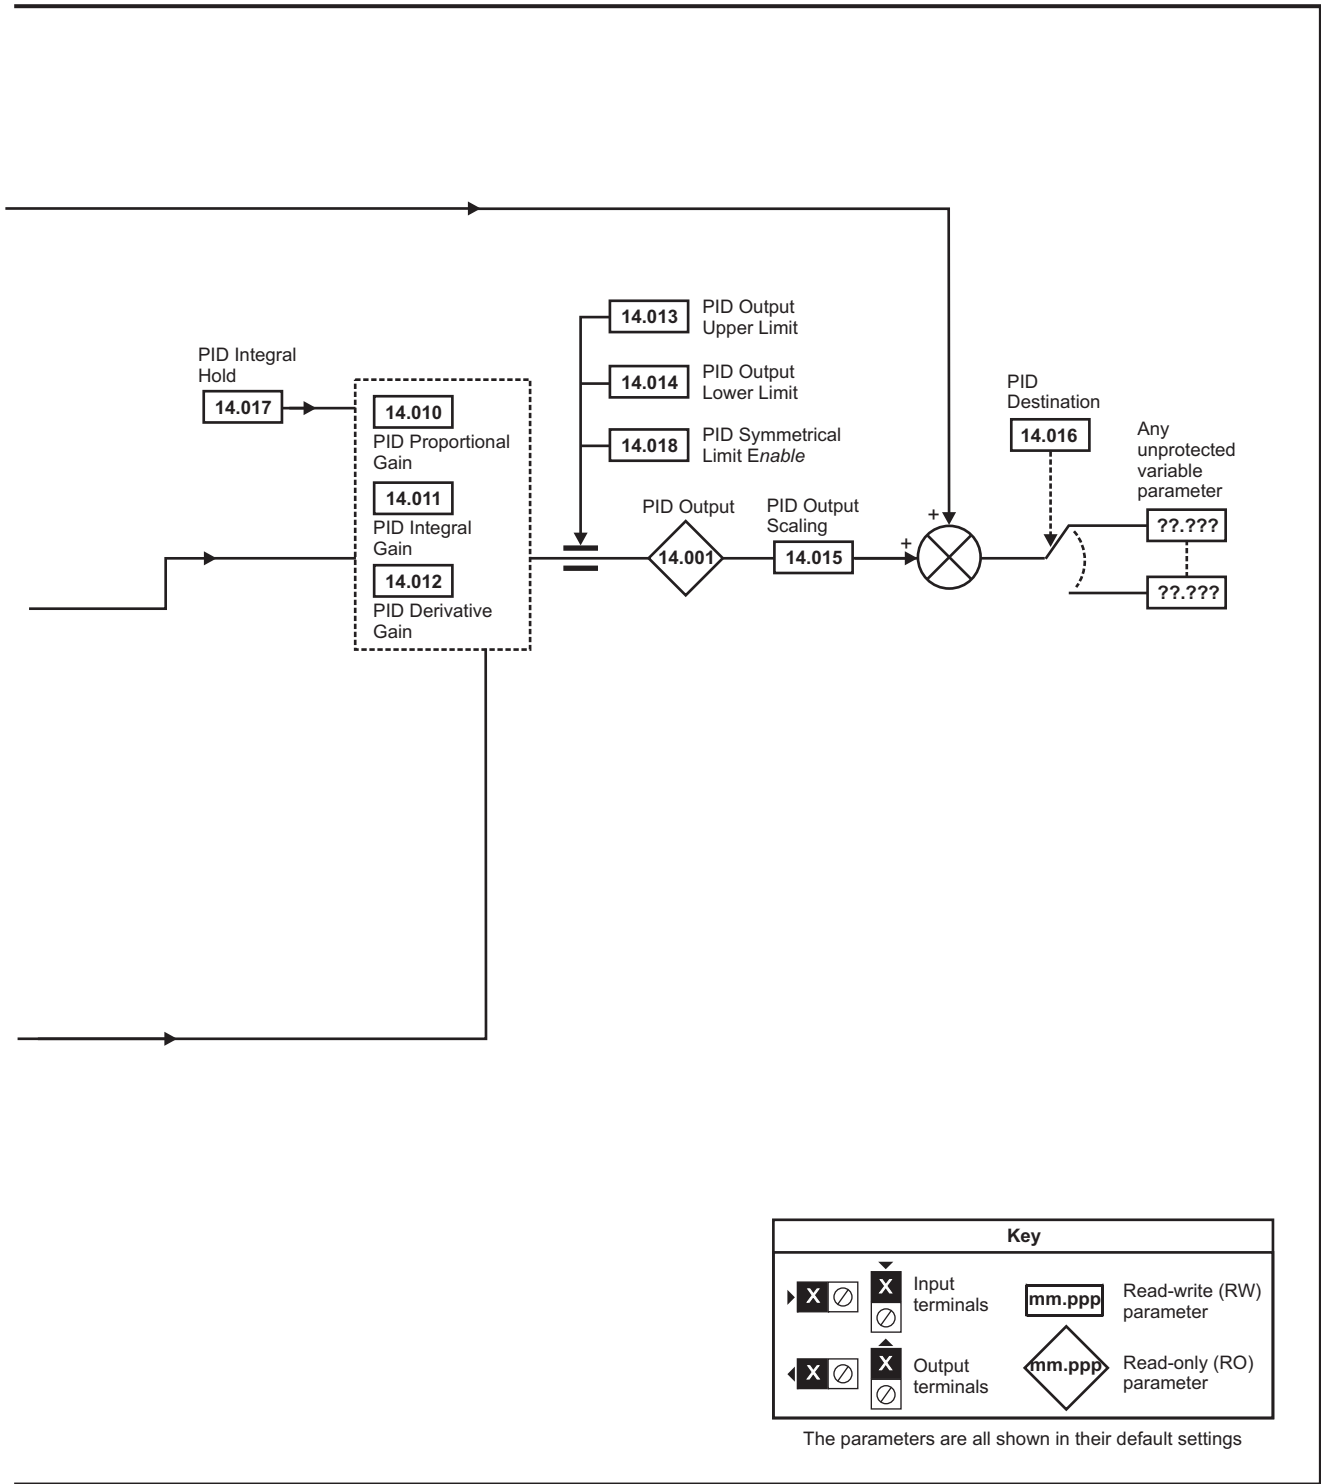Figure 11-24 Menu 14 Logic diagram





Key				
		Input terminals		Read-write (RW) parameter
		Output terminals		Read-only (RO) parameter


The parameters are all shown in their default settings

Parameter		Range (⊕)		Default (⇒)		Type							
		Open-Loop	RFC-A	Open-Loop	RFC-A	RO	Num	ND	NC	PT	US		
14.001	PID1 Output	±100.00 %				RO	Num	ND	NC	PT			
14.002	PID1 Feed-forwards Reference Source	0.000 to 30.999		0.000		RW	Num				PT		US
14.003	PID1 Reference Source	0.000 to 30.999		0.000		RW	Num				PT		US
14.004	PID1 Feedback Source	0.000 to 30.999		0.000		RW	Num				PT		US
14.005	PID1 Reference Invert	Off (0) or On (1)		Off (0)		RW	Bit						US
14.006	PID1 Feedback Invert	Off (0) or On (1)		Off (0)		RW	Bit						US
14.007	PID1 Reference Slew Rate	0.0 to 3200.0 s		0.0 s		RW	Num						US
14.008	PID1 Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
14.009	PID1 Enable Source 1	0.000 to 30.999		0.000		RW	Num				PT		US
14.010	PID1 Proportional Gain	0.000 to 4.000		1.000		RW	Num						US
14.011	PID1 Integral Gain	0.000 to 4.000		0.500		RW	Num						US
14.012	PID1 Differential Gain	0.000 to 4.000		0.000		RW	Num						US
14.013	PID1 Output Upper Limit	0.00 to 100.00 %		100.00 %		RW	Num						US
14.014	PID1 Output Lower Limit	±100.00 %		-100.00 %		RW	Num						US
14.015	PID1 Output Scaling	0.000 to 4.000		1.000		RW	Num						US
14.016	PID1 Destination	0.000 to 30.999		0.000		RW	Num	DE			PT		US
14.017	PID1 Integral Hold	Off (0) or On (1)		Off (0)		RW	Bit						
14.018	PID1 Symmetrical Limit Enable	Off (0) or On (1)		Off (0)		RW	Bit						US
14.019	PID1 Feed-forwards Reference	±100.00 %				RO	Num	ND	NC	PT			
14.020	PID1 Reference	±100.00 %				RO	Num	ND	NC	PT			
14.021	PID1 Feedback	±100.00 %				RO	Num	ND	NC	PT			
14.022	PID1 Error	±100.00 %				RO	Num	ND	NC	PT			
14.023	PID1 Reference Scaling	0.000 to 4.000		1.000		RW	Num						US
14.024	PID1 Feedback Scaling	0.000 to 4.000		1.000		RW	Num						US
14.025	PID1 Digital Reference	±100.00 %		0.00 %		RW	Num						US
14.026	PID1 Digital Feedback	±100.00 %		0.00 %		RW	Num						US
14.027	PID1 Enable Source 2	0.000 to 30.999		0.000		RW	Num				PT		US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.14 Menu 15: Option module set-up

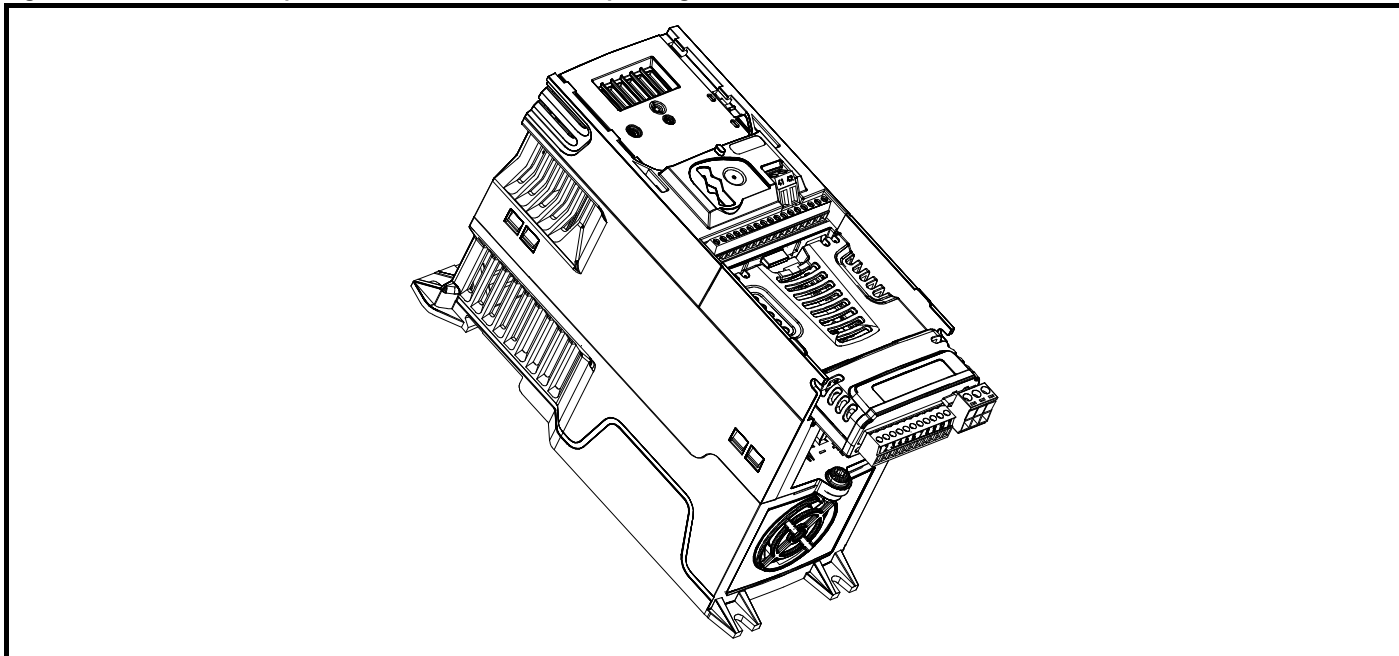Figure 11-25 Location of option module slot and its corresponding menu number



1. Option module Slot 1 - Menu 15

11.14.1 Parameters common to all categories

Parameter		Range(⇅)	Default(⇔)	Type					
15.001	Module ID	0 to 65535		RO	Num	ND	NC	PT	
15.002	Software Version	00.00 to 99.99		RO	Num	ND	NC	PT	
15.003	Hardware Version	0.00 to 99.99		RO	Num	ND	NC	PT	
15.004	Serial Number LS	0 to 99999999		RO	Num	ND	NC	PT	
15.005	Serial Number MS			RO	Num	ND	NC	PT	
15.051	Software Sub-version	0 to 99		RO	Num	ND	NC	PT	

The option module ID indicates the type of module that is installed in the corresponding slot. See the relevant option module user guide for more information regarding the module.

Option module ID	Module	Category
0	No module installed	
443	SI-PROFIBUS	Fieldbus
447	SI-DeviceNet	Fieldbus

11.15 Menu 18: Application menu 1

Parameter	Range (⇄)		Default (⇒)		Type								
	OL	RFC-A	OL	RFC-A									
18.001	Application Menu 1 Power-down Save Integer		-32768 to 32767		0		RW	Num					PS
18.002	Application Menu 1 Read-only Integer 2		-32768 to 32767				RO	Num	ND	NC			
18.003	Application Menu 1 Read-only Integer 3		-32768 to 32767				RO	Num	ND	NC			
18.004	Application Menu 1 Read-only Integer 4		-32768 to 32767				RO	Num	ND	NC			
18.005	Application Menu 1 Read-only Integer 5		-32768 to 32767				RO	Num	ND	NC			
18.006	Application Menu 1 Read-only Integer 6		-32768 to 32767				RO	Num	ND	NC			
18.007	Application Menu 1 Read-only Integer 7		-32768 to 32767				RO	Num	ND	NC			
18.008	Application Menu 1 Read-only Integer 8		-32768 to 32767				RO	Num	ND	NC			
18.009	Application Menu 1 Read-only Integer 9		-32768 to 32767				RO	Num	ND	NC			
18.010	Application Menu 1 Read-only Integer 10		-32768 to 32767				RO	Num	ND	NC			
18.011	Application Menu 1 Read-write Integer 11		-32768 to 32767		0		RW	Num					US
18.012	Application Menu 1 Read-write Integer 12		-32768 to 32767		0		RW	Num					US
18.013	Application Menu 1 Read-write Integer 13		-32768 to 32767		0		RW	Num					US
18.014	Application Menu 1 Read-write Integer 14		-32768 to 32767		0		RW	Num					US
18.015	Application Menu 1 Read-write Integer 15		-32768 to 32767		0		RW	Num					US
18.016	Application Menu 1 Read-write Integer 16		-32768 to 32767		0		RW	Num					US
18.017	Application Menu 1 Read-write Integer 17		-32768 to 32767		0		RW	Num					US
18.018	Application Menu 1 Read-write Integer 18		-32768 to 32767		0		RW	Num					US
18.019	Application Menu 1 Read-write Integer 19		-32768 to 32767		0		RW	Num					US
18.020	Application Menu 1 Read-write Integer 20		-32768 to 32767		0		RW	Num					US
18.021	Application Menu 1 Read-write Integer 21		-32768 to 32767		0		RW	Num					US
18.022	Application Menu 1 Read-write Integer 22		-32768 to 32767		0		RW	Num					US
18.023	Application Menu 1 Read-write Integer 23		-32768 to 32767		0		RW	Num					US
18.024	Application Menu 1 Read-write Integer 24		-32768 to 32767		0		RW	Num					US
18.025	Application Menu 1 Read-write Integer 25		-32768 to 32767		0		RW	Num					US
18.026	Application Menu 1 Read-write Integer 26		-32768 to 32767		0		RW	Num					US
18.027	Application Menu 1 Read-write Integer 27		-32768 to 32767		0		RW	Num					US
18.028	Application Menu 1 Read-write Integer 28		-32768 to 32767		0		RW	Num					US
18.029	Application Menu 1 Read-write Integer 29		-32768 to 32767		0		RW	Num					US
18.030	Application Menu 1 Read-write Integer 30		-32768 to 32767		0		RW	Num					US
18.031	Application Menu 1 Read-write bit 31		Off (0) or On (1)		Off (0)		RW	Bit					US
18.032	Application Menu 1 Read-write bit 32		Off (0) or On (1)		Off (0)		RW	Bit					US
18.033	Application Menu 1 Read-write bit 33		Off (0) or On (1)		Off (0)		RW	Bit					US
18.034	Application Menu 1 Read-write bit 34		Off (0) or On (1)		Off (0)		RW	Bit					US
18.035	Application Menu 1 Read-write bit 35		Off (0) or On (1)		Off (0)		RW	Bit					US
18.036	Application Menu 1 Read-write bit 36		Off (0) or On (1)		Off (0)		RW	Bit					US
18.037	Application Menu 1 Read-write bit 37		Off (0) or On (1)		Off (0)		RW	Bit					US
18.038	Application Menu 1 Read-write bit 38		Off (0) or On (1)		Off (0)		RW	Bit					US
18.039	Application Menu 1 Read-write bit 39		Off (0) or On (1)		Off (0)		RW	Bit					US
18.040	Application Menu 1 Read-write bit 40		Off (0) or On (1)		Off (0)		RW	Bit					US
18.041	Application Menu 1 Read-write bit 41		Off (0) or On (1)		Off (0)		RW	Bit					US
18.042	Application Menu 1 Read-write bit 42		Off (0) or On (1)		Off (0)		RW	Bit					US
18.043	Application Menu 1 Read-write bit 43		Off (0) or On (1)		Off (0)		RW	Bit					US
18.044	Application Menu 1 Read-write bit 44		Off (0) or On (1)		Off (0)		RW	Bit					US
18.045	Application Menu 1 Read-write bit 45		Off (0) or On (1)		Off (0)		RW	Bit					US
18.046	Application Menu 1 Read-write bit 46		Off (0) or On (1)		Off (0)		RW	Bit					US
18.047	Application Menu 1 Read-write bit 47		Off (0) or On (1)		Off (0)		RW	Bit					US
18.048	Application Menu 1 Read-write bit 48		Off (0) or On (1)		Off (0)		RW	Bit					US
18.049	Application Menu 1 Read-write bit 49		Off (0) or On (1)		Off (0)		RW	Bit					US
18.050	Application Menu 1 Read-write bit 50		Off (0) or On (1)		Off (0)		RW	Bit					US

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
FI	Filtered	US	User save	PS	Power-down save						

11.16 Menu 20: Application menu 2

Parameter		Range (⇅)		Default (⇒)		Type							
		OL	RFC-A	OL	RFC-A								
20.021	Application Menu 2 Read-write Long Integer 21	-2147483648 to 2147483647		0		RW	Num						
20.022	Application Menu 2 Read-write Long Integer 22	-2147483648 to 2147483647		0		RW	Num						
20.023	Application Menu 2 Read-write Long Integer 23	-2147483648 to 2147483647		0		RW	Num						
20.024	Application Menu 2 Read-write Long Integer 24	-2147483648 to 2147483647		0		RW	Num						
20.025	Application Menu 2 Read-write Long Integer 25	-2147483648 to 2147483647		0		RW	Num						
20.026	Application Menu 2 Read-write Long Integer 26	-2147483648 to 2147483647		0		RW	Num						
20.027	Application Menu 2 Read-write Long Integer 27	-2147483648 to 2147483647		0		RW	Num						
20.028	Application Menu 2 Read-write Long Integer 28	-2147483648 to 2147483647		0		RW	Num						
20.029	Application Menu 2 Read-write Long Integer 29	-2147483648 to 2147483647		0		RW	Num						
20.030	Application Menu 2 Read-write Long Integer 30	-2147483648 to 2147483647		0		RW	Num						

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
Fl	Filtered	US	User save	PS	Power-down save						

11.17 Menu 21: Second motor parameters

Parameter		Range (⇅)		Default (⇄)		Type						
		OL	RFC-A	OL	RFC-A							
21.001	M2 Maximum Reference Clamp	±VM_POSITIVE_REF_CLAMP Hz		50Hz: 50.00 Hz 60Hz: 60.00 Hz		RW	Num					US
21.002	M2 Minimum Reference Clamp	±VM_NEGATIVE_REF_CLAMP2 Hz		0.00 Hz		RW	Num					US
21.003	M2 Reference Selector	A1 A2 (0), A1 Preset (1), A2 Preset (2), Preset (3), Keypad (4), Reserved (5), Keypad Ref (6)		A1 A2 (0)		RW	Txt					US
21.004	M2 Acceleration Rate 1	±VM_ACCEL_RATE		5.0		RW	Num					US
21.005	M2 Deceleration Rate 1	±VM_ACCEL_RATE		10.0		RW	Num					US
21.006	M2 Motor Rated Frequency	0.00 to VM_SPEED_FREQ_REF_UNIPOLAR Hz		50Hz: 50.00 Hz 60Hz: 60.00 Hz		RW	Num					US
21.007	M2 Motor Rated Current	±VM_RATED_CURRENT A		Maximum Heavy Duty Rating (11.032)		RW	Num		RA			US
21.008	M2 Motor Rated Speed	0.0 to 80000.0 rpm		50Hz: 1500.0 rpm 60Hz: 1800.0 rpm		50 Hz: 1450.0 rpm 60 Hz: 1750.0 rpm	RW	Num				US
21.009	M2 Motor Rated Voltage	±VM_AC_VOLTAGE_SET V		110V drive: 230 V 200V drive: 230 V 400V drive 50Hz: 400 V 400V drive 60Hz: 460 V 575V drive: 575 V 690V drive: 690 V		RW	Num		RA			US
21.010	M2 Motor Rated Power Factor	0.00 to 1.00		0.85		RW	Num		RA			US
21.011	M2 Number of Motor Poles	Automatic (0) to 32 (16) Poles		Automatic (0) Poles		RW	Txt					US
21.012	M2 Stator Resistance	0.0000 to 99.9999 Ω		0.0000 Ω		RW	Num		RA			US
21.014	M2 Transient Inductance	0.000 to 500.000 mH		0.000 mH		RW	Num		RA			US
21.015	Motor 2 Active	Off (0) or On (1)				RO	Bit	ND	NC	PT		
21.016	M2 Motor Thermal Time Constant 1	1 to 3000 s		179 s		RW	Num					US
21.017	M2 Frequency Controller Proportional Gain Kp1		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num					US
21.018	M2 Frequency Controller Integral Gain Ki1		0.00 to 655.35 s ² /rad		0.10 s ² /rad	RW	Num					US
21.019	M2 Frequency Controller Differential Feedback Gain Kd1		0.00000 to 0.65535 1/rad		0.00000 1/rad	RW	Num					US
21.022	M2 Current Controller Kp Gain	0.00 to 4000.00		20.00		RW	Num					US
21.023	M2 Current Controller Ki Gain	0.000 to 600.000		40.000		RW	Num					US
21.024	M2 Stator Inductance	0.00 to 5000.00 mH		0.00 mH		RW	Num		RA			US
21.025	M2 Saturation Breakpoint 1		0.0 to 100.0 %		50.0 %	RW	Num					US
21.026	M2 Saturation Breakpoint 3		0.0 to 100.0 %		75.0 %	RW	Num					US
21.027	M2 Motoring Current Limit	±VM_MOTOR2_CURRENT_LIMIT %		165.0 % 175.0 %		RW	Num		RA			US
21.028	M2 Regenerating Current Limit	±VM_MOTOR2_CURRENT_LIMIT %		165.0 % 175.0 %		RW	Num		RA			US
21.029	M2 Symmetrical Current Limit	±VM_MOTOR2_CURRENT_LIMIT %		165.0 % 175.0 %		RW	Num		RA			US

Parameter		Range (⇄)		Default (⇒)		Type							
		OL	RFC-A	OL	RFC-A								
21.033	M2 Low Frequency Thermal Protection Mode	0 to 1		0		RW	Num						US
21.041	M2 Saturation Breakpoint 2		0.0 to 100.0 %		0.0 %	RW	Num						US
21.042	M2 Saturation Breakpoint 4		0.0 to 100.0 %		0.0 %	RW	Num						US

* When read via serial communications, this parameter will show pole pairs.

RW	Read / Write	RO	Read-only	Bit	Bit parameter	Txt	Text string	Date	Date parameter	Time	Time parameter
Chr	Character parameter	Bin	Binary parameter	IP	IP address	Mac	MAC address	Ver	Version number	SMP	Slot, menu, parameter
Num	Number parameter	DE	Destination	ND	No default value	RA	Rating dependent	NC	Non-copyable	PT	Protected
Fl	Filtered	US	User save	PS	Power-down save						

11.18 Menu 22: Additional Menu 0 set-up

Parameter		Range (⇄)		Default (⇒)		Type						
		OL	RFC-A	OL	RFC-A							
22.001	Parameter 00.001 Set-up	0.000 to 30.999		1.007		RW	Num				PT	US
22.002	Parameter 00.002 Set-up	0.000 to 30.999		1.006		RW	Num				PT	US
22.003	Parameter 00.003 Set-up	0.000 to 30.999		2.011		RW	Num				PT	US
22.004	Parameter 00.004 Set-up	0.000 to 30.999		2.021		RW	Num				PT	US
22.005	Parameter 00.005 Set-up	0.000 to 30.999		11.034		RW	Num				PT	US
22.006	Parameter 00.006 Set-up	0.000 to 30.999		5.007		RW	Num				PT	US
22.007	Parameter 00.007 Set-up	0.000 to 30.999		5.008		RW	Num				PT	US
22.008	Parameter 00.008 Set-up	0.000 to 30.999		5.009		RW	Num				PT	US
22.009	Parameter 00.009 Set-up	0.000 to 30.999		5.010		RW	Num				PT	US
22.010	Parameter 00.010 Set-up	0.000 to 30.999		11.044		RW	Num				PT	US
22.011	Parameter 00.011 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.012	Parameter 00.012 Set-up	0.000 to 30.999		8.010		RW	Num				PT	US
22.013	Parameter 00.013 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.014	Parameter 00.014 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.015	Parameter 00.015 Set-up	0.000 to 30.999		1.005		RW	Num				PT	US
22.016	Parameter 00.016 Set-up	0.000 to 30.999		7.007		RW	Num				PT	US
22.017	Parameter 00.017 Set-up	0.000 to 30.999		1.010		RW	Num				PT	US
22.018	Parameter 00.018 Set-up	0.000 to 30.999		1.021		RW	Num				PT	US
22.019	Parameter 00.019 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.020	Parameter 00.020 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.021	Parameter 00.021 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.022	Parameter 00.022 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.023	Parameter 00.023 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.024	Parameter 00.024 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.025	Parameter 00.025 Set-up	0.000 to 30.999		11.030		RW	Num				PT	US
22.026	Parameter 00.026 Set-up	0.000 to 30.999		0.000		RW	Num				PT	US
22.027	Parameter 00.027 Set-up	0.000 to 30.999		1.051		RW	Num				PT	US
22.028	Parameter 00.028 Set-up	0.000 to 30.999		2.004		RW	Num				PT	US
22.029	Parameter 00.029 Set-up	0.000 to 30.999		2.002		RW	Num				PT	US
22.030	Parameter 00.030 Set-up	0.000 to 30.999		11.042		RW	Num				PT	US
22.031	Parameter 00.031 Set-up	0.000 to 30.999		6.001		RW	Num				PT	US
22.032	Parameter 00.032 Set-up	0.000 to 30.999		5.013		RW	Num				PT	US
22.033	Parameter 00.033 Set-up	0.000 to 30.999		6.009		RW	Num				PT	US
22.034	Parameter 00.034 Set-up	0.000 to 30.999		8.035		RW	Num				PT	US
22.035	Parameter 00.035 Set-up	0.000 to 30.999		8.091		RW	Num				PT	US
22.036	Parameter 00.036 Set-up	0.000 to 30.999		7.055		RW	Num				PT	US
22.037	Parameter 00.037 Set-up	0.000 to 30.999		5.018		RW	Num				PT	US
22.038	Parameter 00.038 Set-up	0.000 to 30.999		5.012		RW	Num				PT	US
22.039	Parameter 00.039 Set-up	0.000 to 30.999		5.006		RW	Num				PT	US
22.040	Parameter 00.040 Set-up	0.000 to 30.999		5.011		RW	Num				PT	US
22.041	Parameter 00.041 Set-up	0.000 to 30.999		5.014		RW	Num				PT	US
22.042	Parameter 00.042 Set-up	0.000 to 30.999		5.015		RW	Num				PT	US
22.043	Parameter 00.043 Set-up	0.000 to 30.999		11.025		RW	Num				PT	US
22.044	Parameter 00.044 Set-up	0.000 to 30.999		11.023		RW	Num				PT	US
22.045	Parameter 00.045 Set-up	0.000 to 30.999		11.020		RW	Num				PT	US
22.046	Parameter 00.046 Set-up	0.000 to 30.999		12.042		RW	Num				PT	US
22.047	Parameter 00.047 Set-up	0.000 to 30.999		12.043		RW	Num				PT	US
22.048	Parameter 00.048 Set-up	0.000 to 30.999		12.044		RW	Num				PT	US
22.049	Parameter 00.049 Set-up	0.000 to 30.999		12.045		RW	Num				PT	US
22.050	Parameter 00.050 Set-up	0.000 to 30.999		12.046		RW	Num				PT	US
22.051	Parameter 00.051 Set-up	0.000 to 30.999		12.047		RW	Num				PT	US
22.052	Parameter 00.052 Set-up	0.000 to 30.999		12.048		RW	Num				PT	US
22.053	Parameter 00.053 Set-up	0.000 to 30.999		12.050		RW	Num				PT	US
22.054	Parameter 00.054 Set-up	0.000 to 30.999		12.051		RW	Num				PT	US

Parameter		Range (⇅)		Default (⇒)		Type					
		OL	RFC-A	OL	RFC-A	RW	Num			PT	US
22.055	Parameter 00.055 Set-up	0.000 to 30.999		12.041		RW	Num			PT	US
22.056	Parameter 00.056 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.057	Parameter 00.057 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.058	Parameter 00.058 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.059	Parameter 00.059 Set-up	0.000 to 30.999		11.047		RW	Num			PT	US
22.060	Parameter 00.060 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.061	Parameter 00.061 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.062	Parameter 00.062 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.063	Parameter 00.063 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.064	Parameter 00.064 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.065	Parameter 00.065 Set-up	0.000 to 30.999		3.010		RW	Num			PT	US
22.066	Parameter 00.066 Set-up	0.000 to 30.999		3.011		RW	Num			PT	US
22.067	Parameter 00.067 Set-up	0.000 to 30.999		3.079		RW	Num			PT	US
22.068	Parameter 00.068 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.069	Parameter 00.069 Set-up	0.000 to 30.999		5.040		RW	Num			PT	US
22.070	Parameter 00.070 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.071	Parameter 00.071 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.072	Parameter 00.072 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.073	Parameter 00.073 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.074	Parameter 00.074 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.075	Parameter 00.075 Set-up	0.000 to 30.999		0.000		RW	Num			PT	US
22.076	Parameter 00.076 Set-up	0.000 to 30.999		10.037		RW	Num			PT	US
22.077	Parameter 00.077 Set-up	0.000 to 30.999		11.032		RW	Num			PT	US
22.078	Parameter 00.078 Set-up	0.000 to 30.999		11.029		RW	Num			PT	US
22.079	Parameter 00.079 Set-up	0.000 to 30.999		11.031		RW	Num			PT	US
22.080	Parameter 00.080 Set-up	0.000 to 30.999		11.044		RW	Num			PT	US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	TE	Text string	Bin	Binary parameter	ND	No default value
NC	Not copied	PT	Protected parameter	RA	Rating dependant	US	User save	PS	Power-down save	DE	Destination		

12 Technical data

12.1 Drive technical data

12.1.1 Power and current ratings (Derating for switching frequency and temperature)

For a full explanation of 'Heavy Duty' refer to section 2.2 *Ratings* on page 10.

Table 12-1 Maximum permissible continuous output current @ 40 °C (104 °F) ambient

Model	Heavy Duty										
	Nominal rating		Maximum permissible continuous output current (A) for the following switching frequencies								
	kW	hp	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
100 V											
01100017	0.25	0.33									
01100024	0.37	0.5									
02100042	0.75	1.0									
02100056	1.1	1.5									
200 V											
01200017	0.25	0.33									
01200024	0.37	0.5									
01200033	0.55	0.75									
01200042	0.75	1.0									
02200024	0.37	0.5									
02200033	0.55	0.75									
02200042	0.75	1.0									
02200056	1.1	1.5									
02200075	1.5	2.0									
03200100	2.2	3.0									
04200133	3.0	3.0									
04200176	4.0	5.0									
400 V											
02400013	0.37	0.5									
02400018	0.55	0.75									
02400023	0.75	1.0									
02400032	1.1	1.5									
02400041	1.5	2.0									
03400056	2.2	3.0									
03400073	3.0	3.0									
03400094	4.0	5.0									
04400135	5.5	7.5									
04400170	7.5	10.0									

Table 12-2 Maximum permissible continuous output current @ 50 °C (122 °F)

Model	Heavy Duty								
	Maximum permissible continuous output current (A) for the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
100 V									
01100017									
01100024									
02100042									
02100056									
200 V									
01200017									
01200024									
01200033									
01200042									
02200024									
02200033									
02200042									
02200056									
02200075									
03200100									
04200133									
04200176									
400 V									
02400013									
02400018									
02400023									
02400032									
02400041									
03400056									
03400073									
03400094									
04400135									
04400170									

12.1.2 Power dissipation

Table 12-3 Losses @ 40°C (104°F) ambient

Model	Heavy Duty										
	Nominal rating		Drive losses (w) taking into account any current derating for the given conditions								
	kW	hp	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
100 V											
01100017	0.25	0.33									
01100024	0.37	0.5									
02100042	0.75	1.0									
02100056	1.1	1.5									
200 V											
01200017	0.25	0.33									
01200024	0.37	0.5									
01200033	0.55	0.75									
01200042	0.75	1.0									
02200024	0.37	0.5									
02200033	0.55	0.75									
02200042	0.75	1.0									
02200056	1.1	1.5									
02200075	1.5	2.0									
03200100	2.2	3.0									
04200133	3.0	3.0									
04200176	4.0	5.0									
400 V											
02400013	0.37	0.5									
02400018	0.55	0.75									
02400023	0.75	1.0									
02400032	1.1	1.5									
02400041	1.5	2.0									
03400056	2.2	3.0									
03400073	3.0	3.0									
03400094	4.0	5.0									
04400135	5.5	7.5									
04400170	7.5	10.0									

Table 12-4 Losses @ 50°C (122°F) ambient

Model	Heavy Duty										
	Nominal rating		Drive losses (w) taking into account any current derating for the given conditions								
	kW	hp	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
100 V											
01100017	0.25	0.33									
01100024	0.37	0.5									
02100042	0.75	1.0									
02100056	1.1	1.5									
200 V											
01200017	0.25	0.33									
01200024	0.37	0.5									
01200033	0.55	0.75									
01200042	0.75	1.0									
02200024	0.37	0.5									
02200033	0.55	0.75									
02200042	0.75	1.0									
02200056	1.1	1.5									
02200075	1.5	2.0									
03200100	2.2	3.0									
04200133	3.0	3.0									
04200176	4.0	5.0									
400 V											
02400013	0.37	0.5									
02400018	0.55	0.75									
02400023	0.75	1.0									
02400032	1.1	1.5									
02400041	1.5	2.0									
03400056	2.2	3.0									
03400073	3.0	3.0									
03400094	4.0	5.0									
04400135	5.5	7.5									
04400170	7.5	10.0									

12.1.3 Supply requirements

AC supply voltage:

- 200 V drive: 200 V to 240 V ±10 %
- 400 V drive: 380 V to 480 V ±10 %

Number of phases: 3

Maximum supply imbalance: 2 % negative phase sequence (equivalent to 3 % voltage imbalance between phases).

Frequency range: 48 to 62 Hz

For UL compliance only, the maximum supply symmetrical fault current must be limited to 100 kA

12.1.4 Line reactors

Input line reactors reduce the risk of damage to the drive resulting from poor phase balance or severe disturbances on the supply network.

Where line reactors are to be used, reactance values of approximately 2 % are recommended. Higher values may be used if necessary, but may result in a loss of drive output (reduced torque at high speed) because of the voltage drop.

For all drive ratings, 2 % line reactors permit drives to be used with a supply unbalance of up to 3.5 % negative phase sequence (equivalent to 5 % voltage imbalance between phases).

Severe disturbances may be caused by the following factors, for example:

- Power factor correction equipment connected close to the drive.
- Large DC drives having no or inadequate line reactors connected to the supply.
- Across the line (DOL) started motor(s) connected to the supply such that when any of these motors are started, the voltage dip exceeds 20 %

Such disturbances may cause excessive peak currents to flow in the input power circuit of the drive. This may cause nuisance tripping, or in extreme cases, failure of the drive.

Drives of low power rating may also be susceptible to disturbance when connected to supplies with a high rated capacity.

Line reactors are particularly recommended for use with the following drive models when one of the above factors exists, or when the supply capacity exceeds 175 kVA:

Model sizes xxxxxxxx to xxxxxxxx have an internal DC choke so they do not require AC line reactors except for cases of excessive phase unbalance or extreme supply conditions.

When required each drive must have its own reactor(s). Three individual reactors or a single three-phase reactor should be used.

Reactor current ratings

The current rating of the line reactors should be as follows:

Continuous current rating:

Not less than the continuous input current rating of the drive

Repetitive peak current rating:

Not less than twice the continuous input current rating of the drive

12.1.5 Motor requirements

No. of phases: 3

Maximum voltage:

- 200 V drive: 240 V
- 400 V drive: 480 V
- 575 V drive: 575 V
- 690 V drive: 690 V

12.1.6 Temperature, humidity and cooling method

Ambient temperature operating range:

-20 °C to 40 °C (-4 °F to 104 °F).

Output current derating must be applied at ambient temperatures >40 °C (104 °F).

Cooling method: Forced convection

Maximum humidity: 95 % non-condensing at 40 °C (104 °F)

12.1.7 Storage

-40 °C (-40 °F) to +60 °C (140 °F) for long term storage.

Storage time is 2 years.

Electrolytic capacitors in any electronic product have a storage period after which they require reforming or replacing.

The DC bus capacitors have a storage period of 10 years.

The low voltage capacitors on the control supplies typically have a storage period of 2 years and are thus the limiting factor.

Low voltage capacitors cannot be reformed due to their location in the circuit and thus may require replacing if the drive is stored for a period of 2 years or greater without power being applied.

It is therefore recommended that drives are powered up for a minimum of 1 hour after every 2 years of storage.

This process allows the drive to be stored for a further 2 years.

12.1.8 Altitude

Altitude range: 0 to 3,000 m (9,900 ft), subject to the following conditions:

1,000 m to 3,000 m (3,300 ft to 9,900 ft) above sea level: de-rate the maximum output current from the specified figure by 1% per 100 m (330 ft) above 1,000 m (3,300 ft)

For example at 3,000 m (9,900 ft) the output current of the drive would have to be de-rated by 20 %.

12.1.9 IP / UL Rating

The drive is rated to IP20 pollution degree 2 (dry, non-conductive contamination only).

In addition to this, drive sizes 2 and 3 are rated to IP21 standard (without an Adaptor Interface module installed).

The IP rating of a product is a measure of protection against ingress and contact to foreign bodies and water. It is stated as IP XX, where the two digits (XX) indicate the degree of protection provided as shown in Table 12-5.

Table 12-5 IP Rating degrees of protection

First digit	Second digit
Protection against contact and ingress of foreign bodies	Protection against ingress of water
0 No protection	0 No protection
1 Protection against large foreign bodies $\phi > 50$ mm (large area contact with the hand)	1 Protection against vertically falling drops of water
2 Protection against medium size foreign bodies $\phi > 12$ mm (finger)	2 Protection against spraywater (up to 15 ° from the vertical)
3 Protection against small foreign bodies $\phi > 2.5$ mm (tools, wires)	3 Protection against spraywater (up to 60 ° from the vertical)
4 Protection against granular foreign bodies $\phi > 1$ mm (tools, wires)	4 Protection against splashwater (from all directions)
5 Protection against dust deposit, complete protection against accidental contact.	5 Protection against heavy splash water (from all directions, at high pressure)
6 Protection against dust ingress, complete protection against accidental contact.	6 Protection against deckwater (e.g. in heavy seas)
7 -	7 Protection against immersion
8 -	8 Protection against submersion

Table 12-6 UL enclosure ratings

UL rating	Description
Type 1	Enclosures are intended for indoor use, primarily to provide a degree of protection against limited amounts of falling dirt.
Type 12	Enclosures are intended for indoor use, primarily to provide a degree of protection against dust, falling dirt and dripping non-corrosive liquids.

12.1.10 Corrosive gasses

Concentrations of corrosive gases must not exceed the levels given in:

- Table A2 of EN 50178:1998
- Class 3C2 of IEC 60721-3-3

This corresponds to the levels typical of urban areas with industrial activities and/or heavy traffic, but not in the immediate neighborhood of industrial sources with chemical emissions.

12.1.11 RoHS compliance

The drive meets EU directive 2002-95-EC for RoHS compliance.

12.1.12 Vibration

Size 2 & 3:

Bump Test

Testing in each of three mutually perpendicular axes in turn.

Referenced standard: IEC 60068-2-27: Test Ea:

Severity: 15 g peak, 11 ms pulse duration, half sine.

No. of Bumps: 18 (3 in each direction of each axis).

Referenced standard: IEC 60068-2-29: Test Eb:

Severity: 18 g peak, 6 ms pulse duration, half sine.

No. of Bumps: 600 (100 in each direction of each axis).

Random Vibration Test

Testing in each of three mutually perpendicular axes in turn.

Referenced standard: IEC 60068-2-64: Test Fh:

Severity: 1.0 m²/s³ (0.01 g²/Hz) ASD from 5 to 20 Hz

-3 db/octave from 20 to 200 Hz

Duration: 30 minutes in each of 3 mutually perpendicular axes.

Sinusoidal Vibration Test

Testing in each of three mutually perpendicular axes in turn.

Referenced standard: IEC 60068-2-6: Test Fc:

Frequency range: 5 to 500 Hz

Severity: 3.5 mm peak displacement from 5 to 9 Hz

10 m/s² peak acceleration from 9 to 200 Hz

15 m/s² peak acceleration from 200 to 500 Hz

Sweep rate: 1 octave/minute

Duration: 15 minutes in each of 3 mutually perpendicular axes.

Referenced standard: EN 61800-5-1: 2007, Section 5.2.6.4.

referring to IEC 60068-2-6:

Frequency range: 10 to 150 Hz

Severity: 0.075 mm amplitude from 10 to 57 Hz

1g peak acceleration from 57 to 150 Hz

Sweep rate: 1 octave/minute

Duration: 10 sweep cycles per axis in each of 3 mutually perpendicular axes.

Testing to Environmental Category ENV3

Subjected to resonance search in the range listed. If no natural frequencies found then subjected only to endurance test.

Referenced standard: Environment Category ENV3:

Frequency range: 5 to 13.2 Hz ± 1.0 mm

13.2 to 100 Hz ± 0.7g (6.9 ms⁻²)

For more information, please refer to section 12 *Vibration Test 1* of the Lloyds Register Test Specification Number 1.

12.1.13 Starts per hour

By electronic control: unlimited

By interrupting the AC supply: ≤20 (equally spaced)

12.1.14 Start up time

This is the time taken from the moment of applying power to the drive, to the drive being ready to run the motor:

Sizes 2: 1.5 Seconds

12.1.15 Output frequency / speed range

In all operating modes (Open loop, RFC-A) the maximum output frequency is limited to 550 Hz.

12.1.16 Accuracy and resolution

Frequency:

The absolute frequency accuracy depends on the accuracy of the oscillator used with the drive microprocessor. The accuracy of the oscillator is ± 2 % , and so the absolute frequency accuracy is ± 2 % of the reference, when a preset frequency is used. If an analog input is used, the absolute accuracy is further limited by the absolute accuracy of the analog input.

The following data applies to the drive only; it does not include the performance of the source of the control signals.

Open & closed loop resolution:

Preset frequency reference: 0.01 Hz

Analog input 1: 11 bit plus sign

Analog input 2: 11 bit plus sign

Current:

The resolution of the current feedback is 10 bit plus sign.

Accuracy: typical 2 %

worst case 5 %

12.1.17 Acoustic noise

The heatsink fan generates the majority of the sound pressure level at 1 m produced by the drive. The heatsink fan on size 1 to 4 drives is a variable speed fan. The drive controls the speed at which the fan runs based on the temperature of the heatsink and the drive's thermal model system.

Table 12-7 gives the sound pressure level at 1 m produced by the drive for the heatsink fan running at the maximum and minimum speeds.

Table 12-7 Acoustic noise data

Size	Max speed dBA	Min speed dBA
1		
2	45	
3		
4		

12.1.18 Overall dimensions

H Height including surface mounting brackets

W Width

D Projection forward of panel when surface mounted

Table 12-8 Overall drive dimensions

Size	Dimension		
	H	W	D
1	160 mm (6.3 in)	75 mm (2.95 in)	130 mm (5.1 in)
2	205 mm (8.07 in)		150 mm (5.9 in)
3	226 mm (8.9 in)	90 mm (3.54 in)	160 mm (6.3 in)
4	277 mm (10.9 in)	115 mm (4.5 in)	175 mm (6.9 in)

12.1.19 Weights

Table 12-9 Overall drive weights

Size	Model	kg	lb
1	All	0.75	1.65
2		1.0	2.2
3		1.5	3.3
4		3.13	6.9

12.1.20 SAFE TORQUE OFF data

TBA.

12.1.21 Input current, fuse and cable size ratings

The input current is affected by the supply voltage and impedance.

Typical input current

The values of typical input current are given to aid calculations for power flow and power loss.

The values of typical input current are stated for a balanced supply.

Maximum continuous input current

The values of maximum continuous input current are given to aid the selection of cables and fuses. These values are stated for the worst case condition with the unusual combination of stiff supply with bad balance. The value stated for the maximum continuous input current would only be seen in one of the input phases. The current in the other two phases would be significantly lower.

The values of maximum input current are stated for a supply with a 2 % negative phase-sequence imbalance and rated at the maximum supply fault current given in Table 12-10.

Table 12-10 Supply fault current used to calculate maximum input currents

Model	Symmetrical fault level (kA)
All	100



Fuses

The AC supply to the drive must be installed with suitable protection against overload and short-circuits. Table 12-11 shows the recommended fuse ratings. Failure to observe this requirement will cause risk of fire.

WARNING

Table 12-11 AC Input current and fuse ratings (100 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating	
				IEC gG	Class CC or Class J
				Maximum A	Maximum A
01100017	8.7	8.7		10	10
01100024	11.1	11.1		16	16
02100042	18.8	18.8		20	20
02100056	24.0	24.0		25	25

Table 12-12 AC Input current and fuse ratings (200 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating			
				IEC gG		Class CC or Class J	
				Maximum A		Maximum A	
				1ph	3ph	1ph	3ph
01200017	4.5	4.5		6		5	
01200024	5.3	5.3				10	
01200033	8.3	8.3		10			
01200042	10.4	10.4		16		16	
02200024	5.3/3.2	5.3/4.1		6		10	5
02200033	8.3/4.3	8.3/6.7		10		10	
02200042	10.4/5.4	10.4/7.5		16	10	16	10
02200056	14.9/7.4	14.9/11.3		20	16	20	16
02200075	18.1/9.1	18.1/13.5		25	20	25	20
03200100	23.9/12.8	23.9/17.7		25	20	25	20
04200133	23.7/13.5	23.7/16.9		25	20	25	20
04200176	17.0	21.3			25		25

Table 12-13 AC Input current and fuse ratings (400 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating	
				IEC gG	Class CC or Class J
				Maximum A	Maximum A
				A	A
02400013	2.1	2.4		6	5
02400018	2.6	2.9			
02400023	3.1	3.5			
02400032	4.7	5.1		10	10
02400041	5.8	6.2		10	10
03400056	8.3	8.7		10	10
03400073	10.2	12.2		16	16
03400094	13.1	14.8			20
04400135	14.0	16.3		20	20
04400170	18.5	20.7		25	25

NOTE

Ensure cables used suit local wiring regulations.



The nominal cable sizes below are only a guide. The mounting and grouping of cables affects their current-carrying capacity, in some cases smaller cables may be acceptable but in other cases a larger cable is required to avoid excessive temperature or voltage drop. Refer to local wiring regulations for the correct size of cables.

CAUTION

Table 12-14 Cable ratings (100 V)

Model	Cable size (IEC 60364-5-52) mm ²				Cable size (UL508C) AWG			
	Input		Output		Input		Output	
	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum
01100017	1		1		16		16	
01100024	1.5		1		14		16	
02100042	2.5		1		12		16	
02100056	4		1		10		16	

Table 12-15 Cable ratings (200 V)

Model	Cable size (IEC 60364-5-52) mm ²				Cable size (UL 508C) AWG			
	Input		Output		Input		Output	
	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum
01200017	1		1		16		16	
01200024	1		1		16		16	
01200033	1		1		16		16	
01200042	1		1		16		16	
02200024	1		1		16		16	
02200033	1		1		16		16	
02200042	1		1		16		16	
02200056	2.5/1.5		1		12/14		16	
02200075	2.5		1		12		16	
03200100	4		1.5		10/12		14	
04200133	4/2.5		2.5		10		12	
04200176	4		2.5		10		12	

Table 12-16 Cable ratings (400 V)

Model	Cable size (IEC 60364-5-52) mm ²				Cable size (UL 508C) AWG			
	Input		Output		Input		Output	
	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum	Nominal	Maximum
02400013	1		1		16		16	
02400018	1		1		16		16	
02400023	1		1		16		16	
02400032	1		1		16		16	
02400041	1		1		16		16	
03400056	1		1		14		16	
03400073	1.5		1		12		16	
03400094	2.5		1.5		12		14	
04400135	2.5		2.5		10		12	
04400170	4		2.5		10		12	

12.1.22 Protective ground cable ratings

Table 12-17 Protective ground cable ratings

Input phase conductor size	Minimum ground conductor size
≤ 10 mm ²	Either 10 mm ² or two conductors of the same cross-sectional area as the input phase conductor.
> 10 mm ² and ≤ 16 mm ²	The same cross-sectional area as the first input phase conductor.
> 16 mm ² and ≤ 35 mm ²	16 mm ²
> 35 mm ²	Half of the cross-sectional area of the input phase conductor.

12.1.23 Maximum motor cable lengths

Table 12-18 Maximum motor cable lengths (100 V drives)

100 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
01100017	50 m				37.5 m	25 m	18.75 m	12.5 m	9 m
01100024	50 m				37.5 m	25 m	18.75 m	12.5 m	9 m
02100042	100 m				75 m	50 m	37.5 m	25 m	18 m
02100056	100 m				75 m	50 m	37.5 m	25 m	18 m

Table 12-19 Maximum motor cable lengths (200 V drives)

200 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
01200017	50 m				37.5	25 m	18.75	12.5 m	9 m
01200024									
01200033									
01200042									
02200024	100 m				75 m	50 m	37.5	25 m	18 m
02200033									
02200042									
02200056									
02200075									
03200100	100 m				75 m	50 m	37.5	25 m	18 m
04200133	100 m				75 m	50 m	37.5	25 m	18 m
04200176									

Table 12-20 Maximum motor cable lengths (400 V drives)

400 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	0.667 kHz	1 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
02400013	100 m				75 m	50 m	37.5	25 m	18.25 m
02400018									
02400023									
02400032									
02400041									
03400056	100 m				75 m	50 m	37.5	25 m	18.25 m
03400073									
03400094									
04400135									
04400170	100 m				75 m	50 m	37.5	25 m	18.25 m

- Cable lengths in excess of the specified values may be used only when special techniques are adopted; refer to the supplier of the drive.
- The default switching frequency is 3 kHz for Open-loop and RFC-A. The maximum cable length is reduced from that shown in Table 12-18, Table 12-19 and Table 12-20 if high capacitance motor cables are used. For further information, refer to section on page 39.

12.1.24 Braking resistor values

Table 12-21 Minimum resistance values and peak power rating for the braking resistor at 40 °C (104 °F)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
100 V			
01100017	130	1.2	
01100024	130	1.2	
02100042	130	1.2	
02100056	130	1.2	
200 V			
01200017	130	1.2	
01200024	130	1.2	
01200033	130	1.2	
01200042	130	1.2	
02200024	68	2.2	
02200033	68	2.2	
02200042	68	2.2	
02200056	68	2.2	
02200075	68	2.2	
03200100	45	3.4	
04200133	22	6.9	
04200176	22	6.9	
400 V			
02400013	270	2.3	
02400018	270	2.3	
02400023	270	2.3	
02400032	270	2.3	
02400041	270	2.3	
03400056	100	6.1	
03400073	100	6.1	
03400094	100	6.1	
04400135	50	12.2	
04400170	50	12.2	

* Resistor tolerance: ±10 %

12.1.25 Torque settings

Table 12-22 Drive relay terminal data

Model	Connection type	Torque setting
All	Screw terminals	0.5 N m (0.4 lb ft)

Table 12-23 Drive power terminal data

Model size	AC terminals	DC and braking	Ground terminal
1	0.5 Nm (0.4 lb ft)		1.5 N m (1.1 lb ft)
2	1.4 Nm (1 lb ft)		
3			
4			

Table 12-24 Terminal block maximum cable sizes

Model size	Terminal block description	Max cable size
All	Control connector	1.5 mm ² (16 AWG)
	2 way relay connector	2.5 mm ² (12 AWG)
	STO connector	0.5 mm ² (20 AWG)
All	AC input power connector	6 mm ² (10 AWG)
All	AC output power connector	2.5 mm ² (12 AWG)

12.1.26 Electromagnetic compatibility (EMC)

This is a summary of the EMC performance of the drive. For full details, refer to the *EMC Data Sheet* which can be obtained from the supplier of the drive.

Table 12-25 Immunity compliance

Standard	Type of immunity	Test specification	Application	Level
IEC61000-4-2 EN61000-4-2	Electrostatic discharge	6 kV contact discharge 8 kV air discharge	Module enclosure	Level 3 (industrial)
IEC61000-4-3 EN61000-4-3	Radio frequency radiated field	10 V/m prior to modulation 80 - 1000 MHz 80 % AM (1 kHz) modulation	Module enclosure	Level 3 (industrial)
IEC61000-4-4 EN61000-4-4	Fast transient burst	5/50 ns 2 kV transient at 5 kHz repetition frequency via coupling clamp	Control lines	Level 4 (industrial harsh)
			Power lines	Level 3 (industrial)
IEC61000-4-5 EN61000-4-5	Surges	Common mode 4 kV 1.2/50 μs waveshape Differential mode 2 kV 1.2/50 μs waveshape	AC supply lines: line to ground	Level 4
			AC supply lines: line to line	Level 3
			Signal ports to ground ¹	Level 2
IEC61000-4-6 EN61000-4-6	Conducted radio frequency	10V prior to modulation 0.15 - 80 MHz 80 % AM (1 kHz) modulation	Control and power lines	Level 3 (industrial)
IEC61000-4-11 EN61000-4-11	Voltage dips and interruptions	-30 % 10 ms +60 % 100 ms -60 % 1 s <-95 % 5 s	AC power ports	
IEC61000-6-1 EN61000-6-1:2007	Generic immunity standard for the residential, commercial and light - industrial environment			Complies
IEC61000-6-2 EN61000-6-2:2005	Generic immunity standard for the industrial environment			Complies
IEC61800-3 EN61800-3:2004	Product standard for adjustable speed power drive systems (immunity requirements)		Meets immunity requirements for first and second environments	

¹ See section *Surge immunity of control circuits - long cables and connections outside a building* on page 48 for control ports for possible requirements regarding grounding and external surge protection

Emission

The drive contains an in-built filter for basic emission control. An additional optional external filter provides further reduction of emission. The requirements of the following standards are met, depending on the motor cable length and switching frequency.

Table 12-26 Size 1 emission compliance (200 V drives)


Motor cable length (m)	Switching frequency (kHz)					
	3	4	6	8	12	16
Using internal filter:						
0 – 2						
Using internal filter and external ferrite ring (1 turn):						
0 – 10						
10 - 20						
Using external filter:						
0 – 20						
20 - 100						

Table 12-27 Size 1 emission compliance (400 V drives)

Motor cable length (m)	Switching frequency (kHz)					
	3	4	6	8	12	16
Using internal filter:						
0 – 5						
Using internal filter and external ferrite ring (2 turns):						
0 – 10						
Using external filter:						
0 – 20						
20 - 100						

Key (shown in decreasing order of permitted emission level):

- E2R EN 61800-3:2004 second environment, restricted distribution (Additional measures may be required to prevent interference)
- E2U EN 61800-3:2004 second environment, unrestricted distribution
- I Industrial generic standard EN 61000-6-4:2007
EN 61800-3:2004 first environment restricted distribution (The following caution is required by EN 61800-3:2004)



This is a product of the restricted distribution class according to IEC 61800-3. In a residential environment this product may cause radio interference in which case the user may be required to take adequate measures.

CAUTION

- R Residential generic standard EN 61000-6-3:2007
EN 61800-3:2004 first environment unrestricted distribution

EN 61800-3:2004 defines the following:

- The first environment is one that includes residential premises. It also includes establishments directly connected without intermediate transformers to a low-voltage power supply network which supplies buildings used for residential purposes. The second environment is one that includes all establishments other than those directly connected to a low-voltage power supply network which supplies buildings used for residential purposes.
- Restricted distribution is defined as a mode of sales distribution in which the manufacturer restricts the supply of equipment to suppliers, customers or users who separately or jointly have technical competence in the EMC requirements of the application of drives.

IEC 61800-3:2004 and EN 61800-3:2004

The 2004 revision of the standard uses different terminology to align the requirements of the standard better with the EC EMC Directive.

Power drive systems are categorized C1 to C4:

Category	Definition	Corresponding code used above
C1	Intended for use in the first or second environments	R
C2	Not a plug-in or movable device, and intended for use in the first environment only when installed by a professional, or in the second environment	I
C3	Intended for use in the second environment, not the first environment	E2U
C4	Rated at over 1000 V or over 400 A, intended for use in complex systems in the second environment	E2R

Note that category 4 is more restrictive than E2R, since the rated current of the PDS must exceed 400 A or the supply voltage exceed 1000 V, for the complete PDS.

12.2 Optional external EMC filters

Table 12-28 EMC filter cross reference

Model	CT Part number
200 V	
400 V	

12.2.1 EMC filter ratings

Table 12-29 Optional external EMC filter details

CT part number	Maximum continuous current		Voltage rating		IP rating	Power dissipation at rated current		Ground leakage		Discharge resistors
	@ 40 °C (104 °F)	@ 50 °C (122 °F)	IEC	UL		@ 40 °C (104 °F)	@ 50 °C (122 °F)	Balanced supply phase-to-phase and phase-to-ground	Worst case	
	A	A	V	V		W	W	mA	mA	

12.2.2 Overall EMC filter dimensions

Table 12-30 Optional external EMC filter dimensions

CT part number	Dimension (mm)						Weight	
	H		W		D		kg	lb
	mm	inch	mm	inch	mm	inch		

12.2.3 EMC filter torque settings


Table 12-31 Optional external EMC Filter terminal data

CT part number	Power connections				Ground connections		
	Max cable size		Max torque		Ground stud size	Max torque	
	mm ²	AWG	N m	lb ft		N m	lb ft

13 Diagnostics

The keypad display on the drive gives various information about the status of the drive. The keypad display provides information on the following categories:

- Trip indications
- Alarm indications
- Status indications




Users must not attempt to repair a drive if it is faulty, nor carry out fault diagnosis other than through the use of the diagnostic features described in this chapter. If a drive is faulty, it must be returned to an authorized Control Techniques distributor for repair.

WARNING

13.1 Status modes (Keypad and LED status)

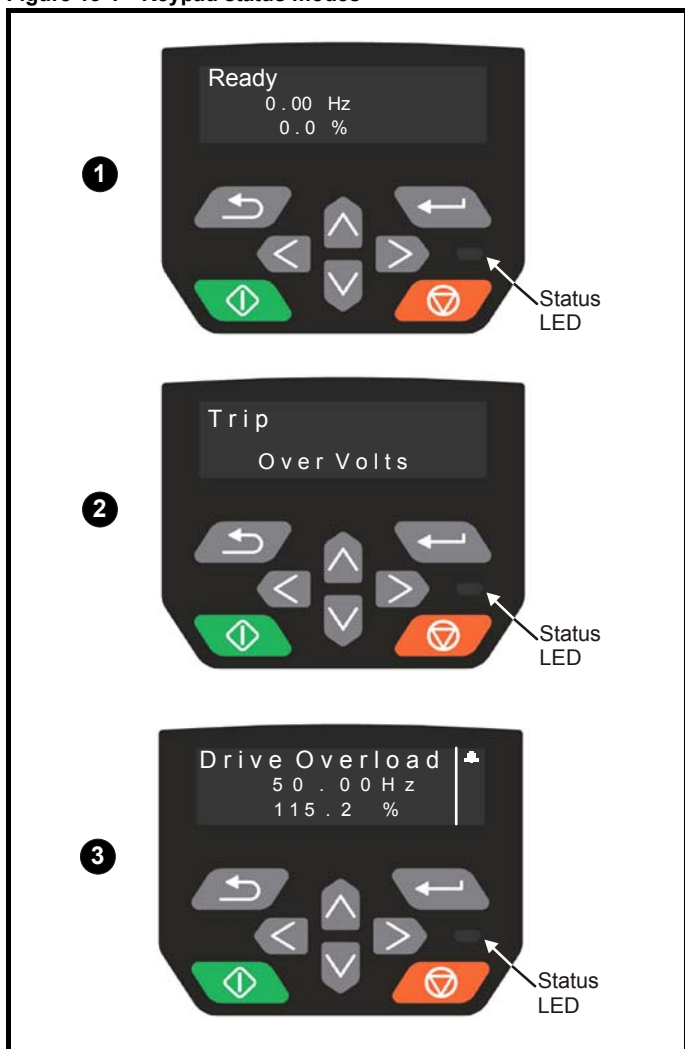Figure 13-1 Keypad status modes



- 1 Drive OK status
- 2 Trip status
- 3 Alarm status

13.2 Trip indications

The output of the drive is disabled under any trip condition so that the drive stops controlling the motor. If the motor is running when the trip occurs it will coast to a stop.


During a trip condition, where a CI-Keypad is being used, the upper row of the display indicates that a trip has occurred and the lower row of the keypad display will show the trip string. Some trips have a sub-trip number to provide additional information about the trip. If a trip has a sub-trip number, the sub-trip number is flashed alternately with the trip string unless there is space on the second row for both the trip string and the sub-trip number in which case both the trip string and sub-trip information is displayed separated by a decimal point.

If a display is not being used, the drive LED Status indicator will flash with 0.5 s duty cycle if the drive has tripped. Refer to Figure 13-2 *Key to sub-trip number*.

Trips are listed alphabetically in Table 13-3 *Serial communications look up table* on page 190 based on the trip indication shown on the drive display. Alternatively, the drive status can be read in Pr 10.001 'Drive OK' using communication protocols. The most recent trip can be read in Pr 10.020 providing a trip number. It must be noted that the hardware trips (HF01 to HF19) do not have trip numbers. The trip number must be checked in Table 13-3 to identify the specific trip.

Example

1. Trip code 2 is read from Pr 10.020 via serial communications.
2. Checking Table 13-2 shows Trip 2 is an Over Volts trip.



3. Look up Over Volts in Table 13-2.
4. Perform checks detailed under *Diagnosis*.

13.3 Identifying a trip / trip source

Some trips only contain a trip string whereas some other trips have a trip string along with a sub-trip number which provides the user with additional information about the trip.

A trip can be generated from a control system or from a power system. The sub-trip number associated with the trips listed in Table 13-1 is in the form *xyzz* and used to identify the source of the trip.

Table 13-1 Trips associated with *xyzz* sub-trip number


Over Volts	Phase Loss
OI ac	Power Comms
OI Brake	OI Snubber
PSU	OHT Rectifier
OHT Inverter	Temp Feedback
OHT Power	Power Data
OHT dc bus	Soft Start

The digits *xx* are 00 for a trip generated by the control system. For a drive, if the trip is related to the power system then *xx* will have a value of 01, when displayed the leading zeros are suppressed.

For a control system trip (*xx* is zero), the *y* digit where relevant is defined for each trip. If not relevant, the *y* digit will have a value of zero.

The *zz* digits give the reason for the trip and are defined in each trip description.

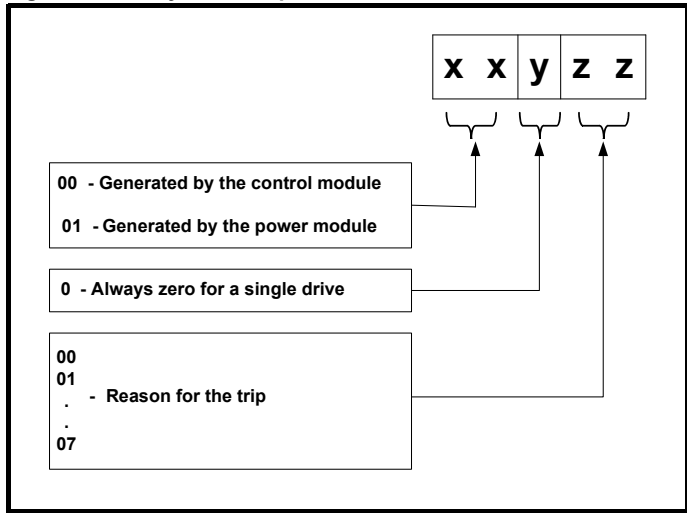Figure 13-2 Key to sub-trip number



13.4 Trips, Sub-trip numbers

Table 13-2 Trip indications

Trip	Diagnosis				
An Input 1 Loss	Analog input 1 current loss				
28	<p>The <i>An Input 1 Loss</i> trip indicates that a current loss was detected in current mode on Analog input 1 (Terminal 2). In 4-20 mA and 20-4 mA modes loss of input is detected if the current falls below 3 mA.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check control wiring is correct • Check control wiring is undamaged • Check the <i>Analog Input 1 Mode</i> (07.007) • Current signal is present and greater than 3 mA 				
An Input 1 OI	Analog input 1 over-current				
189	Current input on analog input 1 exceeds 24mA.				
An Input 2 Loss	Analog input 2 current loss				
29	<p>The <i>An Input 2 Loss</i> trip indicates that a current loss was detected in current mode on Analog input 2 (Terminal 5). In 4-20 mA and 20-4 mA modes loss of input is detected if the current falls below 3 mA.</p> <p>Recommend actions:</p> <ul style="list-style-type: none"> • Check control wiring is correct • Check control wiring is undamaged • Check the <i>Analog Input 2 Mode</i> (07.011) • Current signal is present and greater than 3 mA 				
An Input 2 OI	Analog input 2 over-current				
190	Current input on analog input 2 exceeds 24 mA.				
Autotune	Measured inertia has exceeded the parameter range				
13	<p>The drive has tripped during a rotating autotune or mechanical load measurement test. The cause of the trip can be identified from the associated sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Measured inertia has exceeded the parameter range during a mechanical load measurement</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check motor cable wiring is correct 	Sub-trip	Reason	1	Measured inertia has exceeded the parameter range during a mechanical load measurement
Sub-trip	Reason				
1	Measured inertia has exceeded the parameter range during a mechanical load measurement				
Autotune Stopped	Autotune test stopped before completion				
18	<p>The drive was prevented from completing an autotune test, because either the drive enable or the drive run were removed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the drive enable signal (Terminal 31 & 34) were active during the autotune 				
Brake R Too Hot	Braking resistor overload timed out (I^2t)				
19	<p>The <i>Brake R Too Hot</i> trip indicates that braking resistor overload has timed out. The value in <i>Braking Resistor Thermal Accumulator</i> (10.039) is calculated using <i>Braking Resistor Rated Power</i> (10.030), <i>Braking Resistor Thermal Time Constant</i> (10.031) and <i>Braking Resistor Resistance</i> (10.061). The <i>It.br</i> trip is initiated when the <i>Braking Resistor Thermal Accumulator</i> (10.039) reaches 100 %.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the values entered in Pr 10.030, Pr 10.031 and Pr 10.061 are correct • If an external thermal protection device is being used and the braking resistor software overload protection is not required, set Pr 10.030, Pr 10.031 or Pr 10.061 to 0 to disable the trip. 				
Card Access	NV Media Card Write fail				
185	<p>The <i>Card Access</i> trip indicates that the drive was unable to access the NV Media Card. If the trip occurs during the data transfer to the card then the file being written may be corrupted. If the trip occurs when the data being transferred to the drive then the data transfer may be incomplete. If a parameter file is transferred to the drive and this trip occurs during the transfer, the parameters are not saved to non-volatile memory, and so the original parameters can be restored by powering the drive down and up again.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check NV Media Card is installed / located correctly • Replace the NV Media Card 				
Card Boot	The Menu 0 parameter modification cannot be saved to the NV Media Card				
177	<p>Menu 0 changes are automatically saved on exiting edit mode.</p> <p>The <i>Card Boot</i> trip will occur if a write to a Menu 0 parameter has been initiated via the keypad by exiting edit mode and Pr 11.042 is set for auto or boot mode, but the necessary boot file has not been created on the NV Media Card to take the new parameter value. This occurs when Pr 11.042 is changed to Auto (3) or Boot (4) mode, but the drive is not subsequently reset.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure that Pr 11.042 is correctly set, and then reset the drive to create the necessary file on the NV Media Card • Re-attempt the parameter write to the Menu 0 parameter 				

Card Busy	NV Media Card cannot be accessed as it is being accessed by an option module								
178	<p>The <i>Card Busy</i> trip indicates that an attempt has been made to access a file on NV Media Card, but the NV Media Card is already being accessed by an Option Module. No data is transferred.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Wait for the option module to finish accessing the NV Media Card and re-attempt the required function 								
Card Compare	NV Media Card file/data is different to the one in the drive								
188	<p>A compare has been carried out between a file on the NV Media Card, a <i>Card Compare</i> trip is initiated if the parameters on the NV Media Card are different to the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Set Pr mm.000 to 0 and reset the trip • Check to ensure the correct data block on the NV Media Card has been used for the compare 								
Card Data Exists	NV Media Card data location already contains data								
179	<p>The <i>Card Data Exists</i> trip indicates that an attempt has been made to store data on a NV Media Card in a data block which already contains data.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Erase the data in data location • Write data to an alternative data location 								
Card Drive Mode	NV Media Card parameter set not compatible with current drive mode								
187	<p>The <i>Card Drive Mode</i> trip is produced during a compare if the drive mode in the data block on the NV Media Card is different from the current drive mode. This trip is also produced if an attempt is made to transfer parameters from a NV Media Card to the drive if the operating mode in the data block is outside the allowed range of operating modes.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the destination drive supports the drive operating mode in the parameter file. • Clear the value in Pr mm.000 and reset the drive • Ensure destination drive operating mode is the same as the source parameter file 								
Card Error	NV Media Card data structure error								
182	<p>The <i>Card Error</i> trip indicates that an attempt has been made to access the NV Media Card but an error has been detected in the data structure on the card. Resetting the trip will cause the drive to erase and create the correct folder structure. The cause of the trip can be identified by the sub-trip.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The required folder and file structure is not present</td> </tr> <tr> <td>2</td> <td>The HEADER.DAT file is corrupted</td> </tr> <tr> <td>3</td> <td>Two or more files in the OLDDATA\DRIVE folder have the same file identification number</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Erase all the data block and re-attempt the process • Ensure the card is located correctly • Replace the NV Media Card 	Sub-trip	Reason	1	The required folder and file structure is not present	2	The HEADER.DAT file is corrupted	3	Two or more files in the OLDDATA\DRIVE folder have the same file identification number
Sub-trip	Reason								
1	The required folder and file structure is not present								
2	The HEADER.DAT file is corrupted								
3	Two or more files in the OLDDATA\DRIVE folder have the same file identification number								
Card Full	NV Media Card full								
184	<p>The <i>Card Full</i> trip indicates that an attempt has been made to create a data block on a NV Media Card, but there is not enough space left on the card.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Delete a data block or the entire NV Media Card to create space • Use a different NV Media Card 								
Card No Data	NV Media Card data not found								
183	<p>The <i>Card No Data</i> trip indicates that an attempt has been made to access non-existent file or block on the NV Media Card.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure data block number is correct 								
Card Option	NV Media Card trip; option modules installed are different between source drive and destination drive								
180	<p>The <i>Card Option</i> trip indicates that parameter data or default difference data is being transferred from the NV Media Card to the drive, but the option module category is different between the source and destination drives. This trip does not stop the data transfer, but is a warning that the data for the option module that is different will be set to the default values and not the values from the card. This trip also applies if a compare is attempted between the data block and the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the correct option module is installed. • Press the red reset button to acknowledge that the parameters for the option module installed will be at their default values • This trip can be suppressed by setting Pr mm.000 to 9666 and resetting the drive. 								

Card Product	NV Media Card data blocks are not compatible with the drive derivative						
175	<p>The <i>Card Product</i> trip is initiated either at power-up or when the card is accessed, if <i>Drive Derivative</i> (11.028) is different between the source and target drives. This trip can be reset and data can be transferred in either direction between the drive and the card.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Use a different NV Media Card This trip can be suppressed by setting Pr mm.000 to 9666 and resetting the drive 						
Card Rating	NV Media Card Trip; The voltage and / or current rating of the source and destination drives are different						
186	<p>The <i>Card Rating</i> trip indicates that parameter data is being transferred from the NV Media Card to the drive, but the current and / or voltage ratings are different between source and destination drives. This trip also applies if a compare (using Pr mm.000 set to 8yyy) is attempted between the data block on a NV Media Card and the drive. The Card Rating trip does not stop the data transfer but is a warning that rating specific parameters with the RA attribute may not be transferred to the destination drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Reset the drive to clear the trip Ensure that the drive rating dependent parameters have transferred correctly 						
Card Read Only	NV Media Card has the Read Only bit set						
181	<p>The <i>Card Read Only</i> trip indicates that an attempt has been made to modify a read-only NV Media Card or a read-only data block. A NV Media Card is read-only if the read-only flag has been set.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Clear the read only flag by setting Pr mm.000 to 9777 and reset the drive. This will clear the read-only flag for all data blocks in the NV Media Card 						
Card Slot	NV Media Card trip; Option module file transfer has failed						
174	<p>The Card Slot trip is initiated, if the transfer of an option module file to or from a module failed because the option module does not respond correctly. If this happens this trip is produced with the sub-trip number indicating the option module slot number.</p>						
Control Word	Trip initiated from the Control Word (06.042)						
35	<p>The <i>Control Word</i> trip is initiated by setting bit 12 on the control word in Pr 06.042 when the control word is enabled (Pr 06.043 = On).</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check the value of Pr 06.042. Disable the control word in <i>Control Word Enable</i> (Pr 06.043) <ul style="list-style-type: none"> Bit 12 of the control word set to a one causes the drive to trip on Control Word When the control word is enabled, the trip can only be cleared by setting bit 12 to zero 						
Current Offset	Current feedback offset error						
225	<p>The <i>Current Offset</i> trip indicates that the current offset is too large to be trimmed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Ensure that there is no possibility of current flowing in the output phases of the drive when the drive is not enabled Hardware fault – Contact the supplier of the drive 						
Data Changing	Drive parameters are being changed						
97	<p>A user action or a file system write is active that is changing the drive parameters and the drive has been commanded to enable, i.e. <i>Drive Active</i> (10.002) = 1.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Ensure the drive is not enabled when defaults are loading 						
Derivative ID	Derivative file error						
246	<p>Derivative file error with sub-trips:</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Derivative file different</td> </tr> <tr> <td>2</td> <td>Derivative file missing</td> </tr> </tbody> </table>	Sub-trip	Reason	1	Derivative file different	2	Derivative file missing
Sub-trip	Reason						
1	Derivative file different						
2	Derivative file missing						

Derivative Image	Derivative product image error																																																															
248	The <i>Derivative Image</i> trip indicates that an error has been detected in the derivative product image. The reason for the trip can be identified by the sub-trip number.																																																															
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> <th>Comments</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Divide by zero</td> <td></td> </tr> <tr> <td>2</td> <td>Undefined trip</td> <td></td> </tr> <tr> <td>3</td> <td>Attempted fast parameter access set-up with non-existent parameter</td> <td></td> </tr> <tr> <td>4</td> <td>Attempted access to non-existent parameter</td> <td></td> </tr> <tr> <td>5</td> <td>Attempted write to read-only parameter</td> <td></td> </tr> <tr> <td>6</td> <td>Attempted and over-range write</td> <td></td> </tr> <tr> <td>7</td> <td>Attempted read from write-only parameter</td> <td></td> </tr> <tr> <td>30</td> <td>The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5</td> <td>Occurs when the drive powers-up or the image is programmed. The image tasks will not run</td> </tr> <tr> <td>31</td> <td>The image requires more RAM for heap and stack than can be provided by the drive.</td> <td>As 30</td> </tr> <tr> <td>32</td> <td>The image requires an OS function call that is higher than the maximum allowed.</td> <td>As 30</td> </tr> <tr> <td>33</td> <td>The ID code within the image is not valid</td> <td>As 30</td> </tr> <tr> <td>34</td> <td>The derivative image has been changed for an image with a different derivative number</td> <td>As 30</td> </tr> <tr> <td>40</td> <td>The timed task has not completed in time and has been suspended</td> <td></td> </tr> <tr> <td>41</td> <td>Undefined function called, i.e. a function in the host system vector table that has not been assigned</td> <td>As 40</td> </tr> <tr> <td>51</td> <td>Core menu customization table CRC check failed</td> <td>As 30</td> </tr> <tr> <td>52</td> <td>Customizable menu table CRC check failed</td> <td>As 30</td> </tr> <tr> <td>53</td> <td>Customizable menu table changed</td> <td>Occurs when the drive powers-up or the image is programmed and the table has changed. Defaults are loaded for the derivative menu and the trip will keep occurring until drive parameters are saved.</td> </tr> <tr> <td>61</td> <td>The option module installed in slot 1 is not allowed with the derivative image</td> <td>As 30</td> </tr> <tr> <td>80</td> <td>Image is not compatible with the control board</td> <td>Initiated from within the image code</td> </tr> <tr> <td>81</td> <td>Image is not compatible with the control board serial number</td> <td>As 80</td> </tr> </tbody> </table>	Sub-trip	Reason	Comments	1	Divide by zero		2	Undefined trip		3	Attempted fast parameter access set-up with non-existent parameter		4	Attempted access to non-existent parameter		5	Attempted write to read-only parameter		6	Attempted and over-range write		7	Attempted read from write-only parameter		30	The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5	Occurs when the drive powers-up or the image is programmed. The image tasks will not run	31	The image requires more RAM for heap and stack than can be provided by the drive.	As 30	32	The image requires an OS function call that is higher than the maximum allowed.	As 30	33	The ID code within the image is not valid	As 30	34	The derivative image has been changed for an image with a different derivative number	As 30	40	The timed task has not completed in time and has been suspended		41	Undefined function called, i.e. a function in the host system vector table that has not been assigned	As 40	51	Core menu customization table CRC check failed	As 30	52	Customizable menu table CRC check failed	As 30	53	Customizable menu table changed	Occurs when the drive powers-up or the image is programmed and the table has changed. Defaults are loaded for the derivative menu and the trip will keep occurring until drive parameters are saved.	61	The option module installed in slot 1 is not allowed with the derivative image	As 30	80	Image is not compatible with the control board	Initiated from within the image code	81	Image is not compatible with the control board serial number	As 80
	Sub-trip	Reason	Comments																																																													
	1	Divide by zero																																																														
	2	Undefined trip																																																														
	3	Attempted fast parameter access set-up with non-existent parameter																																																														
	4	Attempted access to non-existent parameter																																																														
	5	Attempted write to read-only parameter																																																														
	6	Attempted and over-range write																																																														
	7	Attempted read from write-only parameter																																																														
	30	The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5	Occurs when the drive powers-up or the image is programmed. The image tasks will not run																																																													
	31	The image requires more RAM for heap and stack than can be provided by the drive.	As 30																																																													
	32	The image requires an OS function call that is higher than the maximum allowed.	As 30																																																													
	33	The ID code within the image is not valid	As 30																																																													
	34	The derivative image has been changed for an image with a different derivative number	As 30																																																													
	40	The timed task has not completed in time and has been suspended																																																														
	41	Undefined function called, i.e. a function in the host system vector table that has not been assigned	As 40																																																													
	51	Core menu customization table CRC check failed	As 30																																																													
	52	Customizable menu table CRC check failed	As 30																																																													
	53	Customizable menu table changed	Occurs when the drive powers-up or the image is programmed and the table has changed. Defaults are loaded for the derivative menu and the trip will keep occurring until drive parameters are saved.																																																													
61	The option module installed in slot 1 is not allowed with the derivative image	As 30																																																														
80	Image is not compatible with the control board	Initiated from within the image code																																																														
81	Image is not compatible with the control board serial number	As 80																																																														
	<p>Recommended actions:</p> <ul style="list-style-type: none"> Contact the supplier of the drive 																																																															
Destination	Two or more parameters are writing to the same destination parameter																																																															
199	<p>The <i>Destination</i> trip indicates that destination output parameters of two or more logic functions (Menus 7, 8, 9, 12 or 14) within the drive are writing to the same parameter.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Set Pr mm.000 to 'Destinations' or 12001 and check all visible parameters in all menus for parameter write conflicts 																																																															
Drive config	Drive configuration																																																															
232	The hardware ID does not match the user software ID.																																																															

EEPROM Fail	Default parameters have been loaded																				
31	The <i>EEPROM Fail</i> trip indicates that default parameters have been loaded. The exact cause/reason of the trip can be identified from the sub-trip number.																				
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The most significant digit of the internal parameter database version number has changed</td> </tr> <tr> <td>2</td> <td>The CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set of parameters cannot be loaded</td> </tr> <tr> <td>3</td> <td>The drive mode restored from internal non-volatile memory is outside the allowed range for the product or the derivative image does not allow the previous drive mode</td> </tr> <tr> <td>4</td> <td>The drive derivative image has changed</td> </tr> <tr> <td>5</td> <td>The power stage hardware has changed</td> </tr> <tr> <td>6</td> <td>The internal I/O hardware has changed</td> </tr> <tr> <td>7</td> <td>Reserved</td> </tr> <tr> <td>8</td> <td>The control board hardware has changed</td> </tr> <tr> <td>9</td> <td>The checksum on the non-parameter area of the EEPROM has failed</td> </tr> </tbody> </table>	Sub-trip	Reason	1	The most significant digit of the internal parameter database version number has changed	2	The CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set of parameters cannot be loaded	3	The drive mode restored from internal non-volatile memory is outside the allowed range for the product or the derivative image does not allow the previous drive mode	4	The drive derivative image has changed	5	The power stage hardware has changed	6	The internal I/O hardware has changed	7	Reserved	8	The control board hardware has changed	9	The checksum on the non-parameter area of the EEPROM has failed
	Sub-trip	Reason																			
	1	The most significant digit of the internal parameter database version number has changed																			
	2	The CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set of parameters cannot be loaded																			
	3	The drive mode restored from internal non-volatile memory is outside the allowed range for the product or the derivative image does not allow the previous drive mode																			
	4	The drive derivative image has changed																			
	5	The power stage hardware has changed																			
	6	The internal I/O hardware has changed																			
	7	Reserved																			
8	The control board hardware has changed																				
9	The checksum on the non-parameter area of the EEPROM has failed																				
Recommended actions:																					
<ul style="list-style-type: none"> • Default the drive and perform a reset • Allow sufficient time to perform a save before the supply to the drive is removed • If the trip persists - return drive to supplier 																					
External Trip	An External trip is initiated																				
6	An <i>External Trip</i> trip has occurred. The cause of the trip can be identified from the sub trip number displayed after the trip string. See table below. An external trip can also be initiated by writing a value of 6 in Pr 10.038 .																				
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td><i>External Trip</i> (10.032) = 1</td> </tr> </tbody> </table>	Sub-trip	Reason	1	<i>External Trip</i> (10.032) = 1																
Sub-trip	Reason																				
1	<i>External Trip</i> (10.032) = 1																				
Recommended actions:																					
<ul style="list-style-type: none"> • Check the value of Pr 10.032. • Select 'Dest' (or enter 12001) in Pr mm.000 and check for a parameter controlling Pr 10.032. • Ensure Pr 10.032 or Pr 10.038 (= 6) is not being controlled by serial comms 																					
Fan Fail	Fan fail																				
173	Recommended actions:																				
	<ul style="list-style-type: none"> • Check that the fan is installed and connected correctly. • Check that the fan is not obstructed. • Contact the supplier of the drive to replace the fan. 																				
File changed	File changed																				
247	Recommended action: <ul style="list-style-type: none"> • Power cycle the drive. 																				
FW incompatible	Firmware incompatibility																				
237	The <i>FW incompatible</i> trip indicates that the user firmware is incompatible with the power firmware.																				
	Recommended actions: <ul style="list-style-type: none"> • Re-program the drive with the latest version of the drive firmware for Unidrive M400. 																				
HF01	Data processing error: CPU hardware fault																				
	The <i>HF01</i> trip indicates that a CPU address error has occurred. This trip indicates that the control PCB on the drive has failed.																				
	Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 																				
HF02	Data processing error: CPU memory management fault																				
	The <i>HF02</i> trip indicates that a DMAC address error has occurred. This trip indicates that the control PCB on the drive has failed.																				
	Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 																				
HF03	Data processing error: CPU has detected a bus fault																				
	The <i>HF03</i> trip indicates that a bus fault has occurred. This trip indicates that the control PCB on the drive has failed.																				
	Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 																				
HF04	Data processing error: CPU has detected a usage fault																				
	The <i>HF04</i> trip indicates that a usage fault has occurred. This trip indicates that the control PCB on the drive has failed.																				
	Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 																				

HF05	Reserved									
HF06	Reserved									
HF07	<p>Data processing error: Watchdog failure</p> <p>The <i>HF07</i> trip indicates that a watchdog failure has occurred. This trip indicates that the control PCB on the drive has failed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 									
HF08	<p>Data processing error: CPU interrupt crash</p> <p>The <i>HF08</i> trip indicates that a CPU interrupt crash has occurred. This trip indicates that the control PCB on the drive has failed. The crash level is indicated by the sub-trip number.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 									
HF09	<p>Data processing error: Free store overflow</p> <p>The <i>HF09</i> trip indicates that a free store overflow has occurred. This trip indicates that the control PCB on the drive has failed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 									
HF10	Reserved									
HF11	<p>Data processing error: Non-volatile memory comms error</p> <p>The <i>HF11</i> trip indicates that a non-volatile memory comms error has occurred.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> <th>Recommended action</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Non-volatile memory comms error.</td> <td>Hardware fault – contact the supplier of the drive.</td> </tr> <tr> <td>2</td> <td>EEPROM size is incompatible with the user firmware.</td> <td>Re-program drive with compatible user firmware.</td> </tr> </tbody> </table>	Sub-trip	Reason	Recommended action	1	Non-volatile memory comms error.	Hardware fault – contact the supplier of the drive.	2	EEPROM size is incompatible with the user firmware.	Re-program drive with compatible user firmware.
Sub-trip	Reason	Recommended action								
1	Non-volatile memory comms error.	Hardware fault – contact the supplier of the drive.								
2	EEPROM size is incompatible with the user firmware.	Re-program drive with compatible user firmware.								
HF12	<p>Data processing error: Main program stack overflow</p> <p>The <i>HF12</i> trip indicates that the main program stack over flow has occurred. The stack can be identified by the sub-trip number. This trip indicates that the control PCB on the drive has failed.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Stack</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Freewheeling tasks</td> </tr> <tr> <td>2</td> <td>Reserved</td> </tr> <tr> <td>3</td> <td>Main system interrupts</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault - Contact the supplier of the drive 	Sub-trip	Stack	1	Freewheeling tasks	2	Reserved	3	Main system interrupts	
Sub-trip	Stack									
1	Freewheeling tasks									
2	Reserved									
3	Main system interrupts									
HF13	Reserved									
HF14	Reserved									
HF15	Reserved									
HF16	<p>Data processing error: RTOS error</p> <p>The <i>HF16</i> trip indicates that a RTOS error has occurred. This trip indicates that the control PCB on the drive has failed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 									
HF17	Reserved									

HF18	Data processing error: Internal flash memory has failed																
	The HF18 trip indicates that the internal flash memory has failed when writing option module parameter data. The reason for the trip can be identified by the sub-trip number.																
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Option module initialization timed out</td> </tr> <tr> <td>2</td> <td>Programming error while writing menu in flash</td> </tr> <tr> <td>3</td> <td>Erase flash block containing setup menus failed</td> </tr> <tr> <td>4</td> <td>Erase flash block containing application menus failed</td> </tr> <tr> <td>5</td> <td>Incorrect setup menu CRC contained in flash</td> </tr> <tr> <td>6</td> <td>Incorrect application menu CRC contained in flash</td> </tr> </tbody> </table>	Sub-trip	Reason	1	Option module initialization timed out	2	Programming error while writing menu in flash	3	Erase flash block containing setup menus failed	4	Erase flash block containing application menus failed	5	Incorrect setup menu CRC contained in flash	6	Incorrect application menu CRC contained in flash		
Sub-trip	Reason																
1	Option module initialization timed out																
2	Programming error while writing menu in flash																
3	Erase flash block containing setup menus failed																
4	Erase flash block containing application menus failed																
5	Incorrect setup menu CRC contained in flash																
6	Incorrect application menu CRC contained in flash																
	<p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault - Contact the supplier of the drive 																
HF19	Data processing error: CRC check on the firmware has failed																
	HF19 trip indicates that the CRC check on the drive firmware has failed.																
	<p>Recommended actions:</p> <ul style="list-style-type: none"> Re-program the drive Hardware fault - Contact the supplier of the drive 																
Hot Rect/Brake	Hot rectifier/brake																
250	Over-temperature detected on input rectifier or braking IGBT.																
I cal. range	Current calibration range																
231	Current calibration range error.																
I/O Overload	Digital output overload																
26	<p>The <i>I/O Overload</i> trip indicates that the total current drawn from 24 V user supply or from the digital output has exceeded the limit. A trip is initiated if the following condition is met:</p> <ul style="list-style-type: none"> Maximum output current from one digital output is 100 mA. <p>Recommended actions:</p> <ul style="list-style-type: none"> Check total loads on digital outputs Check control wiring is correct Check output wiring is undamaged 																
Keypad Mode	Keypad has been removed when the drive is receiving the reference from the keypad																
34	<p>The <i>Keypad Mode</i> trip indicates that the drive is in keypad mode [<i>Reference Selector</i> (01.014) = 4 or 6] and the keypad has been removed or disconnected from the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Re-install keypad and reset Change <i>Reference Selector</i> (01.014) to select the reference from another source 																
LF Power Comms	Communication has been lost / errors detected between power, control and rectifier modules																
90	<p>This trip is initiated if there is no communications between power, control or the rectifier module or if excessive communication errors have been detected. The reason for the trip can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>01: No communications between the control system and the power system.</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>02: Excessive communication errors between the control system and power system.</td> </tr> <tr> <td>Control system</td> <td>01</td> <td>1</td> <td>00: Excessive communications errors detected by the rectifier module.</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault - contact the supplier of the drive. 	Source	xx	y	zz	Control system	00	0	01: No communications between the control system and the power system.	Control system	00	0	02: Excessive communication errors between the control system and power system.	Control system	01	1	00: Excessive communications errors detected by the rectifier module.
Source	xx	y	zz														
Control system	00	0	01: No communications between the control system and the power system.														
Control system	00	0	02: Excessive communication errors between the control system and power system.														
Control system	01	1	00: Excessive communications errors detected by the rectifier module.														
Motor Too Hot	Output current overload timed out (I²t)																
20	<p>The <i>Motor Too Hot</i> trip indicates a motor thermal overload based on the output current (Pr 05.007) and motor thermal time constant (Pr 04.015). Pr 04.019 displays the motor temperature as a percentage of the maximum value. The drive will trip on <i>It.AC</i> when Pr 04.019 gets to 100 %.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Ensure the load is not jammed / sticking Check the load on the motor has not changed Tune the motor rated speed parameter (Pr 5.008) (RFC-A mode only) Ensure the motor rated current is not zero 																

No power board	No power board										
236	<p>No communication between the power and control boards.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check connection between power and control board. 										
Oht Brake	Braking IGBT over-temperature										
101	<p>The <i>Oht Brake</i> over-temperature trip indicates that braking IGBT over-temperature has been detected based on software thermal model.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check braking resistor value is greater than or equal to the minimum resistance value 										
Oht Control	Control stage over temperature										
219	<p>This trip indicates that a control stage over-temperature has been detected if Cooling Fan control (06.045) = 0.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Increase ventilation by setting Cooling Fan control (06.045) > 0 										
Oht dc bus	DC bus over temperature										
27	<p>The <i>Oht dc bus</i> trip indicates a DC bus component over temperature based on a software thermal model. The drive includes a thermal protection system to protect the DC bus components within the drive. This includes the effects of the output current and DC bus ripple. The estimated temperature is displayed as a percentage of the trip level in Pr 07.035. If this parameter reaches 100 % then an <i>Oh.dc</i> trip is initiated. The drive will attempt to stop the motor before tripping. If the motor does not stop in 10 seconds the drive trips immediately.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>2</td> <td>00</td> <td>DC bus thermal model gives trip with sub-trip 0</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check the AC supply voltage balance and levels Check DC bus ripple level Reduce duty cycle Reduce motor load Check the output current stability. If unstable; <ul style="list-style-type: none"> Check the motor map settings with motor nameplate (Pr 05.006, Pr 05.007, Pr 05.008, Pr 05.009, Pr 05.010, Pr 05.011) – (All Modes) Disable slip compensation (Pr 05.027 = 0) – (Open loop) Disable dynamic V to F operation (Pr 05.013 = 0) - (Open loop) Select fixed boost (Pr 05.014 = Fixed) – (Open loop) Select high stability space vector modulation (Pr 05.020 = 1) – (Open loop) Disconnect the load and complete a rotating auto-tune (Pr 05.012) Reduce frequency loop gains (Pr 03.010, Pr 03.011, Pr 03.012) – (RFC-A) 	Source	xx	y	zz	Description	Control system	00	2	00	DC bus thermal model gives trip with sub-trip 0
Source	xx	y	zz	Description							
Control system	00	2	00	DC bus thermal model gives trip with sub-trip 0							
Oht Inverter	Inverter over temperature based on thermal model										
21	<p>This trip indicates that an IGBT junction over-temperature has been detected based on a software thermal model.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>1</td> <td>00</td> <td>Inverter thermal model gives {Oht.I} trip with sub-trip 0</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Reduce the selected drive switching frequency Ensure <i>Auto-switching Frequency Change Disable</i> (05.035) is set to OFF Reduce duty cycle Increase acceleration / deceleration rates Reduce motor load Check DC bus ripple Ensure all three input phases are present and balanced 	Source	xx	y	zz	Description	Control system	00	1	00	Inverter thermal model gives {Oht.I} trip with sub-trip 0
Source	xx	y	zz	Description							
Control system	00	1	00	Inverter thermal model gives {Oht.I} trip with sub-trip 0							

Oht Power	Power stage over temperature										
22	<p>This trip indicates that a power stage over-temperature has been detected. From the sub-trip 'xyzz', the Thermistor location is identified by 'zz'.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>zz</td> <td>Thermistor location in the drive defined by zz</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check enclosure / drive fans are still functioning correctly • Force the heatsink fans to run at maximum speed • Check enclosure ventilation paths • Check enclosure door filters • Increase ventilation • Reduce the drive switching frequency • Reduce duty cycle • Increase acceleration / deceleration rates • Reduce motor load • Check the derating tables and confirm the drive is correctly sized for the application. • Use a drive with larger current / power rating 	Source	xx	y	zz	Description	Power system	01	0	zz	Thermistor location in the drive defined by zz
	Source	xx	y	zz	Description						
Power system	01	0	zz	Thermistor location in the drive defined by zz							
Oht Rectifier	Rectifier over temperature										
102	<p>The <i>Oht Rectifier</i> trip indicates that a rectifier over-temperature has been detected. The thermistor location can be identified from the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>Power module number</td> <td>Rectifier number</td> <td>zz</td> <td>Thermistor location defined by zz</td> </tr> </tbody> </table> <p>Recommend actions:</p> <ul style="list-style-type: none"> • Check the motor and motor cable insulation with an insulation tester • Fit an output line reactor or sinusoidal filter • Force the heatsink fans to run at maximum speed by setting Pr 06.045 = 1 • Check enclosure / drive fans are still functioning correctly • Check enclosure ventilation paths • Check enclosure door filters • Increase ventilation • Increase acceleration / deceleration rates • Reduce duty cycle • Reduce motor load 	Source	xx	y	zz	Description	Power system	Power module number	Rectifier number	zz	Thermistor location defined by zz
	Source	xx	y	zz	Description						
Power system	Power module number	Rectifier number	zz	Thermistor location defined by zz							
OI ac	Instantaneous output over current detected										
3	<p>The instantaneous drive output current has exceeded VM_DRIVE_CURRENT_MAX.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>00</td> <td>Instantaneous over-current trip when the measured a.c. current exceeds VM_DRIVE_CURRENT[MAX].</td> </tr> </tbody> </table> <p>Recommended actions/checks:</p> <ul style="list-style-type: none"> • Increase acceleration/deceleration rate • If seen during auto-tune reduce the voltage boost • Check for short circuit on the output cabling • Check integrity of the motor insulation using an insulation tester • Is the motor cable length within limits for the frame size? • Reduce the values in the frequency loop gain parameters - (Pr 03.010, 03.011, 03.012) or (Pr 03.013, 03.014, 03.015) • Reduce the values in the current loop gain parameters 	Source	xx	y	zz	Description	Control system	00	0	00	Instantaneous over-current trip when the measured a.c. current exceeds VM_DRIVE_CURRENT[MAX].
	Source	xx	y	zz	Description						
Control system	00	0	00	Instantaneous over-current trip when the measured a.c. current exceeds VM_DRIVE_CURRENT[MAX].							

Code	Category	Description										
92	OI Snubber	<p>Snubber over-current detected</p> <p>This trip indicates that an over-current condition has been detected in the rectifier snubbing circuit, The exact cause of the trip can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>01</td> <td>1</td> <td>00: Rectifier snubber over-current trip detected.</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the internal EMC filter is installed. • Ensure the motor cable length does not exceed the maximum for selected switching frequency. • Check for supply voltage imbalance. • Check for supply disturbance such as notching from a DC drive. • Check the motor and motor cable insulation with a Megger. • Fit an output line reactor or sinusoidal filter 	Source	xx	y	zz	Power system	01	1	00: Rectifier snubber over-current trip detected.		
Source	xx	y	zz									
Power system	01	1	00: Rectifier snubber over-current trip detected.									
4	OI.Brake	<p>Braking IGBT over current detected: short circuit protection for the braking IGBT activated</p> <p>The <i>OI.Brake</i> trip indicates that over current has been detected in braking IGBT or braking IGBT protection has been activated.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>00</td> <td>Braking IGBT instantaneous over-current trip</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check brake resistor wiring • Check braking resistor value is greater than or equal to the minimum resistance value • Check braking resistor insulation 	Source	xx	y	zz	Description	Power system	01	0	00	Braking IGBT instantaneous over-current trip
Source	xx	y	zz	Description								
Power system	01	0	00	Braking IGBT instantaneous over-current trip								
109	OI.dc	<p>Power module over current detected from IGBT on state voltage monitoring</p> <p>The <i>OI.dc</i> trip indicates that the short circuit protection for the drive output stage has been activated.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Disconnect the motor cable at the drive end and check the motor and cable insulation with an insulation tester • Replace the drive 										
215	Option Disable	<p>Option module does not acknowledge during drive mode changeover</p> <p>The <i>Option Disable</i> trip indicates that the option module did not acknowledge notifying the drive that communications with the drive has been stopped during the drive mode changeover with in the allocated time.</p> <p>Recommended trip:</p> <ul style="list-style-type: none"> • Reset the trip • If the trip persists replace the option module 										
98	Out Phase Loss	<p>Output phase loss detected</p> <p>The <i>Out Phase Loss</i> trip indicates that a phase loss has been detected at the drive output. If <i>Output Phase Loss Detection Enable</i> (06.059) = 1 then output phase loss is detected as follows:</p> <ol style="list-style-type: none"> 1. When the drive is enabled short pulses are applied to make sure each output phase is connected. 2. During running the output current is monitored and the output phase loss condition is detected if the current contains more than TBD % negative phase sequence current for TBDs. <p>Recommended action:</p> <ul style="list-style-type: none"> • Check motor and drive connections • To disable the trip set <i>Output Phase Loss Detection Enable</i> (06.059) = 0 										
228	Output phase s/c	<p>Output phase short-circuit</p> <p>Over-current detected on drive output when enabled. Possible motor ground fault.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check for short circuit on the output cabling • Check integrity of the motor insulation using an insulation tester • Is the motor cable length within limits for the frame size? 										
7	Over Speed	<p>Motor frequency has exceeded the over frequency threshold</p> <p>In open loop mode, if the <i>Output Frequency</i> (05.001) exceeds the threshold set in the <i>Over Frequency Threshold</i> (03.008) in either direction an O.Spd trip is produced. In RFC-A mode, if the estimated frequency (03.002) exceeds the Over Frequency Threshold in Pr 03.008 in either direction an O.Spd trip is produced. If Pr 03.008 is set to 0.0 the threshold is then equal to 1.2 x the value set in Pr 01.006.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Reduce the <i>Frequency Controller Proportional Gain</i> (03.010) to reduce the speed overshoot (RFC-A mode only) 										

Over Volts		DC bus voltage has exceeded the peak level or maximum continuous level for 15 seconds																	
2	<p>The OV trip indicates that the DC bus voltage has exceeded the VM_DC_VOLTAGE[MAX] or VM_DC_VOLTAGE_SET[MAX] for 15 s. The trip threshold varies depending on voltage rating of the drive as shown below.</p> <table border="1"> <thead> <tr> <th>Voltage rating</th> <th>VM_DC_VOLTAGE[MAX]</th> <th>VM_DC_VOLTAGE_SET[MAX]</th> </tr> </thead> <tbody> <tr> <td>100</td> <td>415</td> <td>410</td> </tr> <tr> <td>200</td> <td>415</td> <td>410</td> </tr> <tr> <td>400</td> <td>830</td> <td>815</td> </tr> </tbody> </table>			Voltage rating	VM_DC_VOLTAGE[MAX]	VM_DC_VOLTAGE_SET[MAX]	100	415	410	200	415	410	400	830	815				
	Voltage rating	VM_DC_VOLTAGE[MAX]	VM_DC_VOLTAGE_SET[MAX]																
100	415	410																	
200	415	410																	
400	830	815																	
<p>Sub-trip Identification</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].</td> </tr> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Increase deceleration ramp (Pr 00.004) • Decrease the braking resistor value (staying above the minimum value) • Check nominal AC supply level • Check for supply disturbances which could cause the DC bus to rise • Check motor insulation using a insulation tester 				Source	xx	y	zz	Control system	00	0	01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].	Control system	00	0	02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].	Power system	01	0	00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].
Source	xx	y	zz																
Control system	00	0	01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].																
Control system	00	0	02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].																
Power system	01	0	00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].																
Phase Loss		Supply phase loss																	
32	<p>The <i>Phase Loss</i> trip indicates that the drive has detected an input phase loss or large supply imbalance. The drive will attempt to stop the motor before this trip is initiated. If the motor cannot be stopped in 10 seconds the trip occurs immediately. The <i>PH.Lo</i> trip works by monitoring the ripple voltage on the DC bus of the drive, if the DC bus ripple exceeds the threshold, the drive will trip on PH.Lo. Potential causes of the DC bus ripple are input phase loss, Large supply impedance and severe output current instability.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>00: Phase loss detected based on control system feedback. The drive attempts to stop the drive before tripping unless bit 2 of <i>Action On Trip Detection</i> (10.037) is set to one.</td> </tr> </tbody> </table> <p>Input phase loss detection can be disabled when the drive is required to operate from the DC supply or from a single phase supply in <i>Input Phase Loss Detection Mode</i> (06.047).</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the AC supply voltage balance and level at full load • Check the DC bus ripple level with an isolated oscilloscope • Check the output current stability • Reduce the duty cycle • Reduce the motor load • Disable the phase loss detection, set Pr 06.047 to 2. 			Source	xx	y	zz	Control system	00	0	00: Phase loss detected based on control system feedback. The drive attempts to stop the drive before tripping unless bit 2 of <i>Action On Trip Detection</i> (10.037) is set to one.								
	Source	xx	y	zz															
Control system	00	0	00: Phase loss detected based on control system feedback. The drive attempts to stop the drive before tripping unless bit 2 of <i>Action On Trip Detection</i> (10.037) is set to one.																
<p>Power Board HF</p> <p>Power board HF</p>																			
235	<p>Power processor hardware fault.</p> <p>Recommended action:</p> <ul style="list-style-type: none"> • Hardware fault - Contact the supplier of the drive 																		
	<p>Power Comms</p> <p>Communication has been lost / errors detected between power control</p>																		
93	<p>The <i>Power Comms</i> trip is initiated if there is no communications between power control. The reason for the trip can be identified by the sub-trip number.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 																		

Power Data	Power system configuration data error																																																							
220	The <i>Power Data</i> trip indicates that there is an error in the configuration data stored in the power system.																																																							
	<table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>01</td> <td>No data was obtained from the power board.</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>02</td> <td>There is no data table in node 1.</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>03</td> <td>The power system data table is bigger than the space available in the control pod to store it.</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>04</td> <td>The size of the table given in the table is incorrect.</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>05</td> <td>Table CRC error.</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>06</td> <td>The version number of the generator software that produced the table is too low.</td> </tr> <tr> <td>Control system</td> <td>0</td> <td>0</td> <td>07</td> <td>The power data table failed to be stored in the power board.</td> </tr> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>00</td> <td>The power data table used internally by the power module has an error.</td> </tr> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>01</td> <td>The power data table that is uploaded to the control system on power up has an error.</td> </tr> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>02</td> <td>The power data table used internally by the power module does not match the hardware identification of the power module.</td> </tr> </tbody> </table>	Source	xx	y	zz	Description	Control system	00	0	01	No data was obtained from the power board.	Control system	00	0	02	There is no data table in node 1.	Control system	00	0	03	The power system data table is bigger than the space available in the control pod to store it.	Control system	00	0	04	The size of the table given in the table is incorrect.	Control system	00	0	05	Table CRC error.	Control system	00	0	06	The version number of the generator software that produced the table is too low.	Control system	0	0	07	The power data table failed to be stored in the power board.	Power system	01	0	00	The power data table used internally by the power module has an error.	Power system	01	0	01	The power data table that is uploaded to the control system on power up has an error.	Power system	01	0	02	The power data table used internally by the power module does not match the hardware identification of the power module.
	Source	xx	y	zz	Description																																																			
	Control system	00	0	01	No data was obtained from the power board.																																																			
	Control system	00	0	02	There is no data table in node 1.																																																			
	Control system	00	0	03	The power system data table is bigger than the space available in the control pod to store it.																																																			
	Control system	00	0	04	The size of the table given in the table is incorrect.																																																			
	Control system	00	0	05	Table CRC error.																																																			
	Control system	00	0	06	The version number of the generator software that produced the table is too low.																																																			
	Control system	0	0	07	The power data table failed to be stored in the power board.																																																			
	Power system	01	0	00	The power data table used internally by the power module has an error.																																																			
	Power system	01	0	01	The power data table that is uploaded to the control system on power up has an error.																																																			
Power system	01	0	02	The power data table used internally by the power module does not match the hardware identification of the power module.																																																				
Recommended actions:																																																								
<ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 																																																								
Power Down Save	Power down save error																																																							
37	The <i>Power Down Save</i> trip indicates that an error has been detected in the power down save parameters saved in non-volatile memory.																																																							
	Recommended actions: <ul style="list-style-type: none"> Perform a 1001 save in Pr mm.000 to ensure that the trip doesn't occur the next time the drive is powered up. 																																																							
PSU	Internal power supply fault																																																							
5	The <i>PSU</i> trip indicates that one or more internal power supply rails are outside limits or overloaded.																																																							
	<table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td rowspan="2">00</td> <td rowspan="2">Internal power supply overload.</td> </tr> <tr> <td>Power system</td> <td>01</td> <td>1</td> </tr> </tbody> </table>	Source	xx	y	zz	Description	Control system	00	0	00	Internal power supply overload.	Power system	01	1																																										
	Source	xx	y	zz	Description																																																			
Control system	00	0	00	Internal power supply overload.																																																				
Power system	01	1																																																						
Recommended actions:																																																								
<ul style="list-style-type: none"> Remove the option module and perform a reset There is a hardware fault within the drive – return the drive to the supplier 																																																								
Reserved	Reserved trips																																																							
14-17 11 09 01 94 - 95 103 - 108 191 - 198 168 - 173 238 - 245 23, 39, 99, 176, 205 - 214 223 - 224	These trip numbers are reserved trip numbers for future use. These trips should not be used by the user application programs.																																																							
	<table border="1"> <thead> <tr> <th>Trip Number</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>Reserved resettable trip</td> </tr> <tr> <td>94 -95</td> <td>Reserved resettable trip</td> </tr> <tr> <td>103 - 108</td> <td>Reserved resettable trip</td> </tr> <tr> <td>191 – 198</td> <td>Reserved resettable trip</td> </tr> <tr> <td>168 - 173</td> <td>Reserved resettable trip</td> </tr> <tr> <td>238 - 245</td> <td>Reserved non-resettable trip</td> </tr> </tbody> </table>	Trip Number	Description	01	Reserved resettable trip	94 -95	Reserved resettable trip	103 - 108	Reserved resettable trip	191 – 198	Reserved resettable trip	168 - 173	Reserved resettable trip	238 - 245	Reserved non-resettable trip																																									
	Trip Number	Description																																																						
	01	Reserved resettable trip																																																						
	94 -95	Reserved resettable trip																																																						
	103 - 108	Reserved resettable trip																																																						
	191 – 198	Reserved resettable trip																																																						
	168 - 173	Reserved resettable trip																																																						
	238 - 245	Reserved non-resettable trip																																																						

Resistance	Measured resistance has exceeded the parameter range
33	<p>The <i>Resistance</i> trip indicates that the measured stator resistance during an auto-tune test has exceeded the maximum possible value of <i>Stator Resistance</i> (05.017).</p> <p>The stationary auto-tune is initiated using the auto-tune function (Pr 05.012) or in open loop vector mode (Pr 05.014) on the first run command after power up in mode 4 (Ur_I) or on every run command in modes 0 (Ur_S) or 3 (Ur_Auto). This trip can occur if the motor is very small in comparison to the rating of the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the motor cable / connections • Check the integrity of the motor stator winding using a insulation tester • Check the motor phase to phase resistance at the drive terminals • Check the motor phase to phase resistance at the motor terminals • Ensure the stator resistance of the motor falls within the range of the drive model • Select fixed boost mode (Pr 05.014 = Fd) and verify the output current waveforms with an oscilloscope • Replace the motor

Slot 1 Different	Option module in option slot 1 has changed												
204	<p>The <i>Slot 1 Different</i> trip indicates that the option module in option slot 1 on the drive is a different type to that installed when parameters were last saved on the drive. The reason for the trip can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>No module was installed previously</td> </tr> <tr> <td>2</td> <td>A module with the same identifier is installed, but the set-up menu for this option slot has been changed, and so default parameters have been loaded for this menu.</td> </tr> <tr> <td>3</td> <td>A module with the same identifier is installed, but the applications menu for this option slot has been changed, and so default parameters have been loaded for this menu.</td> </tr> <tr> <td>4</td> <td>A module with the same identifier is installed, but the set-up and applications menu for this option slot have been changed, and so default parameters have been loaded for these menus.</td> </tr> <tr> <td>>99</td> <td>Shows the identifier of the module previously installed.</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Turn off the power, ensure the correct option module is installed in the option slot and re-apply the power. • Confirm that the currently installed option module is correct, ensure option module parameters are set correctly and perform a user save in Pr mm.000. 	Sub-trip	Reason	1	No module was installed previously	2	A module with the same identifier is installed, but the set-up menu for this option slot has been changed, and so default parameters have been loaded for this menu.	3	A module with the same identifier is installed, but the applications menu for this option slot has been changed, and so default parameters have been loaded for this menu.	4	A module with the same identifier is installed, but the set-up and applications menu for this option slot have been changed, and so default parameters have been loaded for these menus.	>99	Shows the identifier of the module previously installed.
Sub-trip	Reason												
1	No module was installed previously												
2	A module with the same identifier is installed, but the set-up menu for this option slot has been changed, and so default parameters have been loaded for this menu.												
3	A module with the same identifier is installed, but the applications menu for this option slot has been changed, and so default parameters have been loaded for this menu.												
4	A module with the same identifier is installed, but the set-up and applications menu for this option slot have been changed, and so default parameters have been loaded for these menus.												
>99	Shows the identifier of the module previously installed.												

Slot 1 Error	Option module in option slot 1 has detected a fault
202	<p>The <i>Slot 1 Error</i> trip indicates that the option module in option slot 1 on the drive has detected an error. The reason for the error can be identified by the sub-trip number.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • See relevant <i>option module User Guide</i> for details of the trip

Slot 1 HF	Option module 1 hardware fault																
200	<p>The <i>Slot 1 HF</i> trip indicates that the option module in option slot 1 on the drive has indicated a hardware fault. The possible causes of the trip can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The module category cannot be identified</td> </tr> <tr> <td>2</td> <td>All the required customized menu table information has not been supplied or the tables supplied are corrupt</td> </tr> <tr> <td>3</td> <td>There is insufficient memory available to allocate the comms buffers for this module</td> </tr> <tr> <td>4</td> <td>The module has not indicated that it is running correctly during drive power-up</td> </tr> <tr> <td>5</td> <td>Module has been removed after power-up or it has stopped working</td> </tr> <tr> <td>6</td> <td>The module has not indicated that it has stopped accessing drive parameters during a drive mode change</td> </tr> <tr> <td>7</td> <td>The module has failed to acknowledge that a request has been made to reset the drive processor</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the option module is installed correctly • Replace the option module • Replace the drive 	Sub-trip	Reason	1	The module category cannot be identified	2	All the required customized menu table information has not been supplied or the tables supplied are corrupt	3	There is insufficient memory available to allocate the comms buffers for this module	4	The module has not indicated that it is running correctly during drive power-up	5	Module has been removed after power-up or it has stopped working	6	The module has not indicated that it has stopped accessing drive parameters during a drive mode change	7	The module has failed to acknowledge that a request has been made to reset the drive processor
Sub-trip	Reason																
1	The module category cannot be identified																
2	All the required customized menu table information has not been supplied or the tables supplied are corrupt																
3	There is insufficient memory available to allocate the comms buffers for this module																
4	The module has not indicated that it is running correctly during drive power-up																
5	Module has been removed after power-up or it has stopped working																
6	The module has not indicated that it has stopped accessing drive parameters during a drive mode change																
7	The module has failed to acknowledge that a request has been made to reset the drive processor																

Slot 1 Not Fitted	Option module in option slot 1 has been removed
203	<p>The <i>Slot 1 Not Fitted</i> trip indicates that the option module in option slot 1 on the drive has been removed since the last power up.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the option module is installed correctly. • Re-install the option module. • To confirm that the removed option module is no longer required perform a save function in Pr mm.000.

Slot 1 Watchdog	Option module watchdog function service error																															
201	<p>The <i>Slot 1 Watchdog</i> trip indicates that the option module installed in Slot 1 has started the option watchdog function and then failed to service the watchdog correctly.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Replace the option module 																															
Soft Start	Soft start relay failed to close, soft start monitor failed																															
226	<p>The <i>Soft Start</i> trip indicates that the soft start relay in the drive failed to close or the soft start monitoring circuit has failed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 																															
STO Error	No Safe Torque Off board fitted																															
234	STO board not fitted																															
Stored HF	Hardware trip has occurred during last power down																															
221	<p>The <i>Stored HF</i> trip indicates that a hardware trip (HF01 –HF19) has occurred and the drive has been power cycled. The sub-trip number identifies the HF trip i.e. stored HF19.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Enter 1299 in Pr mm.000 and press reset to clear the trip 																															
Sub-array RAM	RAM allocation error																															
227	<p>The <i>Sub-array RAM</i> trip indicates that an option module derivative image has requested more parameter RAM than is allowed. The RAM allocation is checked in order of resulting sub-trip numbers, and so the failure with the highest sub-trip number is given. The sub-trip is calculated as (parameter size) + (parameter type) + sub-array number.</p> <table border="1" style="display: inline-table; margin-right: 20px;"> <thead> <tr> <th>Parameter size</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>1 bit</td> <td>1</td> </tr> <tr> <td>8 bit</td> <td>2</td> </tr> <tr> <td>16 bit</td> <td>3</td> </tr> <tr> <td>32 bit</td> <td>4</td> </tr> <tr> <td>64 bit</td> <td>5</td> </tr> </tbody> </table> <table border="1" style="display: inline-table;"> <thead> <tr> <th>Parameter type</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Volatile</td> <td>0</td> </tr> <tr> <td>User save</td> <td>1</td> </tr> <tr> <td>Power-down save</td> <td>2</td> </tr> </tbody> </table> <table border="1" style="width: 100%;"> <thead> <tr> <th>Sub-array</th> <th>Menus</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Derivative image</td> <td>29</td> <td>2</td> </tr> <tr> <td>Option slot 1 set-up</td> <td>15</td> <td>4</td> </tr> </tbody> </table>			Parameter size	Value	1 bit	1	8 bit	2	16 bit	3	32 bit	4	64 bit	5	Parameter type	Value	Volatile	0	User save	1	Power-down save	2	Sub-array	Menus	Value	Derivative image	29	2	Option slot 1 set-up	15	4
Parameter size	Value																															
1 bit	1																															
8 bit	2																															
16 bit	3																															
32 bit	4																															
64 bit	5																															
Parameter type	Value																															
Volatile	0																															
User save	1																															
Power-down save	2																															
Sub-array	Menus	Value																														
Derivative image	29	2																														
Option slot 1 set-up	15	4																														
Temp Feedback	Internal thermistor has failed																															
218	<p>The <i>Temp Feedback</i> trip indicates that an internal thermistor has failed. The thermistor location can be identified by the sub-trip number.</p> <table border="1" style="width: 100%;"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>Thermistor location defined by zz</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 			Source	xx	y	zz	Power system	01	0	Thermistor location defined by zz																					
Source	xx	y	zz																													
Power system	01	0	Thermistor location defined by zz																													
Th Brake Res	Brake resistor over temperature																															
10	<p>The <i>Th Brake Res</i> trip is initiated if the hardware based braking resistor thermal monitoring is connected and the resistor overheats. If the braking resistor is not used, then this trip must be disabled with bit 3 of <i>Action On Trip Detection</i> (10.037) to prevent this trip.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check brake resistor wiring Check braking resistor value is greater than or equal to the minimum resistance value Check braking resistor insulation 																															
Th Short Circuit	Motor thermistor short circuit																															
25	<p>The <i>Th Short Circuit</i> trip indicates that the motor thermistor connected to terminal 14 (digital input 5) on the control connections, is short circuit or low impedance (<50 Ω).</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check thermistor continuity Replace motor / motor thermistor 																															
Thermistor	Motor thermistor over-temperature																															
24	<p>The <i>Thermistor</i> trip indicates that the motor thermistor connected to terminal 14 (digital input 5) on the control connections has indicated a motor over temperature.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check motor temperature Check thermistor continuity 																															

User 24V	User 24 V supply is not present on Adaptor Interface terminals (1, 2)
91	<p>A <i>User 24V</i> trip is initiated if the <i>User Supply Select</i> (Pr 06.072), is set to 1 and no user 24 V supply is present on the user 24 V input on the Adaptor Interface.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the user 24 V supply is present on the user terminals on the Adaptor Interface.
User OI ac	User OI ac
8	<p>A <i>User OI ac</i> trip is initiated if the output current of the drive exceeds the trip level set by User Over Current Trip Level (Pr 04.041).</p>
User Prog Trip	Trip generated by an onboard user program
96	<p>This trip can be initiated from within an onboard user program using a function call which defines the sub-trip number.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the user program

User Program	On board user program error																																																																																																	
	<p>An error has been detected in the onboard user program image. The sub-trip indicated the reason for the trip.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> <th>Comments</th> </tr> </thead> <tbody> <tr><td>1</td><td>Divide by zero.</td><td></td></tr> <tr><td>2</td><td>Undefined trip.</td><td></td></tr> <tr><td>3</td><td>Attempted fast parameter access set-up with non-existent parameter.</td><td></td></tr> <tr><td>4</td><td>Attempted access to non-existent parameter.</td><td></td></tr> <tr><td>5</td><td>Attempted write to read-only parameter.</td><td></td></tr> <tr><td>6</td><td>Attempted an over-range write.</td><td></td></tr> <tr><td>7</td><td>Attempted read from write-only parameter.</td><td></td></tr> <tr><td>30</td><td>The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5.</td><td>Occurs when the drive powers-up or the image is programmed. The image tasks will not run.</td></tr> <tr><td>31</td><td>The image requires more RAM for heap and stack than can be provided by the drive.</td><td>As 30.</td></tr> <tr><td>32</td><td>The image requires an OS function call that is higher than the maximum allowed.</td><td>As 30.</td></tr> <tr><td>33</td><td>The ID code within the image is not valid.</td><td>As 30.</td></tr> <tr><td>34</td><td>The user program image has been changed for an image with a different user program number.</td><td>As 30.</td></tr> <tr><td>40</td><td>The timed task has not completed in time and has been suspended.</td><td><i>Onboard User Program: Enable (11.047)</i> is reset to zero when the trip is initiated.</td></tr> <tr><td>41</td><td>Undefined function called, i.e. a function in the host system vector table that has not been assigned.</td><td>As 40.</td></tr> <tr><td>52</td><td>Customizable menu table CRC check failed.</td><td>As 30.</td></tr> <tr><td>53</td><td>Customizable menu table changed.</td><td>An error has been detected in the onboard user program image. The sub-trip indicated the reason for the trip.</td></tr> <tr><td>80</td><td>*Image is not compatible with the control board</td><td>Initiated from within the image code.</td></tr> <tr><td>81</td><td>*Image is not compatible with the control board serial number</td><td></td></tr> <tr><td>100</td><td>Image has detected and prevented attempted pointer access outside of the IEC task's heap area.</td><td></td></tr> <tr><td>101</td><td>Image has detected and prevented misaligned pointer usage.</td><td></td></tr> <tr><td>102</td><td>Image has detected an array bounds violation and prevented its access.</td><td></td></tr> <tr><td>103</td><td>Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.</td><td></td></tr> <tr><td>104</td><td>Image has attempted to use an unknown user service function.</td><td></td></tr> <tr><td>200</td><td>User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same fundamental problem as sub-trip 1.)</td><td></td></tr> </tbody> </table> <p>The following table shows the differences when compared to the derivative product image.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Difference</th> </tr> </thead> <tbody> <tr><td>40, 41</td><td><i>Onboard User Program: Enable (11.047)</i> is reset to zero when the trip is initiated.</td></tr> <tr><td>51</td><td>Not applicable as core menu Customization not allowed.</td></tr> <tr><td>6x</td><td>Not applicable as option module restrictions not allowed.</td></tr> <tr><td>7x</td><td>Not applicable as option module restrictions not allowed.</td></tr> <tr><td>100</td><td>Image has detected and prevented attempted pointer access outside of the IEC task's heap area.</td></tr> <tr><td>101</td><td>Image has detected and prevented misaligned pointer usage.</td></tr> <tr><td>102</td><td>Image has detected an array bounds violation and prevented its access.</td></tr> <tr><td>103</td><td>Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.</td></tr> <tr><td>104</td><td>Image has attempted to use an unknown user service function.</td></tr> <tr><td>200</td><td>User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same fundamental problem as sub-trip 1)</td></tr> </tbody> </table>	Sub-trip	Reason	Comments	1	Divide by zero.		2	Undefined trip.		3	Attempted fast parameter access set-up with non-existent parameter.		4	Attempted access to non-existent parameter.		5	Attempted write to read-only parameter.		6	Attempted an over-range write.		7	Attempted read from write-only parameter.		30	The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5.	Occurs when the drive powers-up or the image is programmed. The image tasks will not run.	31	The image requires more RAM for heap and stack than can be provided by the drive.	As 30.	32	The image requires an OS function call that is higher than the maximum allowed.	As 30.	33	The ID code within the image is not valid.	As 30.	34	The user program image has been changed for an image with a different user program number.	As 30.	40	The timed task has not completed in time and has been suspended.	<i>Onboard User Program: Enable (11.047)</i> is reset to zero when the trip is initiated.	41	Undefined function called, i.e. a function in the host system vector table that has not been assigned.	As 40.	52	Customizable menu table CRC check failed.	As 30.	53	Customizable menu table changed.	An error has been detected in the onboard user program image. The sub-trip indicated the reason for the trip.	80	*Image is not compatible with the control board	Initiated from within the image code.	81	*Image is not compatible with the control board serial number		100	Image has detected and prevented attempted pointer access outside of the IEC task's heap area.		101	Image has detected and prevented misaligned pointer usage.		102	Image has detected an array bounds violation and prevented its access.		103	Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.		104	Image has attempted to use an unknown user service function.		200	User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same fundamental problem as sub-trip 1.)		Sub-trip	Difference	40, 41	<i>Onboard User Program: Enable (11.047)</i> is reset to zero when the trip is initiated.	51	Not applicable as core menu Customization not allowed.	6x	Not applicable as option module restrictions not allowed.	7x	Not applicable as option module restrictions not allowed.	100	Image has detected and prevented attempted pointer access outside of the IEC task's heap area.	101	Image has detected and prevented misaligned pointer usage.	102	Image has detected an array bounds violation and prevented its access.	103	Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.	104	Image has attempted to use an unknown user service function.	200	User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same fundamental problem as sub-trip 1)
Sub-trip	Reason	Comments																																																																																																
1	Divide by zero.																																																																																																	
2	Undefined trip.																																																																																																	
3	Attempted fast parameter access set-up with non-existent parameter.																																																																																																	
4	Attempted access to non-existent parameter.																																																																																																	
5	Attempted write to read-only parameter.																																																																																																	
6	Attempted an over-range write.																																																																																																	
7	Attempted read from write-only parameter.																																																																																																	
30	The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5.	Occurs when the drive powers-up or the image is programmed. The image tasks will not run.																																																																																																
31	The image requires more RAM for heap and stack than can be provided by the drive.	As 30.																																																																																																
32	The image requires an OS function call that is higher than the maximum allowed.	As 30.																																																																																																
33	The ID code within the image is not valid.	As 30.																																																																																																
34	The user program image has been changed for an image with a different user program number.	As 30.																																																																																																
40	The timed task has not completed in time and has been suspended.	<i>Onboard User Program: Enable (11.047)</i> is reset to zero when the trip is initiated.																																																																																																
41	Undefined function called, i.e. a function in the host system vector table that has not been assigned.	As 40.																																																																																																
52	Customizable menu table CRC check failed.	As 30.																																																																																																
53	Customizable menu table changed.	An error has been detected in the onboard user program image. The sub-trip indicated the reason for the trip.																																																																																																
80	*Image is not compatible with the control board	Initiated from within the image code.																																																																																																
81	*Image is not compatible with the control board serial number																																																																																																	
100	Image has detected and prevented attempted pointer access outside of the IEC task's heap area.																																																																																																	
101	Image has detected and prevented misaligned pointer usage.																																																																																																	
102	Image has detected an array bounds violation and prevented its access.																																																																																																	
103	Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.																																																																																																	
104	Image has attempted to use an unknown user service function.																																																																																																	
200	User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same fundamental problem as sub-trip 1.)																																																																																																	
Sub-trip	Difference																																																																																																	
40, 41	<i>Onboard User Program: Enable (11.047)</i> is reset to zero when the trip is initiated.																																																																																																	
51	Not applicable as core menu Customization not allowed.																																																																																																	
6x	Not applicable as option module restrictions not allowed.																																																																																																	
7x	Not applicable as option module restrictions not allowed.																																																																																																	
100	Image has detected and prevented attempted pointer access outside of the IEC task's heap area.																																																																																																	
101	Image has detected and prevented misaligned pointer usage.																																																																																																	
102	Image has detected an array bounds violation and prevented its access.																																																																																																	
103	Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.																																																																																																	
104	Image has attempted to use an unknown user service function.																																																																																																	
200	User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same fundamental problem as sub-trip 1)																																																																																																	
	<p>User Save User Save error / not completed</p>																																																																																																	
36	<p>The <i>User Save</i> trip indicates that an error has been detected in the user save parameters saved in non-volatile memory. For example, following a user save command, if the power to the drive was removed when the user parameters were being saved.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Perform a user save in Pr mm.000 to ensure that the trip doesn't occur the next time the drive is powered up. Ensure that the drive has enough time to complete the save before removing the power to the drive. 																																																																																																	

Watchdog	Control word watchdog has timed out
30	The <i>Watchdog</i> trip indicates that the control word has been enabled and has timed out Recommended actions:

Table 13-3 Serial communications look up table

No	Trip	No	Trip	No	Trip
1	Reserved	90	LF Power Comms	200	Slot 1 HF
2	Over Volts	91	User 24V	201	Slot 1 Watchdog
3	OI ac	92	OI Snubber	202	Slot 1 Error
4	OI Brake	93	Power Comms	203	Slot 1 Not Fitted
5	PSU	94 - 95	Reserved	204	Slot 1 Different
6	External Trip	96	User Prog Trip	205 - 214	Reserved
7	Over Speed	97	Data Changing	215	Option Disable
8	User OI ac	98	Out Phase Loss	216 - 217	Reserved
9	Reserved	99	Reserved	218	Temp Feedback
10	Th Brake Res	100	Reset	219	OHT Control
11	Reserved	101	OHT Brake	220	Power Data
12	Reserved	102	OHT Rectifier	221	Stored HF
13	Autotune	103 - 108	Reserved	222	Reserved
14 - 17	Reserved	109	OI dc	223 - 224	Reserved
18	Autotune Stopped	110 - 111	Reserved	225	Current Offset
19	Brake R Too Hot	112 - 167	t112 - t167	226	Soft Start
20	Motor Too Hot	168 - 172	Reserved	227	Sub-array RAM
21	OHT Inverter	173	Fan Fail	228	Output phase s/c
22	OHT Power	174	Card Slot	229	Reserved
23	Reserved	175	Card Product	230	Reserved
24	Thermistor	176	Reserved	231	I cal. range
25	Th Short Circuit	177	Card Boot	232	Drive config
26	I/O Overload	178	Card Busy	233	Reserved
27	OHT dc bus	179	Card Data Exists	234	STO Error
28	An Input 1 Loss	180	Card Option	235	Power Board HF
29	An Input 2 Loss	181	Card Read Only	236	No power board
30	Watchdog	182	Card Error	237	FW incompatible
31	EEPROM Fail	183	Card No Data	238 - 245	Reserved
32	Phase Loss	184	Card Full	246	Derivative ID
33	Resistance	185	Card Access	247	File changed
34	Keypad Mode	186	Card Rating	248	Derivative Image
35	Control Word	187	Card Drive Mode	249	User Program
36	User Save	188	Card Compare	250	Hot Rect/Brake
37	Power Down Save	189	An Input 1 OI	252 - 254	Reserved
38	Reserved	190	An Input 2 OI	255	Reset logs
39	Reserved	191 - 198	Reserved		
40 - 89	t040 - t089	199	Destination		

The trips can be grouped into the following categories. It should be noted that a trip can only occur when the drive is not tripped or is already tripped but with a trip with a lower priority number.

Table 13-4 Trip categories

Priority	Category	Trips	Comments
1	Internal faults	HF01, HF02, HF03, HF04, HF05, HF06, HF07, HF08, HF09, HF10, HF11, HF12, HF13, HF14, HF15, HF16, HF17, HF 18, HF 19	These indicate internal problems and cannot be reset. All drive features are inactive after any of these trips occur.
1	Stored HF trip	{Stored HF}	This trip cannot be cleared unless 1299 is entered into <i>Parameter (mm.000)</i> and a reset is initiated.
2	Non-resettable trips	Trip numbers 218 to 247, {Slot 1 HF}	These trips cannot be reset.
3	Volatile memory failure	{EEPROM Fail}	This can only be reset if Parameter mm.000 is set to 1233 or 1244, or if <i>Load Defaults</i> (11.043) is set to a non-zero value.
4	NV Media Card trips	Trip numbers 174, 175 and 177 to 188	These trips are priority 5 during power-up.
4	Internal 24V	{PSU}	
5	Trips with extended reset times	{OI.ac}, {OI.Brake}, {OI.dc} and {Fan Fail}	These trips cannot be reset until 10 s after the trip was initiated.
5	Phase loss and d.c. link power circuit protection	{Phase Loss} and {OHT dc bus}	The drive will attempt to stop the motor before tripping if a {Phase Loss}. 000 trip occurs unless this feature has been disabled (see <i>Action On Trip Detection</i> (10.037). The drive will always attempt to stop the motor before tripping if an {OHT dc bus} occurs.
5	Standard trips	All other trips	

13.5 Internal / Hardware trips

Trips {HF01} to {HF19} are internal faults that do not have trip numbers. If one of these trips occurs, the main drive processor has detected an irrecoverable error. All drive functions are stopped and the trip message will be displayed on the drive keypad. If a non permanent trip occurs this may be reset by power cycling the drive. On power up after it has been power cycled, the drive will trip on Stored HF. Enter 1299 in **mm.000** to clear the Stored HF trip.

13.6 Alarm indications

In any mode, an alarm is an indication given on the display by alternating the alarm string with the drive status string display. If an action is not taken to eliminate any alarm except "tuning and LS" the drive may eventually trip. Alarms are not displayed when a parameter is being edited.

Table 13-5 Alarm indications

Alarm string	Description
Brake Resistor	Brake resistor overload. <i>Braking Resistor Thermal Accumulator</i> (10.039) in the drive has reached 75.0 % of the value at which the drive will trip.
Motor Overload	<i>Motor Protection Accumulator</i> (4.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
Drive Overload	Drive over temperature. <i>Percentage of Drive Thermal Trip Level</i> (07.036) in the drive is greater than 90 %.
Auto Tune	The autotune procedure has been initialized and an autotune in progress.
Limit Switch	Limit switch active. Indicates that a limit switch is active and that is causing the motor to be stopped.
Option Slot 1	Option slot alarm
Low AC	Low voltage mode. See <i>Low AC Alarm</i> (10.107).
Current limit	Current limit active. See <i>Current Limit Active</i> (10.009).

13.7 Status indications

Table 13-6 Status indications

Upper row string	Description	Drive output stage
Inhibit	The drive is inhibited and cannot be run. The SAFE TORQUE OFF signals are not applied to the SAFE TORQUE OFF terminals or Pr 06.015 is set to 0. The other conditions that can prevent the drive from enabling are shown as bits in <i>Enable Conditions</i> (06.010).	Disabled
Ready	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active.	Disabled
Stop	The drive is stopped / holding zero frequency.	Enabled
Run	The drive is active and running.	Enabled
Supply Loss	Supply loss condition has been detected.	Enabled
Deceleration	The motor is being decelerated to zero frequency because the final drive run has been deactivated.	Enabled
dc Injection	The drive is applying dc injection braking.	Enabled
Trip	The drive has tripped and no longer controlling the motor. The trip code appears in the lower display.	Disabled
Under Voltage	The drive is in the under voltage state either in low voltage or high voltage mode.	Disabled

Table 13-7 Option module and other status indications at power-up

First row string	Second row string	Status
Waiting For	Power System	Waiting for power stage
The drive is waiting for the processor in the power stage to respond after power-up.		
Waiting For	Option	Waiting for an option module
The drive is waiting for the option module to respond after power-up		
Uploading From	Option	Loading parameter database
At power-up it may be necessary to update the parameter database held in the drive because an option module has changed. This may involve data transfer between the drive and option module. During this period 'Uploading From Option' is displayed.		

13.8 Displaying the trip history

The drive retains a log of the last ten trips that have occurred. *Trip 0* (10.020) to *Trip 9* (10.029) store the most recent 10 trips that have occurred where *Trip 0* (10.020) is the most recent and *Trip 9* (10.029) is the oldest. When a new trip occurs it is written to *Trip 0* (10.020) and all the other trips move down the log, with oldest being lost. The date and time when each trip occurs are also stored in the date and time log, i.e. *Trip 0 Date* (10.041) to *Trip 9 Time* (10.060). The date and time are taken from *Date* (06.016) and *Time* (06.017). Some trips have sub-trip numbers which give more detail about the reason for the trip. If a trip has a sub-trip number its value is stored in the sub-trip log, i.e. *Trip 0 Sub-trip Number* (10.070) to *Trip 9 Sub-trip Number* (10.079). If the trip does not have a sub-trip number then zero is stored in the sub-trip log.

If any parameter between Pr **10.020** and Pr **10.029** inclusive is read by serial communication, then the trip number in Table 13-2 is the value transmitted.

NOTE

The trip logs can be reset by writing a value of 255 in Pr **10.038**.

13.9 Behaviour of the drive when tripped

If the drive trips, the output of the drive is disabled so the load coasts to a stop. If any trip occurs, the following read only parameters are frozen until the trip is cleared. This is to help diagnose the cause of the trip.

Parameter	Description
01.001	Frequency reference
01.002	Pre-skip filter reference
01.003	Pre-ramp reference
02.001	Post-ramp reference
03.001	Final demand ref
03.002	Estimated frequency
03.003	Frequency error
03.004	Frequency controller output
04.001	Current magnitude
04.002	Active current
04.017	Reactive current
05.001	Output frequency
05.002	Output voltage
05.003	Power
05.005	DC bus voltage
07.001	Analog input 1
07.002	Analog input 2
07.037	Temperature nearest to trip level

If the parameters are not required to be frozen then this can be disabled by setting bit 4 of Pr **10.037**.

14 UL listing information

Index

A

AC supply contactor	38
AC supply requirements	35
Acceleration	73, 74
Access	17
Accuracy	164
Acoustic noise	164
Advanced menus	63
Advanced parameters	88
Air-flow in a ventilated enclosure	26
Alarm	191
Alarm Indications	191
Altitude	163
Autotune	76

B

Basic requirements	71
Braking	41
Braking resistor values	169

C

Cable clearances	46
Cable lengths (maximum)	167
Cable size ratings	165
Cable types and lengths	38
Cautions	7
Control connections	51
Control terminal specification	53
Cooling	17
Cooling method	163
Current limits	81
Current ratings	159

D

DC bus voltage	41
Deceleration	41, 73, 74
Defaults (restoring parameter)	64
Derating	159
Destination parameter	51
Diagnostics	172
Dimensions (overall)	164
Display	59
Display messages	63
Drive enable	57

E

Electrical safety	17
Electrical terminals	30
Electromagnetic compatibility (EMC)	18, 43, 169
EMC - Compliance with generic emission standards	46
EMC - General requirements	44
EMC - Variations in the wiring	47
EMC filter dimensions (external, overall)	171
EMC filter torque settings (external)	171
EMC filters (optional external)	170
Emission	170
EN61800-3 2004 (standard for power drive systems)	46
Enclosure	25
Enclosure Layout	25
Enclosure sizing	26
Encoder connections	57
Environmental protection	17
External EMC filter	27

F

Field weakening (constant power) operation	81
Fire protection	17
Fixed V/F mode	13
Fuse ratings	165
Fuse types	38

G

Getting Started	59
Ground connections	38, 45
Ground leakage	42
Ground terminals	30
Grounding bracket	43

H

Hazardous areas	18
Heatsink mounted braking resistor	41
High speed operation	81
Humidity	163

I

Input current ratings	165
Input inductor calculation	35
Internal EMC filter	43
IP Rating (Ingress protection)	163
Isolator switch	48
Items supplied with the drive	16

K

Keypad and display - Installing / removing	20
--	----

L

Line reactors	35, 163
---------------------	---------

M		P	
Maximum speed / frequency	82	Parameter access level	64
Mechanical Installation	17	Parameter ranges	91
Menu 01 - Frequency / speed reference	98	Parameter security	64
Menu 02 - Ramps	102	Planning the installation	17
Menu 03 - Slave frequency, speed feedback and speed control	106	Position feedback module category parameters	151
Menu 04 - Torque and current control	111	Power ratings	41, 159
Menu 05 - Motor control	114	Power terminals	30
Menu 06 - Sequencer and clock	120	Product information	9
Menu 07 - Analog I/O	123	Q	
Menu 08 - Digital I/O	126	Quick start commissioning	74
Menu 09 - Programmable logic, motorized pot and binary sum	133	Quick start commissioning / Start-up	73
Menu 10 - Status and trips	139	Quick start connections	71
Menu 11 - General drive set-up	141	R	
Menu 12 - Threshold detectors and variable selectors	143	Ratings	35
Menu 14 - User PID controller	148	Reactor current ratings	35, 163
Menu 18 - Application menu 1	152	Relay contacts	57
Menu 19 - Application menu 2	154	Residual current device (RCD)	42
Menu 20 - Application menu 3	154	Resistances (minimum)	41
Menu 21 - Second motor parameters	155	Resolution	164
Menu 22 - Additional Menu 0 set-up	157	RFC-A mode	13
Menu structure	62	Routine maintenance	31
Minimum connections to get the motor running in any operating mode	72	S	
Mode parameter	51	SAFE TORQUE OFF	57
Motor (running the motor)	71	SAFE TORQUE OFF/drive enable	57
Motor cable - interruptions	48	Safety Information	7, 17
Motor isolator / disconnect-switch	48	Saving parameters	64
Motor number of poles	75	Sealed enclosure - sizing	26
Motor operation	40	Serial comms lead	51
Motor rated current	75	Serial communications connections	50
Motor rated current (maximum)	81	Serial communications look-up table	174
Motor rated frequency	75	Single line descriptions	66
Motor rated power factor	75	Solutions Module - Installing / removing	20
Motor rated speed	75	Speed range	164
Motor rated voltage	75	Start up time	164
Motor requirements	163	Starts per hour	164
Motor thermal protection	81	Status	192
Motor winding voltage	39	Status Indications	192
Multiple motors	40	Storage	163
N		Supply requirements	163
NEMA rating	164	Supply types	35
Notes	7	Surface mounting the drive	23
NV media card operation	83, 86	Surge immunity of control circuits - long cables and connections outside a building	48
O		Surge suppression for analog and bipolar inputs and outputs	49
Onboard PLC and Machine Control Studio	86	Surge suppression for digital and unipolar inputs and outputs	49
Onboard PLC parameters	87	Switching frequency	81, 82
Onboard PLC trips	87	T	
Open loop mode	13	Technical data	159
Open loop vector mode	13	Temperature	163
Operating mode (changing)	64, 71	Terminal block in the enclosure	48
Operating modes	13	Terminal cover removal	18
Optimization	75	Terminal sizes	30
Options	15	Thermal protection circuit for the braking resistor	42
Output contactor	40	Torque settings	30, 169
Output frequency	164	Trip	172
		Trip History	192
		Trip Indications	172

U

UL Listing Information	193
User Security	64

V

Ventilation	25
Vibration	164
Voltage mode	76, 77

W

Warnings	7
Weights	165



0478-0044-02